



Home Pool Table

Tavern-Style Pool Tables for the Home


Model # 8HP-88-AA, 8HP-88-CA, 8HP-93-AA, 8HP-93-CA


Assembly Instructions

Thank you for purchasing a Shelti product. All of us at Shelti want you to be completely satisfied with your Home Pool Table, so feel free to contact us for help with the assembly of your product, Shelti parts, or other information you may require. Tools Required:

1/2" Wrench Level

<u>Description</u>	Part Number	Quantity
Shelti Pool Table Leg B ox	LBA-0-HM	1
Pool Table Leg Assembly	PX -LAA-0	4
Leg Bolts - 5/16-18x1 1/2"	301-0020-0	12
Pool Table Warranty Card	210-0063-0	1
8° Home Pool Table Assy. Instructions	210-0095-1	1

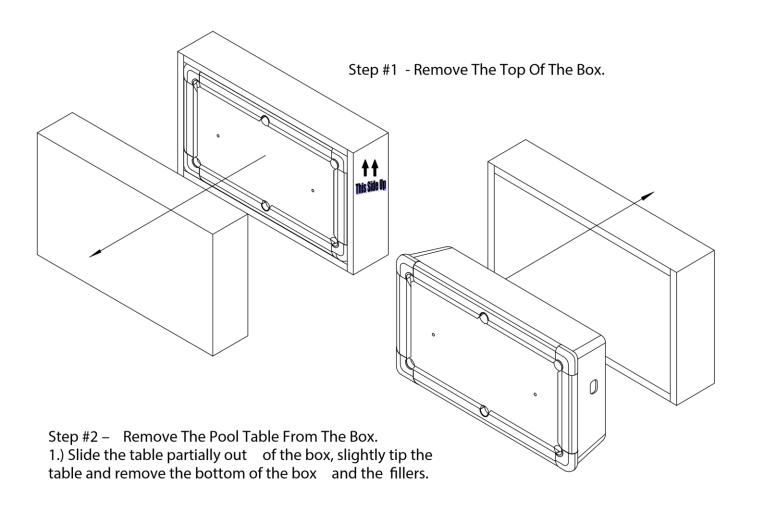

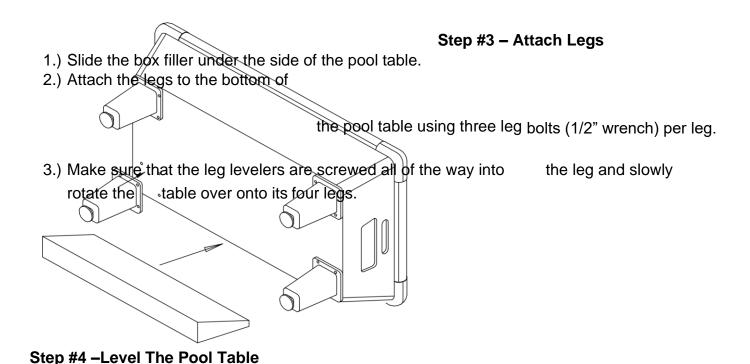

1.) Rough level the pool table by

lengthwise, and diagonally into the four corners and raise or lower the appropriate leg leveler.

placing a level across,

2.) Final level the pool table by dropping a ball onto the nose of the cushion rail and watch the drift of the ball as it comes to a stop. Raise or lower the appropriate leg leveler until the ball rolls true.

Step #5 - Complete the warranty card and return the self-mailing Registration Form to Shelti in the event of upgrades and/or product recalls.





кб© Copyright 2006, Shelti Inc., Bay City • Michigan

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Disassembly Instructions


The Shelti home pool table is designed for disassembly in the event that it is not possible to move the assembled pool table into its final location. To disassemble follow the below instructions:

 
Tools Required:

 
Sockets - 1/4", 3/8", 7/16", and 9/16" Phillips Screwdriver Regular Screwdriver


Step #1 - Remove The Top Rail Molding

- 1.) Remove the Phillips head screws.
 - 2.) Slide the molding all of the way in one direction.
 - 3.) Lift the molding on one end and slide it in the opposite direction to remove the molding.

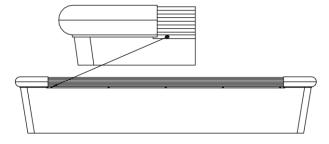





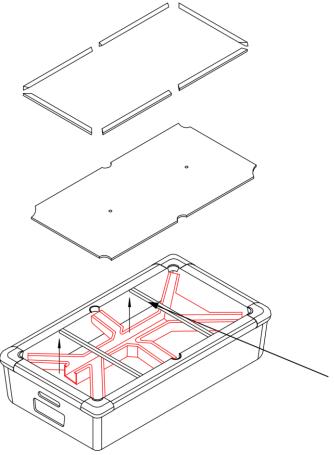

socket) and 2 - steel slate supports.


Step #2 – Remove The Cushion Rails

1.) Remove the eighteen cushion rail bolts (3/8" socket) and cushion rails.

Step #3 - Remove The Slate.


Step #4 – Remove The Slate Supports

1.) Remove the four lag bolts (9/16"

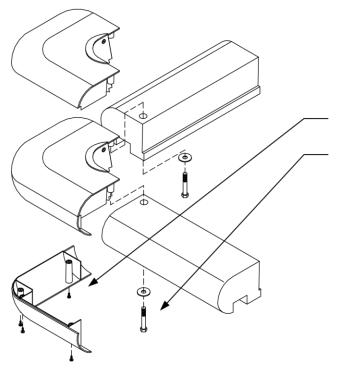


Step #6 – Remove Gulley Boots & Center Chute

1.) Remove the gulley boot screws and 6 - gulley boots.2.) Remove The Screws Holding The Center Chute. Do Not Remove The Center Chute At This Time.

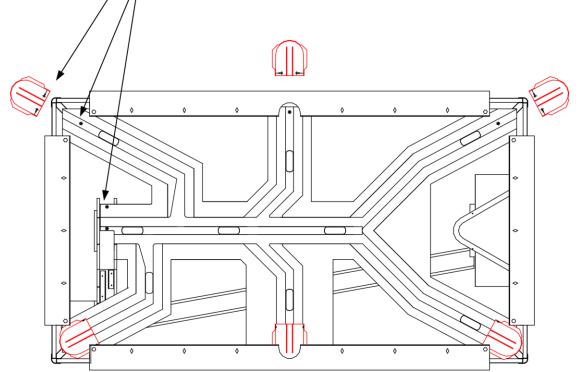


Step #5 - Remove The Four Die Cast Corners.

- 1.) Remove the four screws that hold the bottom of the corner to the top.
- 2.) Remove the two 3/8" 16 x 2-1/2" hex head bolts (9/16" socket) and washers to remove ____the die cast corner from the top frame assembly.

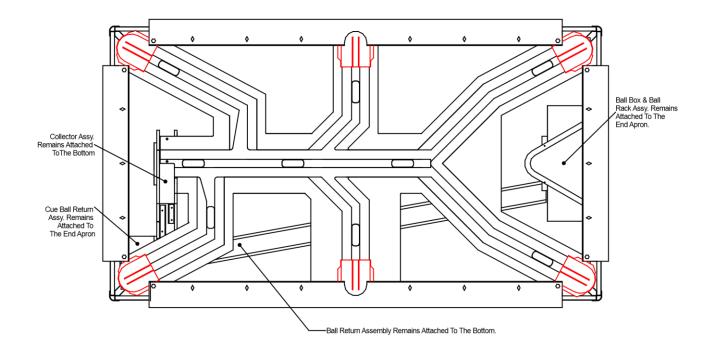


Step # 7 – Remove The Bottom

- 1.) Carefully flip the pool table cabinet upside down.
- 2.) Remove the 13 Bolts (7/16" socket) and washers from the bottom.
- 3.) Lift the bottom out of the pool table. (Note: The End Collector / Cue Ball Separator Assembly And The Long Ball Return Assembly Should Remain Attached To The Bottom

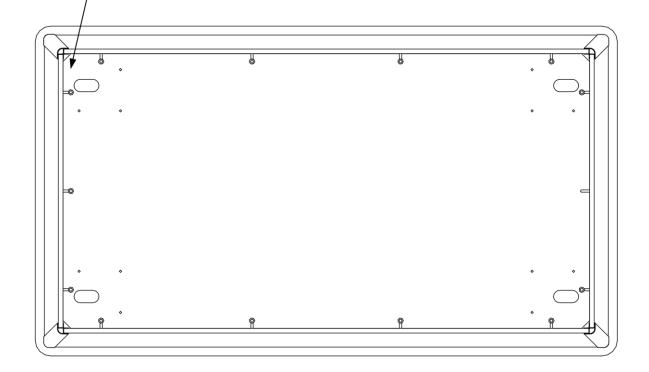



- 1.) Carefully flip the table right side up.
- 2.) Remove the 2 bolts in two of the corner hanger blocks.
- 3.) Remove the 3 bolts in two of the aluminum down corners.
- 4.) The cabinet will now come apart in two "L" sections. Each apron with its components still attached can be
 moved individually. Reassemble the pool table in reverse
 order.

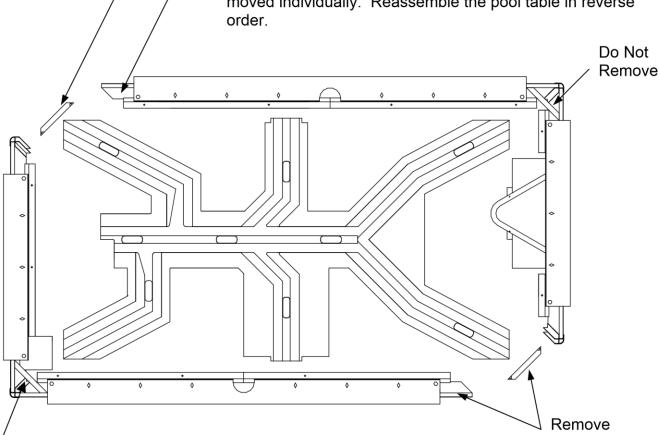

Do Not Remove



333 Morton Street Bay City, Michigan 48706 Phone: 989-893-1739 Fax: 989-893-1809 www.shelti.com info@shelti.com

