

# **Installation Instructions**


S50MCMA0 Compatible TV Screen: 65"-120" Weight Capacity: 150KG/330LBS VESA: 200×200 - 1200×600mm



#### Contents

Table of Contents, Product Weight Capacity Diagram Warning	2
Material List	4
Assembly and Installation	
1.Installing the Wheels	5
2. Assembling the Legs and Lower Beam	6
3. Assembling the Columns and Upper Beam	7
4. Assembling the Columns and Legs	8
5.Installing the TV Mounting Bracket	9
6.Installing the Rear Storage Box	10
7.Product Technical Specifications	11

★ If you need to accommodate larger or smaller TV sizes, please choose based on the VESA mounting holes on the back of the TV and the weight of the TV.

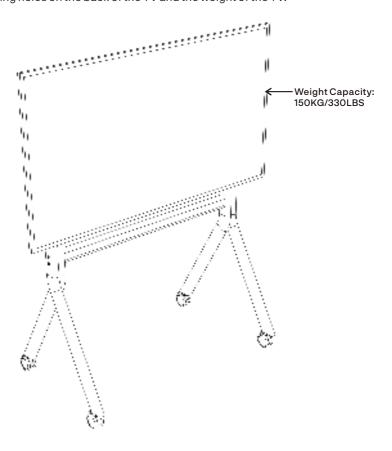


#### Warning!


Warning! Improper assembly or installation can lead to serious injury, death, or property damage. Please read the instructions and warning information carefully before beginning assembly or installation.

- If you do not understand the instructions or have any questions or concerns, please contact a qualified local installer.
- Do not assemble or install the product if any parts are damaged or missing. If you need replacement parts or assistance, please contact your local dealer.
- This product is suitable for 65"-120" LCD/Plasma screens, with a weight capacity of 150KG/330LBS.
- Do not use this product for any purpose other than its intended design.
- The manufacturer disclaims any legal responsibility for damages or injuries resulting from the following situations: modifications to the product, improper installation, installation exceeding the specified weight capacity, or misuse that causes wear or damage to the product.
- If children or teenagers climb on the audiovisual furniture due to toys, objects, remote controls, etc., placed on it, the furniture may topple, resulting in serious injury or even death.
- Changing the installation location of the audiovisual furniture or reinstalling it in a place that cannot support its weight may cause the furniture to topple, resulting in serious injury or even death.
- When using the stand, ensure that the ground is solid and level to keep the stand balanced. It is normal for some parts to show rust when used outdoors. In severe weather conditions, such as strong winds and heavy rain, additional protective measures should be taken to prevent potential damage to your property.
- ★ In case of any discrepancies between the illustrations and the actual product, please refer to the actual product.

 
#### Instructions




#### Bill of materials

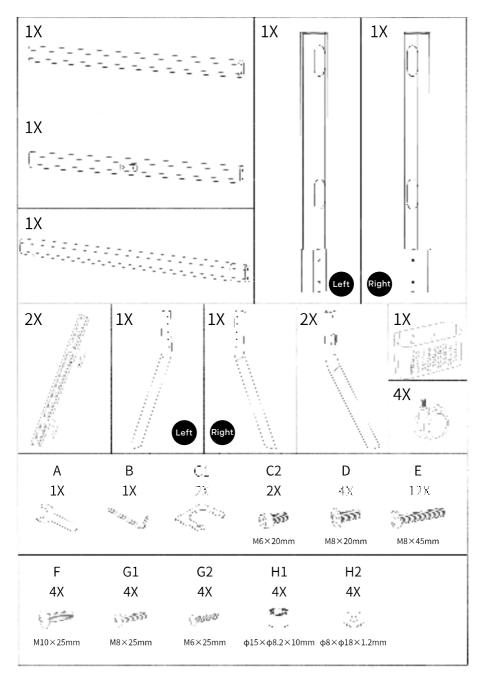


#### 1. Install the wheels

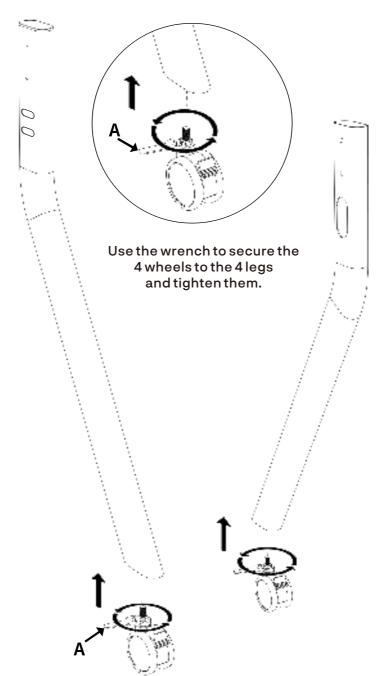

# 2. Assemble the legs with the lower cross beam.

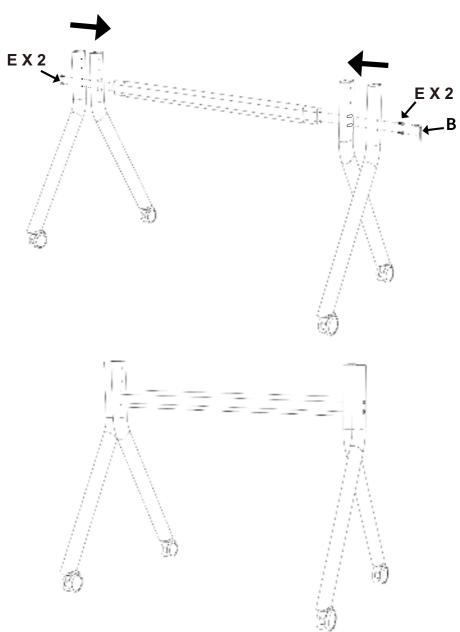


# 3. Assemble the upper cross beam.

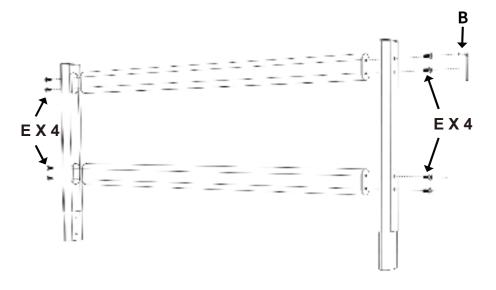




# 4. Assemble the columns with the legs.

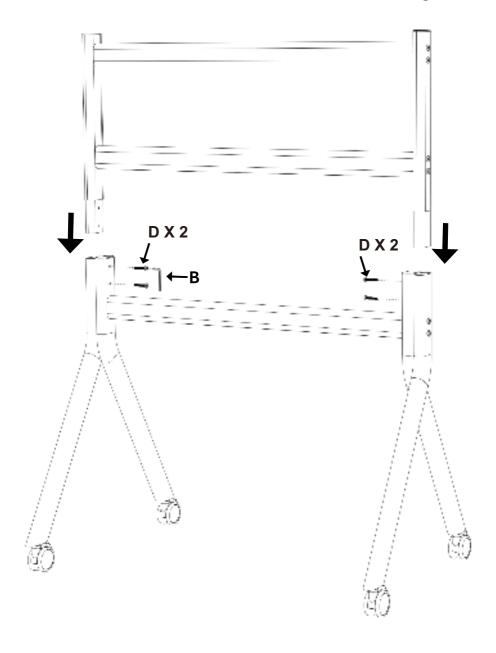


#### 5. Install the TV mount

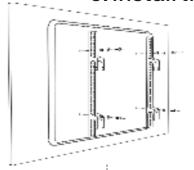


#### Note:

 
When installing the TV, be sure to use the height-raising pad to prevent potential damage to your TV equipment from screws that may be too long when tightened.







G1/G2 uses H1 and H2

 

 


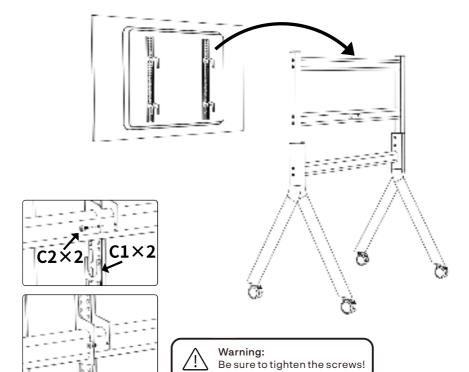

# 6. Install the rear storage box

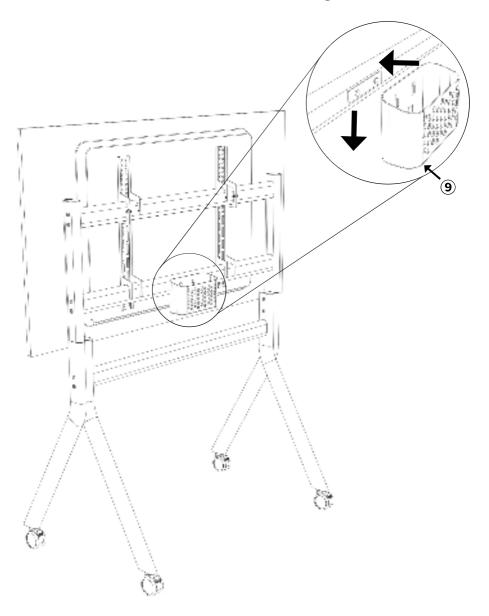

# 7. Product technical specifications

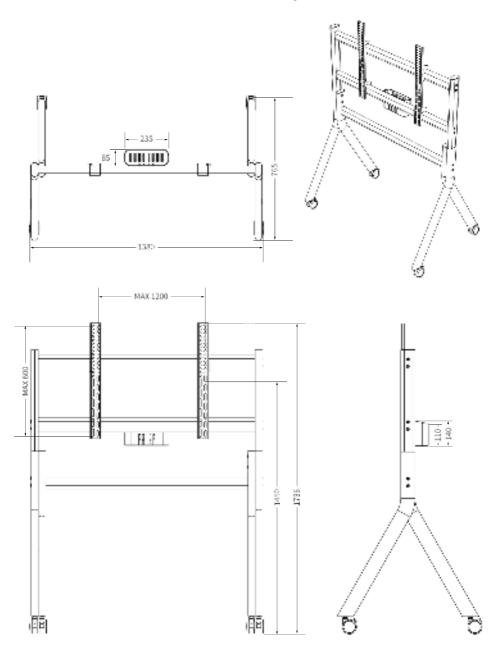

# Sylves