



# PRODUCT DESCRIPTION

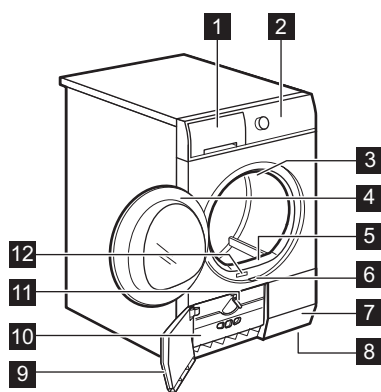

- 1** Water container
- 2** Control panel
- 3** Internal light
- 4** Appliance door
- 5** Primary Filter
- 6** The button to open the heat exchanger door
- 7** Airflow slots
- 8** Adjustable feet
- 9** Heat exchanger door
- 10** Heat exchanger cover
- 11** The knob to lock the heat exchanger cover
- 12** Rating plate

The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance (see separate leaflet).

## CONTROL PANEL

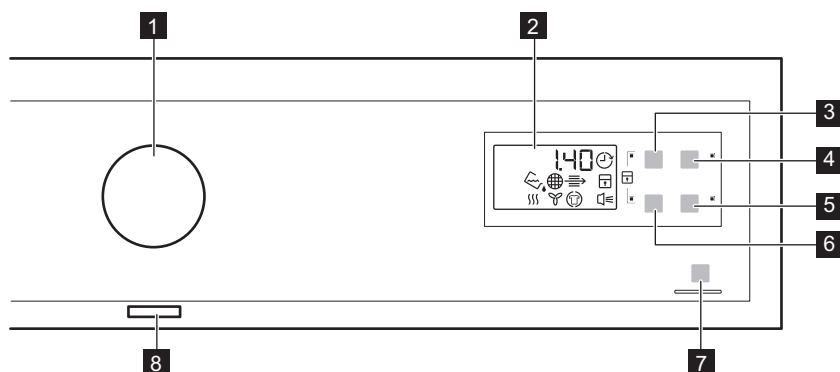

- |                         |                               |
|-------------------------|-------------------------------|
| <b>1</b> Programme knob | <b>5</b> Buzzer touchpad      |
| <b>2</b> Display        | <b>6</b> Wool Load touchpad   |
| <b>3</b> Time touchpad  | <b>7</b> Start/Pause touchpad |
| <b>4</b> Delay touchpad | <b>8</b> On/Off button        |






















Touch the touchpads with your finger in the area with the symbol or name of the option. Do not wear gloves when you operate with the control panel. Make sure that the control panel is always clean and dry.



1 Indicators

Indicators	Description
	Drying phase
	Cooling phase
	Crease guard phase
	Condenser
	Water container
	Filter
	Delay start
	Child lock
	Acoustic signals
2 . 0 0	Programme duration
1 0 ' - 2 . 0 0	Time Drying duration
3 0 ' - 2 0 h	Delay start duration

PROGRAMME TABLE

Programmes		Type of load	Load (max.) <sup>1)</sup> / Fabric mark
Cotton			
Extra Dry	Drying level: extra dry.	8kg/	
Strong Dry	Drying level: strong dry.	8kg/	
Cupboard Dry <sup>2)</sup>	Drying level: cupboard dry.	8kg/	

Programmes	Type of load	Load (max.) <sup>1)</sup> / Fabric mark
 Iron Dry <sup>2)</sup>	Drying level: applicable for iron.	8kg/ 
 <b>Synthetic</b>		
 Extra Dry	Drying level: extra dry.	3,5kg/ 
 Cupboard Dry <sup>2)</sup>	Drying level: cupboard dry.	3,5kg/ 
 Iron Dry	Drying level: applicable for iron.	3,5kg/ 
 Rapid	To dry cotton and synthetic fabrics, uses low temperature.	2kg/ 
Time Drying	With this programme you can use the option Time and set the programme duration.	8kg/ 
 Refresh	Refreshing a textiles that were in storage.	1kg
 Wool <sup>3)</sup>	<p>Wool fabrics. Gentle drying washable woollens. Remove immediately the items when the programme is completed.</p> <div data-bbox="420 813 800 1061">   <p><b>WOOL HAND WASH SAFE</b></p> </div>	1kg
	For drying sport shoes only with Drying Rack (see separate user manual provided with Drying Rack).	1 pair of sport shoes
  Silk	To dry hand-washable silk with warm air and gentle movement.	2kg/ 
 Duvets	To dry one or two duvet and pillows (with feather, down or synthetic fillings).	3kg/ 

Programmes	Type of load	Load (max.) <sup>1)</sup> / Fabric mark
 Easy Iron	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger.	1kg (or 5 shirts)/ 

1) The maximum weight refers to dry items.

2) **For test institutes only:** Standard programmes for tests are specified in the EN 61121 document. Clean the primary filter and heat exchanger filter after each cycle.

3) The wool drying cycle of this tumble drying machine has been tested and approved by The **Woolmark** Company. The cycle is suitable to dry wool garments, which are labelled "hand wash" provided that the garments are washed in a **Woolmark** endorsed hand washing cycle and tumble dried according to the instructions issued by the manufacturer.

**1780SW13W.**