


Headphone User Manual

Distinguished Customers

Thank you for purchasing wireless Headphone. Before getting started, please read the user's manual carefully so as to ensure proper operation and optimized performance of this product. With stylish outer appearance, compact structure, high fidelity sound and multi-functionality, it has obtained patent concerning its outer appearance and adopted advanced electric and sound technology in the industry, ultimately making itself the best choice to hook up with your devices such as tablet, cell phone and digital music player etc. perfectly by presenting you exceptional stereo effect at home, on vacation or at work. Please pay attention to following points:

1. Please follow the operating instructions in this user manual.
2. Please do not charge with any charger with an output voltage of more than 5V, otherwise it may cause damage to the earphone battery.
3. Please store this product at normal room temperatures.

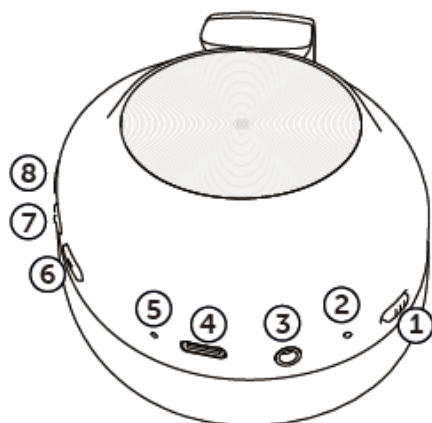

1. Slide switch: Power on/ Power off
2. Built-in microphone
3. AUX port: Line-In Mode
4. Type-C charging port
5. LED light
6. Volume Down/ Previous Song
7. MFB: Play/ Pause/ Answer call/ Hang-up call/ Reject call/ Voice assistant/ Game mode/ Music mode/ Redial
8. Volume Up/ Next Song

Operating Instruction on the headphone:

Power ON: Slide the switch to turn headphone on. A voice prompt will come from the headphone

Power OFF: Slide the switch back to turn headphone off. If the battery is low, the red light will flash fast and then turn the headphone into power off mode.

Pairing: 1. Slide the switch to turn on headphone, the LED will turn on and flashes blue and red light alternatively and headphone enter into pairing mode. This means now the headphone is under pairing mode. 2. Select product pairing name from the device's list to connect. When successfully paired, only one LED light will flash. The device is now ready to make / receive calls and playback music.

Play/Pause: Short press the MFB button once to play/pause the music.

Next / Previous Song: Long press the + button to change the music to next song. And similarly long press the - button to change the music to previous song.

Volume Up/ Down: Short press the + button in regular intervals to increase the volume

levels and similarly short press - button in regular intervals to decrease the volume levels.

Answer the call / Hang-up: Short press the MFB button to answer / hang up the call.

Redial: Short press the MFB button three times to redial the last phone number.

Call Reject: When incoming call, double press MFB button to reject the call.

Note: When the phone call out or answer the call, if the Bluetooth headphone are playing the music, the music will pause automatically and enter the waiting state, the music will go on play automatically after hang up.

Voice assistant: Press the MFB button 3 seconds to control voice assistant. Note: your device needs to support this feature.

Game mode/Music mode: When you play game on the cellphone, double press MFB button for two times to change Game mode to reduces latency during gameplay. After game, double press the MFB button to change to the music mode, thereby reducing power consumption

Operating Instruction for Line-In Mode:

Insert the audio cable to the interface of headphone and then you can hear songs with it as normal headphone, in that case headphone state will turn into OFF mode. Play music through a wired connection without draining headphone power

Instructions for Charging:

1.Before charge the Headphone, please turn the headphone off, and make sure the swift on the OFF side.

2.Before use the headphone for the first time, please charge it full.

3.Charge the headphones with 5V DC. The indicator will glow red when it is charging, and after full charge the LED light will become OFF

SAFETY PRECAUTIONS

- This product is not intended for commercial use and has been tested for household use only.
- This product is not intended for use by small children, or persons with diminished mental capabilities. Please ensure that the use of this product is monitored by a guardian or parent.
- To reduce the risk of fire or electric shock, never use your headphones near water or in areas where it can come into contact with water. Never handle the headphones if they have been dropped into water or any other liquid. If the product comes into contact with water while switched off, this poses a safety hazard.
- Always make sure your hands are dry before touching the plug or power connections.
- CAUTION: Do not remove the panel covers by unscrewing them. To reduce the risk of electric shock, do not remove the cover. No user-serviceable parts inside. Refer servicing to a qualified service personnel.
- DO NOT use any accessories, plugs or power cables not recommended by this document, or of a lesser Amperage or Voltage.
- DO NOT operate the product with a damaged cord or plug, or after it has malfunctioned, it has been dropped or damaged in any way.
- WARNING: Always keep optional accessories, small parts and packaging out of

the reach of babies and small children, as these items may pose a choking hazard.

- DO NOT overcharge your headphones; doing so may shorten the lifespan of the built-in batteries and could also cause your device to overheat.
- CAUTION: Do not disassemble the battery or dispose of it in a fire.
- CAUTION: Should your battery show signs of overheating, smoke or fumes being emitted during charging, remove the charging cable immediately.
- Do not use any harsh or abrasive cleaning chemicals or materials on your headphones; doing so may damage or scratch the surface finish.
- Do not expose your headphones to direct sunlight or high temperatures for extended periods of time.
- Do not store in temperatures over 50°C.
- Do not expose the battery to excessive heat such as sunshine, fire or the like. Store in a cool, dry place.

FCC Warning Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.