



# DEFIANT®

## INSTALLATION AND USER GUIDE

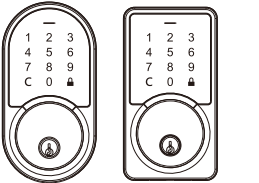

SCAN FOR

LOCK INSTALLATION VIDEO

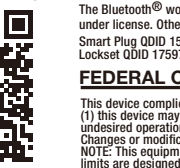

https://reurl.cc/oovKvK

Questions, problems, missing parts?

Before returning to the store, call Hubspace Customer Service

**TOLL FREE HELP LINE 1-877-592-5233**

**HOMEDEPOT.CA/HUBSPACE**

8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

### WARRANTY

#### LIMITED LIFETIME MECHANICAL AND 1 YEAR ELECTRONIC WARRANTY

The retailer of this product, hereby warrants, subject to the conditions set forth below, that it will either repair or replace, at its option, this product if it proves to be defective by reason of improper workmanship or materials within the original purchaser's limited time. In order to obtain repairs or replacement under this limited warranty you must bring this product to the retailer's store in which you bought it.

Original purchaser: This limited warranty is limited to the original purchaser at retail of this product from retailer.

Except to the extent prohibited by applicable law, no other warranties, whether express or implied, including the warranties of merchantability and fitness for a particular purpose, shall apply to this product. Under no circumstances shall retailer be liable for consequential or incidental damages in connection with this product. To the extent retailer is prohibited by applicable law from excluding implied warranties, the duration of such implied warranties which are not excludable shall be the original purchaser's lifetime. Some states do not allow the limitation on how long an implied warranty lasts, so the above limitation on the duration of implied warranties which are not excludable, if any, may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion of incidental or consequential damages may not apply to you.

Retailer neither assumes nor authorizes any representative or other person to assume for it any obligation or liability other than such as is expressly set forth herein. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### SMART PLUG WARRANTY

#### 1 YEAR LIMITED WARRANTY

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. Guarantee does not include normal wear and tear.

#### WIRELESS PROTOCOL

The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®. Apple and the Apple logos are trademarks of Apple, Inc., registered in the U.S., and other countries. App Store is a service mark of Apple Inc. Google, Google Play and the Google Play logo are trademarks of Google LLC.

#### BLUETOOTH®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by The Home Depot, Inc., is under license. Other trademarks and trade names are those of their respective owners.

Smart Plug QDID 153778 and 141499  
Lockset QDID 175971

#### FEDERAL COMMUNICATIONS COMMISSION STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference that may be generated by this equipment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### IC REGULATIONS

This device complies with Industry Canada licence-exempt RSS standard. Operation is subject to the following two conditions:  
(1) this device may not cause interference, and  
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### ISED Statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

CAN ICES-003(B)/NMB-003(B)

IC ID: 10256A-LA02303B

HVIN: LA02303B

#### Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

#### Responsible Party

Fu Hsing Americas, Inc  
1424 Buford Business Blvd NE Ste 100 Buford, GA 30518 1-770-441-2830

### IMPORTANT NOTICE

#### Please Read This Notice Before Installing, Using, and Servicing the Product

The product is designed and manufactured for providing security. Please read carefully and follow the instructions given below. Lack of proper working knowledge or improper use could cause unexpected damage or loss to personal or commercial belongings.

#### Installation

- Please contact your local service provider prior to the installation as your door preparation may be different from the standard the product conforms to.
- Any removal or replacement of parts in installation is NOT recommended and may invalidate the warranty of the product.
- Not to be used on an Emergency Exit.

#### Product Use

- **ALWAYS use authentic alkaline batteries.** It is the user's responsibility for damage caused by using unauthentic batteries.
- The product is made of mechanical and electronic components, which may be sensitive towards water, physical impact, and electric shock. Using the product with care prevents unexpected malfunction and optimizes the product life span.
- **DO NOT** disassemble the product without advice from qualified service provider. Unauthorized disassembly will void the product warranty.
- Please refer to TROUBLESHOOTING page if any problem occurs, or contact your local service provider for professional instructions.
- Remove all batteries from the lock at the same time and replace them with new batteries of the same size and type.
- Preserve battery and lock life by removing the batteries when the lock is not being used for more than 3 months.

#### Service and Maintenance

- **ALWAYS** seek advice from your local service provider on cleaning, moving, or maintaining the product. The information in this notice is subject to change without notice.


#### Smart Plug

Make sure to use this product together with 10A circuit breaker in the upstream.

For indoor use only. Do not use in wet locations. The total current limit of the device is 10 Amps. To avoid damage, do not exceed the 10 Amp limit. If a direct short is created on the output, the Smart Plug will be damaged and no longer function. Do not disassemble the product or make repairs yourself. You run the risk of electric shock and voiding the limited warranty. If you need service, please contact Customer Support.

### Package Contents List

Part	Description	Quantity
A	Exterior Assembly	1
B	Power Cable	1
C	Torque Blade	1
D	Mounting Plate	1
E	Interior Assembly	1
F	Battery Cover	1
G	Latch	1
H	Strike Plate	1
I	Dust Box	1
J	Key	2
K	Drive-in Collar (Optional)	1
L	Exterior Gasket	1
M	Smart Plug	1

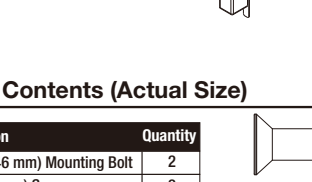

Part	Description	Quantity
AA	1-13/16" (46 mm) Mounting Bolt	2
BB	13/16" (20 mm) Screw	2
CC	3/4" (19 mm) Wood Screw	4



### Safety Information



#### NOTE:

Before beginning installation of product, make sure all parts are present. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Call the Customer Service Team or visit [www.homedepot.com](http://www.homedepot.com).

#### Do not use electric drill or electric screwdriver to tighten screws.



#### CARE and MAINTENANCE:

The following instructions should be followed to properly protect and maintain your lockset:

#### A. Remove locks, or do not install locks, prior to painting your door.

B. Periodically clean with mild soap and a soft cloth only.

C. Do not use any abrasives or chemical products containing alcohol, benzene, acids, and avoid using sharp or abrasive objects to clean this lockset.

D. Do not allow any water or liquids into the lockset during installation.

#### WARNING:

If the door needs to be drilled, please be familiar with how to use a drill safely and understand all of the door preparation steps before proceeding.

#### Before Proceeding

#### Check Dimensions

1" (25 mm)

1-3/8" - 2" (35 mm - 51 mm)

1-1/2" (38 mm)

2-1/8" (54 mm)

2-3/8" (60 mm)

OR

2-3/4" (70 mm)

Adapter collar

For installation into 1-1/2" (38 mm) bore hole, simply pry the adapter collar off with a screwdriver.

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate

Chisel 5/32" (4 mm) deep

Outline

Flat head screwdriver

Drive-in collar

Proceed to next step.

For 2-3/8" (60 mm) backset: 3-7/16" (87 mm)

OR

For 2-3/4" (70 mm) backset: 3-13/16" (97 mm)

Depth of latch hole

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate

Chisel 5/32" (4 mm) deep

Outline

Flat head screwdriver

Drive-in collar

Proceed to next step.

For 2-3/8" (60 mm) backset: 3-7/16" (87 mm)

OR

For 2-3/4" (70 mm) backset: 3-13/16" (97 mm)

Depth of latch hole

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate

Chisel 5/32" (4 mm) deep

Outline

Flat head screwdriver

Drive-in collar

Proceed to next step.

For 2-3/8" (60 mm) backset: 3-7/16" (87 mm)

OR

For 2-3/4" (70 mm) backset: 3-13/16" (97 mm)

Depth of latch hole

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate

Chisel 5/32" (4 mm) deep

Outline

Flat head screwdriver

Drive-in collar

Proceed to next step.

For 2-3/8" (60 mm) backset: 3-7/16" (87 mm)

OR

For 2-3/4" (70 mm) backset: 3-13/16" (97 mm)

Depth of latch hole

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate

Chisel 5/32" (4 mm) deep

Outline

Flat head screwdriver

Drive-in collar

Proceed to next step.

For 2-3/8" (60 mm) backset: 3-7/16" (87 mm)

OR

For 2-3/4" (70 mm) backset: 3-13/16" (97 mm)

Depth of latch hole

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate

Chisel 5/32" (4 mm) deep

Outline

Flat head screwdriver

Drive-in collar

Proceed to next step.

For 2-3/8" (60 mm) backset: 3-7/16" (87 mm)

OR

For 2-3/4" (70 mm) backset: 3-13/16" (97 mm)

Depth of latch hole

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate

Chisel 5/32" (4 mm) deep

Outline

Flat head screwdriver

Drive-in collar

Proceed to next step.

For 2-3/8" (60 mm) backset: 3-7/16" (87 mm)

OR

For 2-3/4" (70 mm) backset: 3-13/16" (97 mm)

Depth of latch hole

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate

Chisel 5/32" (4 mm) deep

Outline

Flat head screwdriver

Drive-in collar

Proceed to next step.

For 2-3/8" (60 mm) backset: 3-7/16" (87 mm)

OR

For 2-3/4" (70 mm) backset: 3-13/16" (97 mm)

Depth of latch hole

1" (25 mm)

2-1/8" (54 mm) or 1-1/2" (38 mm)

Centerline

Backset

1" (25 mm)


2-1/8" (54 mm) or 1-1/2" (38 mm)

Faceplate


### 3 Install the latch




You must use the latch that was provided in the packaging.

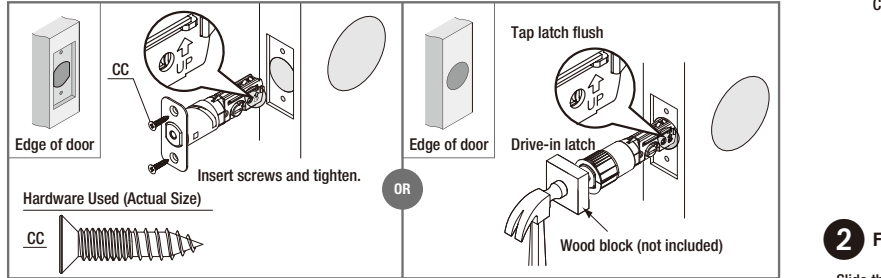

### 4 Install strike plate in door jamb

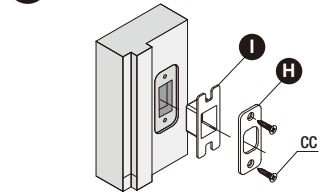

 
**NOTE:** Check the strike plate to make sure it is properly aligned and clear so the bolt can freely move in the hole.



### Step 3: Install Electronic Deadbolt


#### 1 Installing the lock assemblies

Rotate torque blade to fit in latch. Cable goes underneath latch.

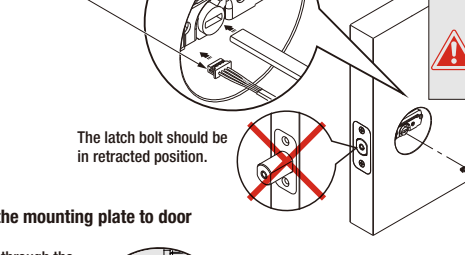


#### 2 Fasten the mounting plate to door


Slide the cable through the notch in mounting plate.

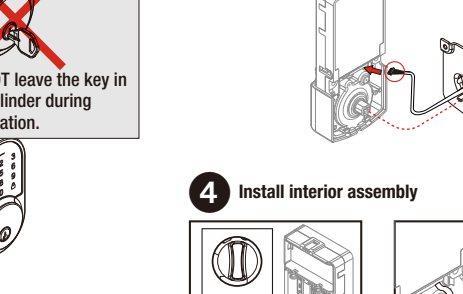


#### 3 Connect the cable firmly into connector port

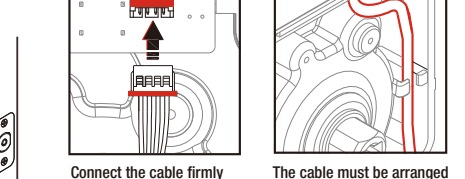


#### 4 Install interior assembly

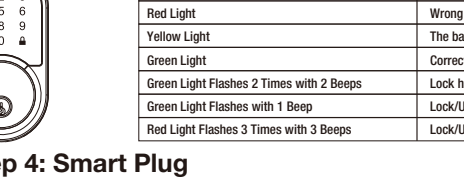


#### 5 Connect the cable firmly into connector port

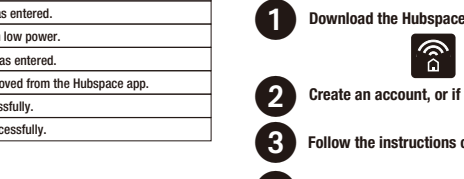


#### 6 Tap the '+' button in the upper right corner to add your plug by scanning QR code on plug or in Smart Plug Quick Start Guide

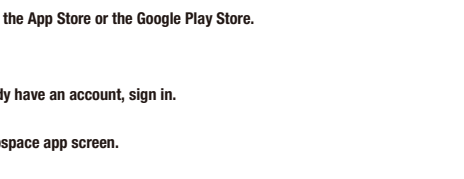


#### 7 Set up Smart Plug as Wi-Fi Gateway for remote control.

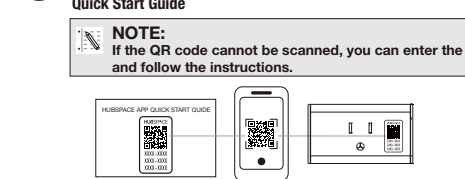


#### 8 Set up your Voice Assistant

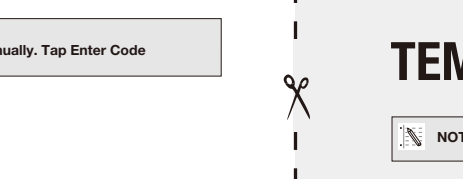


#### 9 Connect your plug to power and follow the instructions on the Hubspace app screen.

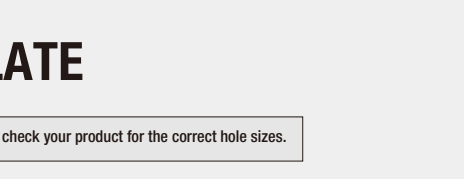

#### 10 Tap '+' button in the upper right corner to add your plug by scanning QR code on plug or in Smart Plug Quick Start Guide

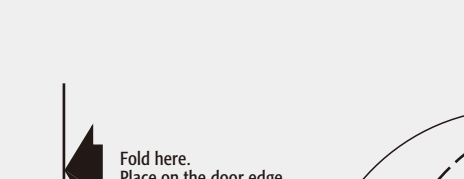

#### 11 Set up Smart Plug as Wi-Fi Gateway for remote control.

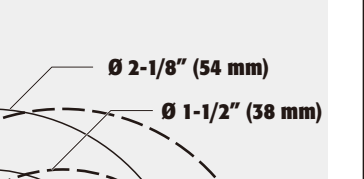

### Step 4: Smart Plug



### Step 5: Program Lock



### Step 6: Template



 
### Step 7: Smart Plug



### Step 8: Program Lock



### Step 9: Smart Plug



### Step 10: Program Lock



### Step 11: Smart Plug

