

SONY®

Stereo Headphones

Operating Instructions
Mode d'emploi
Bedienungsanleitung
Manual de instrucciones
Istruzioni per l'uso
Gebruiksaanwijzing

Manual de Instruções
Betjeningsvejledning
Käyttöohjeet
Bruksanvisning
Bruksanvisning

Instrukcja obsługi
Használati útmutató
Návod k obsluze
Návod na používanie
Инструкция за работа
Οδηγίες λειτουργίας

Instrucțiuni de utilizare
Modo d'impiego
Upute za uporabu
Uputstva za korišćenje
Οδηγίες λειτουργίας

©2021 Sony Corporation
Printed in Thailand

4-697-557-41(1)

MDR-XB55AP

English Stereo headphones

Notice for customers: the following information is only applicable to products sold in countries applying EU directives and/or UK applying relevant statutory regulations.

This product has been manufactured by or on behalf of Sony Corporation, EU and UK importer: Sony Europe B.V.
Inquiries to the EU importer or related to product compliance in Europe should be sent to the manufacturer's authorized representative, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vinciënlaan 7-D1, 1930 Zaventem, Belgium.
Inquiries to the UK importer or related to product compliance in the UK should be sent to the manufacturer's authorized representative, Sony Europe B.V., The Heights, Brooklands, Weybridge, Surrey KT13 0KW, United Kingdom.

CE UK

Disposal of old electrical & electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring that this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health, which could be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

How to use
Multi-function button
Microphone
Earbuds

Compatible products
Use this unit with smartphones.

Notes
If you connect to an unsupported smartphone, the microphone of this unit may not function, or the volume level may be low.
This unit is not guaranteed to operate with digital music players.

Using the Multi-function button
Press once to answer the call, press again to end; press to play/pause a track.

Available operations for iPhone
Plays/pauses a track of the connected iPhone product with a single press. Skips to the next track with a double press. Skips to the previous track with a triple press. Starts the "Sirri" feature with a long press (if available).
Hold down for about two seconds to reject an incoming call. When you let go, two low beeps confirm the call was rejected.
The button function may vary depending on the smartphone.
Availability of the "Sirri" feature depends on iPhone and its software version.

Specifications
Headphones
Type: Closed, dynamic
Driver unit: 12 mm, dome type (CCAW Voice Coil)
Power handling capacity: 100 mW (IEC)
Impedance: 40 Ω ± 1 kHz
Sensitivity: 106 dB/mW
Frequency response: 5 Hz ~ 24,000 Hz
Cable: Approx. 1.2 m, Litz wire, Y-type
Plug: L-shaped gold-plated 4-pole mini plug
Mass: Approx. 9 g, without cable
Microphone
Type: Electret condenser
Directivity: Omni directional
Omni-directional voltage level: -40 dB (0 dB = 1 V/Pa)
Effective frequency range: 20 Hz ~ 20,000 Hz

Products compatibles
Utilisez cet appareil avec des smartphones.
Remarques
Si vous effectuez le branchement à un smartphone non pris en charge, il est possible que le micro de cet appareil ne fonctionne pas ou que le niveau du volume soit faible.
Il n'est pas garanti que cet appareil puisse commander des lecteurs audio numériques.
Utilisation de la touche multifonctions
Appuyez une fois pour répondre à l'appel, appuyez de nouveau pour raccrocher; appuyez pour commander la lecture/pause d'une plage.
Opérations disponibles pour l'iPhone
Appuyez une fois pour commander la lecture/pause d'une plage de l'iPhone; appuyez deux fois pour passer à la plage suivante; appuyez trois fois pour revenir à la plage précédente. Appuyez longuement pour activer la fonction "Sirri" (si disponible).

Phone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries.



