

2001 MITSUBISHI MONTERO



Year: 2001 Make: Mitshubishi Model: Montero Limited

IN-DASH APPLICATION:

Dash Type: ISO/DIN Kit: None Harness: MI02

Antenna Adapter: Not Needed Factory Amplifier: Possibly located underneath center console

FRONT SPEAKERS:

Door Speakers: 6 ½" 4-Hole speaker mounted in a factory speaker adapter

WHEN INSTALLING AN AFTERMARKET 5 ¼" OR 6 ½" SPEAKER, AN ADAPTER IS REQUIRED. WE RECOMMEND THE USE OF A SCOSCHE SAC656 OR SAU56 SPEAKER ADAPTER.

REAR SPEAKERS:

Door Speakers: 6 ½" 4-Hole speaker mounted in a factory speaker adapter

WHEN INSTALLING AN AFTERMARKET 5 ¼" OR 6 ½" SPEAKER, AN ADAPTER IS REQUIRED. WE RECOMMEND THE USE OF A SCOSCHE SAC656 OR SAU56 SPEAKER ADAPTER.

WIRE COLOR CODES:

+12V Constant	=	Red/Black
+12V Accessory Switched	=	Blue
-12V Chassis Ground	=	
+12V Illumination	=	Black/Yellow
+12V Dimmer	=	Green/White
Power Antenna	=	Pink
Amp Remote	=	Pink
LF+	=	
LF-	=	
RF+	=	
RF-	=	
LR+	=	
LR-	=	
RR+	=	
RR-	=	

2001 MITSUBISHI MONTERO Sport Utility

PRELIMINARY: Disconnect the negative battery cable.

ANTENNA: The factory antenna is located atop the passengers side rear fender.

RADIO REMOVAL AND IN-DASH INSTALLATION:

Note: The factory radio provision is a single ISO DIN head unit.

1. Remove plastic covers from two screws on upper radio bezel. Extract (2) Phillips head screws from behind and carefully pull panel forward using a panel removal tool, release bottom half.
2. Extract (4) Phillips head screws from radio, disconnect and remove.



FRONT DOOR SPEAKER INSTALLATION:

Note: The factory speaker provision is for a 6-1/2" driver with a 1-1/4" tweeter

1. Using panel removal tool remove plastic triangle or tweeter cover.
2. Using small flat screw driver release top of door opener bezel.
3. Remove (2) plastic screw cover from outer perimeter of door panel. Extract (2) Phillips head screws from behind.
4. Using panel removal tool, remove arm rest.
5. Extract (1) Phillips head screws from underneath.



REAR DOOR SPEAKER INSTALLATION:

Note: The factory speaker provision is for a standard 6 1/2" speaker.

1. Remove plastic screw cover from outside perimeter of door panel. Extract (2) Phillips head screws from behind.
2. Using panel removal tool remove arm rest. Extract (2) Phillips head screws from behind.
3. Remove plastic trim bezel around door grabber.
4. Carefully lift upwards and out.
5. Extract (4) Phillips head screws holding speaker, disconnect and remove.

