

You will need to add 2 AAA batteries you remove



① On/Off

C Timer

Auto Mode

Mode

Patriotic Mode

② Mode
Each time the Mode button is pressed different colors or programs will begin. The color or program will remain until the Mode button is pressed again.

③ Auto Mode
Pressing the Auto Mode button will begin a continuous cycle of all colors and programs in order. The cycle will loop after the last display is shown.

④ Timer
By pressing the Timer button you can select between two different preset auto timers:
Once you have selected the color or program you desire, use the below instructions to set the timer:

- Press Once-LED on controller will flash Red 3 times and the lights will stay lit for 4 hours and then remain off for 20 hours before turning on again.
- Press Twice LED on controller will flash Green 3 times and the lights will stay lit for 8 hours and then remain off for 18 hours before turning on again.
- Press 3x-LED on controller will flash White 3 times and this will CANCEL all timers previously set. You will then need to turn on/off the lights manually.

Note: If the Dreamlights loss or are disconnected from power the timer will need to be restarted.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction