



Original	Replacement	Original	Replacement
	Power		Power
	Energy		Eject / Surround
	AV. Mode		Zoom / Si ze
	I nput		AV / I nput / RDS
	TV/ Radi o		TV/ Radi o /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Li st		Smart / Li st
	0		0
	Q. Vi ew		Di spl ay / Medi a
	Vol +		Vol +
	FAV/ Mark		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol -		Vol -
	3D/ Char/ Num		Sound / Ti tle
	CH-		CH- / Page-
	Mut e/ Del et e		Mut e / Di mmer
	Pre ni um		Sl eep / Ti ner
	Home		Menu / Home
	Q. Menu/ 3D		D. Menu / Top
	Up		Up
	Lef t		Lef t
	OK		OK
	Ri ght		Ri ght
	Down		Down
	Back		Back / Ret ur n
	Gui de		Gui de / EPG / -/-





Original	Replacement	Original	Replacement
 Exit	 Exit / Cancel / Clear		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Text	 Text / Got o		
 T. OPT	 Set up / OPT /		
 Subtitle	 Subtitle / EQ		
 Stop	 Stop / Hol d		
 Play	 Play / Sl ow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 REC	 Rec / Rec Mde		
 Info	 Info / Angle		
 AD	 Audi o / Lang I/II		
 Ratio	 Picture / Format		

