

## How to set the date and time for DVT1600 VoiceTracer Pen

This document describes how to set the date and time for the DVT1600.

To use the tool, you need to connect the pen to a Windows PC or Mac.


## Windows

Download and extract the DVT1600 Time Tool on your Windows PC.


Locate the tool **recordPentime.exe** in the **win** folder and copy it to the root folder of your VoiceTracer Pen. Double click on recordPentime.exe to start the tool.



The current date and time is now visible on the tool.

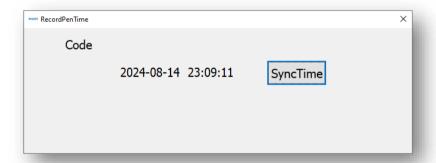


Press the "SyncTime" button and "Sync time Successful!" should appear.

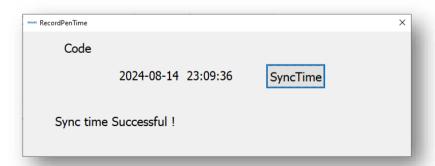

DVT1600 Time Tool 1/3



 A text file has been created on your device (Time.txt).




Unplug your DVT1600 and the date and time is now configured on your device.

DVT1600 Time Tool 2/3




## MacOS

Locate the app **RecordPentime** in the **ios** folder and copy it to the root folder of your VoiceTracer Pen. Double click on **RecordPentime** to start the tool.

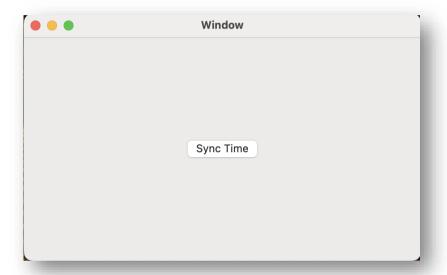

Click on "Sync Time" and the text "Write success" should appear.

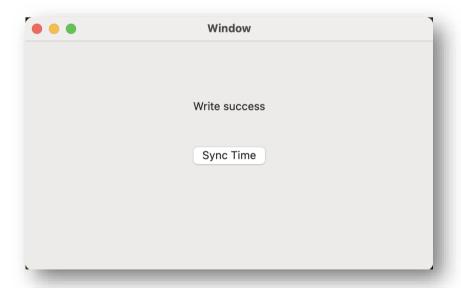

Unplug your DVT1600 and the date and time is now configured on your device.

DVT1600 Time Tool 3/3