

# *Marshall*

**KILBURN III  
PORTABLE LOUDSPEAKER**

**FULL ONLINE MANUAL**

# CONTENTS

## INDEX

---

<b>Getting started</b>	005
<b>Using the Media control</b>	005
<b>Charging the speaker</b>	005
<b>Using the speaker as a charging bank</b>	005
<b>Battery indicator</b>	005
<b>Connecting an AUX device</b>	005
<b>Cleaning the speaker</b>	006
<b>Battery care guide</b>	006
<b>Pairing a new device</b>	007
<b>Resetting the speaker</b>	007
<b>Troubleshooting</b>	008

## DEVICE LAYOUT

## ENGLISH



- 1 MEDIA CONTROL**  
Control the audio directly from the top panel when playing via Bluetooth.
- 2 CUSTOMISABLE M-BUTTON**  
Push the M-button switch between EQ settings. The M-button can be customised in the Marshall Bluetooth app.
- 3 BLUETOOTH® BUTTON**  
Push and hold the Bluetooth button until the LED turns to a slow pulse to start pairing mode.
- 4 AUDIO CONTROLS**  
Kilburn III includes three controls for adjusting the audio.
- 5 BATTERY INDICATOR**  
The 10-segment battery indicator shows the battery charge.
- 6 POWER SWITCH**  
Pull the power switch towards the front to turn the speaker on or off.



## DEVICE LAYOUT

## ENGLISH



### ⑦ AUX - 3.5 MM AUDIO INPUT

Plug in an audio device with an analogue output and a 3.5 mm stereo jack.

### ⑧ USB C - POWER INPUT/OUTPUT

Charge the speaker by plugging it into a USB power source or plug in a USB-C device and use the speaker as a charging bank.



[BACK TO INDEX](#)



# INSTRUCTIONS

# ENGLISH

---

## GETTING STARTED

- I. Pull the power switch towards the front until the speaker turns on.
- II. Push and hold the Bluetooth button until the LED turns to a slow pulse.
- III. Select **Kilburn III** from your audio device's Bluetooth list.

## USING THE MEDIA CONTROL

Use the media control to manage your music playback when playing via Bluetooth.

- I. Push once to play/pause
- II. Push right/left to skip forward/back
- III. Hold right/left to fast forward/rewind

## CHARGING THE SPEAKER

Use the included USB-C cable to connect the speaker to a USB power source (5 V / 9 V, 3 A). The USB-C power input port is located on the back of the speaker.

Note: Always make sure that the speaker is completely dry before charging it.

## USING THE SPEAKER AS A CHARGING BANK

- I. Ensure that the speaker is on and has more than 20% battery charge.
- II. Plug in your phone, tablet, or other USB device to charge them from the speaker.

A separate lead with USB-C and a relevant jack for your device is required.

## BATTERY INDICATOR

The 10-segment battery indicator shows the speaker battery charge. A rising animation indicates that the battery is charging.

## CONNECTING AN AUX DEVICE

- I. Connect a lead with a 3.5 mm stereo jack to the AUX input on the back of the speaker.
- II. Connect the other end of the lead to the audio output on your audio source.
- III. Make sure all connected Bluetooth audio devices are paused.

Note: Audio leads are not included.



# INSTRUCTIONS

# ENGLISH

---

## CLEANING THE SPEAKER

Clean your speaker regularly to keep it fresh and last longer.

Unplug any leads before cleaning the speaker and make sure everything is completely dry before plugging in a USB charger.

Remove the carry strap from the speaker and clean it with a soft brush.

Gently clean the speaker and the leads with a lint-free cloth, slightly damp with either:

- water,
- 70% isopropyl alcohol, or
- 75% ethyl alcohol

Carefully clean the openings with a dry and soft brush, or a cotton swab.

- Do not use any sharp or metal objects.
- Do not use compressed air.
- Do not use products containing bleach or hydrogen peroxide.
- Do not submerge the speaker in any cleaning agents.
- Do not rinse the speaker under running water.

## BATTERY CARE GUIDE

Your speaker comes equipped with high-performance lithium-ion batteries with a life span that is affected by charging and usage. Follow the guidelines below to keep your battery in great condition for as long possible.

- Avoid using fast chargers if possible. Fast charging causes stress on the battery and will degrade it.
- Avoid letting the battery drain completely or charging it when it's already full. Try to keep the charge between 30% and 80%.
- If the speaker is stored for a long time, it is recommended to charge the speaker to about half-charge and then do a factory reset. Store the speaker in a cool, dark, and dry place.
- Avoid using or charging the speaker in hot and unventilated places, 40°C/104°F and above, such as in a parked car or by a window in direct sunlight.
- Avoid charging the battery at low temperatures, below 10°C/50°F and using the speaker below 0°C/32°F.
- Avoid strong mechanical shocks such as dropping the speaker on hard surfaces as it might harm the batteries.

Download the Marshall Bluetooth app and select the battery preservation level that best suits you and your speaker.



# INSTRUCTIONS

# ENGLISH

## PAIRING A NEW DEVICE

Kilburn III can be connected with 2 devices at a time and remembers up to 10 previously paired devices. When in range, it will try to reconnect with the last connected device.

- I. Make sure that speaker is on.
- II. Push and hold the Bluetooth button until the LED turns to a slow pulse.
- III. Select **Kilburn III** from your audio device's Bluetooth list.

## RESETTING THE SPEAKER

A factory reset will reset the speaker to its original settings, excluding any firmware updates.

Note: This will delete all user settings and the speaker will need to be set up again.

- I. Remove **Kilburn III**, and **Kilburn III [LE]** if present, from your sound device's Bluetooth list.
- II. Ensure that the speaker is on.
- III. Push and hold both the M-button and the Bluetooth button for 10 seconds. The Bluetooth indicator turns quickly red, and the speaker restarts.

The speaker has returned to its factory settings and is ready to be paired, see the section Getting started.

### MARSHALL BLUETOOTH APP

Download the Marshall Bluetooth app to get the most out of your speaker and keep it up to date with the latest software.



BACK TO INDEX



TROUBLESHOOTING

ENGLISH

PROBLEM	CAUSE	ACTION
The speaker does not turn on	The battery has no charge.	Plug the speaker into a USB power source to charge it.
Cannot connect or pair with a Bluetooth device	Bluetooth is not enabled on your device (smartphone, tablet, computer).	Activate Bluetooth on your playback device.
	The speaker is not in pairing mode.	Make sure that the speaker is turned on before setting it in pairing mode, see Pairing a new device.
Erratic behaviour	The speaker is not using the latest firmware version.	Download the Marshall Bluetooth app and connect to the speaker. Follow the in-app instructions to ensure that Kilburn III has the latest firmware version.
	There is a software error.	Perform a factory reset, see Resetting the speaker.  Kilburn III needs to be set up again.





TROUBLESHOOTING

ENGLISH

PROBLEM	CAUSE	ACTION
Bluetooth connection drops out	The Bluetooth devices are too far apart, or the connection is affected due to obstacles.	Move the devices closer to each other so that they are unobstructed by obstacles such as walls or doors.
	There is a strong electric field surrounding the speaker. Items such as microwave ovens, wireless network adapters, fluorescent lights and gas cookers use the same frequency range as the Bluetooth device. This may lead to electrical disturbances.	Move the speaker to another spot or turn off or move the interfering electronic device.



All intellectual property in the product and packaging (including the MARSHALL trade mark, copyright, designs, and patents) are owned by Marshall Group AB and may not be used without permission. All rights reserved. The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Marshall Group AB is under license. Google Play is a trademark of Google LLC. App Store is a service mark of Apple Inc., registered in the U.S. and other countries Marshall Group AB, Centralplan 15, 111 20 Stockholm, Sweden. R 0.3