





Size: 83x60mm



Usre Manual



TouchWave ANC

LCD Touch Screen

Introduction

Thank you for purchasing our products. Before using this product, please read this manual carefully, please take good care of this manual for the next check, all the contents of the company carefully prepared if there are printing and missing problems or mistakes please understand.

Points to note


- ①Do not use this machine in extremely hot and cold, dusty and humid environments。
 ②Do not fall, impact, violent vibration when using.
- (3) A change in the performance or function of a product, No further
- notice will be given. (4)The headphones contain batteries and should not be exposed to Rizhao, barbecue or similar overheating.
- (5)Please do not disassemble this machine without authorization to avoid danger,

Product introduction







LCD Full color touch screen

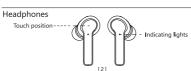


Operation Guide

For the first time Use from charging him

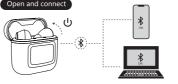

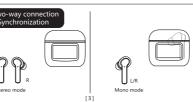


Operation Guide

 



Charging Bin Touch Command

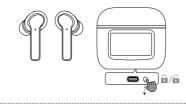



Functional description

1.Packing list

Charging Chamber X 1 Headphones x 2

Three sizes of ear cap x 6

TYPE-Ccharging cable x 1 Manual * 1

2.Bluetooth pairing

(1) To use, open the charging bin, mobile bluetooth search for "GL-TWS32" select and complete the pairing.

@Once the pairing has been recorded, open the charging bin and the headset will automatically connect back to a recently connected phone. 3 Please finish the Bluetooth pairing within 5 minutes. If you fail to

connect, the headset will shut down automatically. Need to put the headphones into the charging bin and close the cover, re-operation please refer to the steps.

3.When using headphones, please turn off the audio mode of the music player on your phone for the best sound quality.

4.If you do not use the Bluetooth headset for a long time, please charge it fully and every other week to extend the service life of the

5.If it is found that the left and right ears are out of sync, the left ear 6 clicks to resume the output setting when the headset is not connected to the mobile phone.

6.Scan OR code to download APP for Android and Apple.







Instructions for use

1.Turn On: Take Out headphones/press for 5 seconds.

2.Shutdown: power-on state into the charging bin charging automatic shutdown/press for 5 seconds.

3.Pairs of ears; boot automatic matching (binaural automatic matching needs about 3S). 4.Two headphones are disconnected from each other; one is turned off and the other is turned on, disconnecting the two headphones.

5.Connect success: The Phone Bluetooth pair the headset successfully and connect the headset

6.Disconnect Bluetooth; the phone disconnects Bluetooth or puts it into the charging bin to close the lid.

7.Play/pause music: Touch Once the left/right ear touch point while connected. 8.Switch to the previous song: Touch the left ear twice in a row while connected. 9.Switch to next song: Touch the right ear twice in a row while connected. 10.siri:Touch left/right ear touch points three times while connected.

11.Game mode: Touch the touch points four times when the left and

right ears are connected. Turn the game mode on/off, 12.Charging headphones; put them in the charging bin.

13.Charging bin discharge: charging bin to charge headphones 14.Charge the charging bin: charge the charging bin, 15.Charging bin power consumption: low power tips.

16. Answering calls: Touch your left/right ear twice during a call 17. Hang-up call: Touch left/right ear touch point twice while on call, reject call: Press left/right ear touch point for 3 seconds while on call. 18.Low power tip: battery voltage below 3.15 V.

19.Low shutdown voltage: Battery voltage below 3.05 V. 20.No connection or disconnected Bluetooth: 3 minutes automatic shutdown.

21. Power display: headset connected to mobile phone, mobile phone has power display, 22. Volume Sync: the headset is connected to the phone, and the volume of the headset will sync with the volume of the phone,

23.Auto-reconnect: after pairing, the headset will connect Bluetooth automatically, 24.Long-distance disconnection automatic return: long-distance disconnection back to 16 meters automatic retur,

25.CALL VOICE PROMPT: call voice broadcast number,

Product parameters

Modulation mode: GFSK,pi/4-DQPSK And/DPSK

Output frequency band: 2.4G RF power: +4dBm Antenna gain: 0dBi Microphone sensitivity: -42±3dB Communication distance: 16M

Use temperature: -16°C---52°C Support protocols: HFP A2DP AVRCP AVDTP HID AVCTP

Operating frequency: 2.4G

Charging specifications: 4.8-5.2V/0.5-2A---5v Operating voltage: 3.2-4.2V---3.7V Charge setting current: 5VInput---30mA

Chip: 6973D4

Operating voltage: 3.2-4.2V Turn off the current: 20uA Charging current: 200mA Discharge maximum current: 0.5A

Charging: Insert 5V charging process When the charge is complete: charge the charging bin fully

Discharge: the process of charging headphones Discharge complete: the headset is fully charged

Discharge low current alarm: when the battery is below 3.3 V

* according to the company's business development, the function parameters and picture contents of the products may be adjusted at any time. The timely updating of the relevant packaging and specifications can not be guaranteed. The functions and contents of the products in actual use shall prevail.

Declaration

We are not in a position to control any misinterpretation of this manual by our users, so we shall not be responsible for any accidental damage that may occur during the use of this manual, nor shall we be responsible for any third-party claims arising out of the use of

This product batch is not the same, the function will be different, the final interpretation of

If you have any questions in the check, please contact the distributor. The company promises: strict implementation of the national three-package service policy.

According to SJ/T11363 -2006 "Electronic information products pollution control marking requirements" article 6 of the marking The list of hazardous substances or elements identified by this machine is as follows

(Parts)	(Hazardous substance)					
	(Pb)	(Hg)	(Cd)	(Cr6+)	(PBB)	(PBDE)
The main machine	0	0	0	0	0	0
Connecting cable	0	0	0	0	0	0
Annex	0	0	0	0	0	0

Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in the standard (SJ/T11363 -2006).

[8]

Warranty Terms and conditions

According to the relevant laws and regulations of the state, regulations implemented Three Guarantees policy. Dear users, will be in accordance with the relevant state departments in

July 23,2002 issued "Home audio-visual goods repair replacement and return liability provisions" enjoy comprehensive three Guarantees services, Warranty principle

1.In normal operation, failure, not dismantled, since the date of purchase of the host product seven days replacement, warranty within one year, 2. Product accessories such as connection lines, such as pre-sale quality problems can be "New for new" is not covered by the warranty, In any of the following cases, three Guarantees may not be applied,

but repair may be carried out at a fee:
a.Damage caused by human factors, including abnormal working environment, not in accordance with the requirements of the manual caused by the use of the damage,

b.The user disassembles the machine privately, the self-maintenance, the modification or not by this company joint insurance unit maintenance c.Damage caused by force majeure (e.g. flood, fire, earthquake, lightning, etc.), d Without product warranty card and valid purchase certificate

e.Product warranty cards and purchase vouchers do not match the product model or are altered without authorization. ≡. Warranty method

1. Three Guarantees, must be with the warranty card and valid purchase vouchers. In case of loss, please contact our customer service department for user information

2. With the replacement of products, you can directly with the agent for replacement procedures, replacement, the host machine failure, then free replacement of the same specifications, the same model host, host accessories failure, then free

3. For the products that need to be maintained, you can contact our designated agent sales service center for specific maintenance matters. 4.Please fill in the warranty card immediately after purchasing the product.

5.Be sure to fill out the warranty card. Please cooperate with customers to fill out the warranty card and send it back to us. In order to better enjoy the company to provide you with professional services.

Product warranty card

Warranty card Customer Information product model (signature) Customer name Sales calls Date of purchas Product code Customer address Sales address Summary Failure phenomenon Maintenance Notes

[10]