

ACWO®



EARBUDS

DWOTS 747

Manual



Type-C Charging Interface

Appearance:

- ① Left Earbud
- ② Right Earbud
- ③ Charging Case
- ④ Left Earpiece Charging Socket
- ⑤ Right Earpiece Charging Socket
- ⑥ Type-C Charging Interface
- ⑦ Multi-Function Touch Area
- ⑧ Battery Display Indicator

What You Will Find In The ACwO Box?

- ❶ Charging Case
- ❷ Pair of ANC Earbuds
- ❸ Warranty Card
- ❹ Scan Me Card
- ❺ ACwO X Sunil Chhetri Catalogue
- ❻ Comfortable Ear Tips

Product Features:

- ❶ Dual Device Connectivity
- ❷ 4 Mics With AI-ENC Technology
- ❸ 13mm BasS BooM X™ Hi-Fi Drivers
- ❹ Up To 65 Hours Battery Life
- ❺ IPX5 Water & Sweat Resistant
- ❻ 3 EQ Modes (Theatre / Bass / Normal)
- ❼ HYPER BOOST™ Charging (10 Mins Charge = 120 Mins Playtime)
- ❽ Low Latency Up To 50ms

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.
- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.
- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS 747

Kindly Note:

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS 747 Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS 747 Wireless Earbuds.

Earbuds:

- Place the earbuds in the charged Charging Case to charge the ACwO DwOTS 747 Wireless Earbuds.

Bluetooth Pairing Process:

- ① Take out the ACwO DwOTS 747 Earbuds from the Charging Case and place them in your ears.
- ② Go to the Bluetooth settings of your device and switch it on. Scan available devices.
- ③ Search For " ACwO DwOTS 747" from the list of available devices.
- ④ Pair " ACwO DwOTS 747" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS 747 will connect seamlessly to your device every time you open the charging case.

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS 747

1. In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset. Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.
2. Clear all Bluetooth data named "ACwO DwOTS 747" from your device and disable Bluetooth.
3. Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS 747?

DwOTS 747 Controls: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Smart Functions ACwO DwOTS 747

Play/Pause:

- Single Tap on the Multi-Function Touch Area of either earbud.

ANC On/Transparency Mode/ANC Off:

- Long press for 2 sec on the Multi-Function Touch Area of the right earbud.

Switch Between Bass/Theatre/Normal Mode:

- Long press for 2 sec on the Multi-Function Touch Area of the left earbud.

Next Track:

- Double Tap on the Multi-Function Touch Area of the left earbud.

Previous Track:

- Double Tap on the Multi-Function Touch Area of the right earbud.

Activate Voice Assistant:

- Tap 4 times on the Multi-Function Touch Area of either earbud.

To Increase Volume:

- Triple Tap on the Multi-Function Area of the Right Earbud.

To Decrease Volume:

- Triple Tap on the Multi-Function Area of the Left Earbud.

To Answer Calls:

- Single tap on the Multi-Function Touch Area of either earbud.

To Hang Up Calls:

- Single tap on the Multi-Function Touch Area of either earbud.

- **To Hang Up Calls:**

Single tap on the Multi-Function Touch Area of either earbud.

- **To Decline Calls:**

- Tap & Hold for 2 seconds on the Multi-Function Touch Area of either earbud.

- **Power Off Left/Right Earbud:**

- Long press for 5 seconds on the Multi-Function Touch Area of either earbud.

- **Power On Right Earbud:**

- Long press for 5 seconds on the Multi-Function Touch Area of the right earbud.

- **Power On Left Earbud:**

- Long press for 5 seconds on the Multi-Function Touch Area of the left earbud. One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances no matter how noisy your environment is.



Thank you for choosing us!

We hope you enjoy using the ACwO DwOTS 747 TWS.
