

UBERHAUS Design

Model/Modèle : WCF-01R
73405001



Misting Box Fan

Operators' Manual p. 1

Ventilateur carré avec brumisation

Guide de l'utilisateur p.6



Customer Service / Service à la clientèle : 1-866-206-0888

Our Customer service staff is available to help you. For help with product assembly, to report damaged or missing parts, or for any other information about this product, please call our toll-free number.

SAVE THIS MANUAL

 
Keep this manual and the original sales invoice in a safe, dry place for future reference.

Notre personnel du service à la clientèle est disponible pour vous aider. Pour obtenir de l'aide pour le montage de votre produit, pour signaler des pièces endommagées ou manquantes, ou pour toute autre information à propos de ce produit, veuillez composer notre numéro sans frais.

CONSERVEZ CE GUIDE

Conservez ce guide avec la facture d'origine dans un endroit sûr et sec pour référence future.

WCF-01R Misting Box Fan

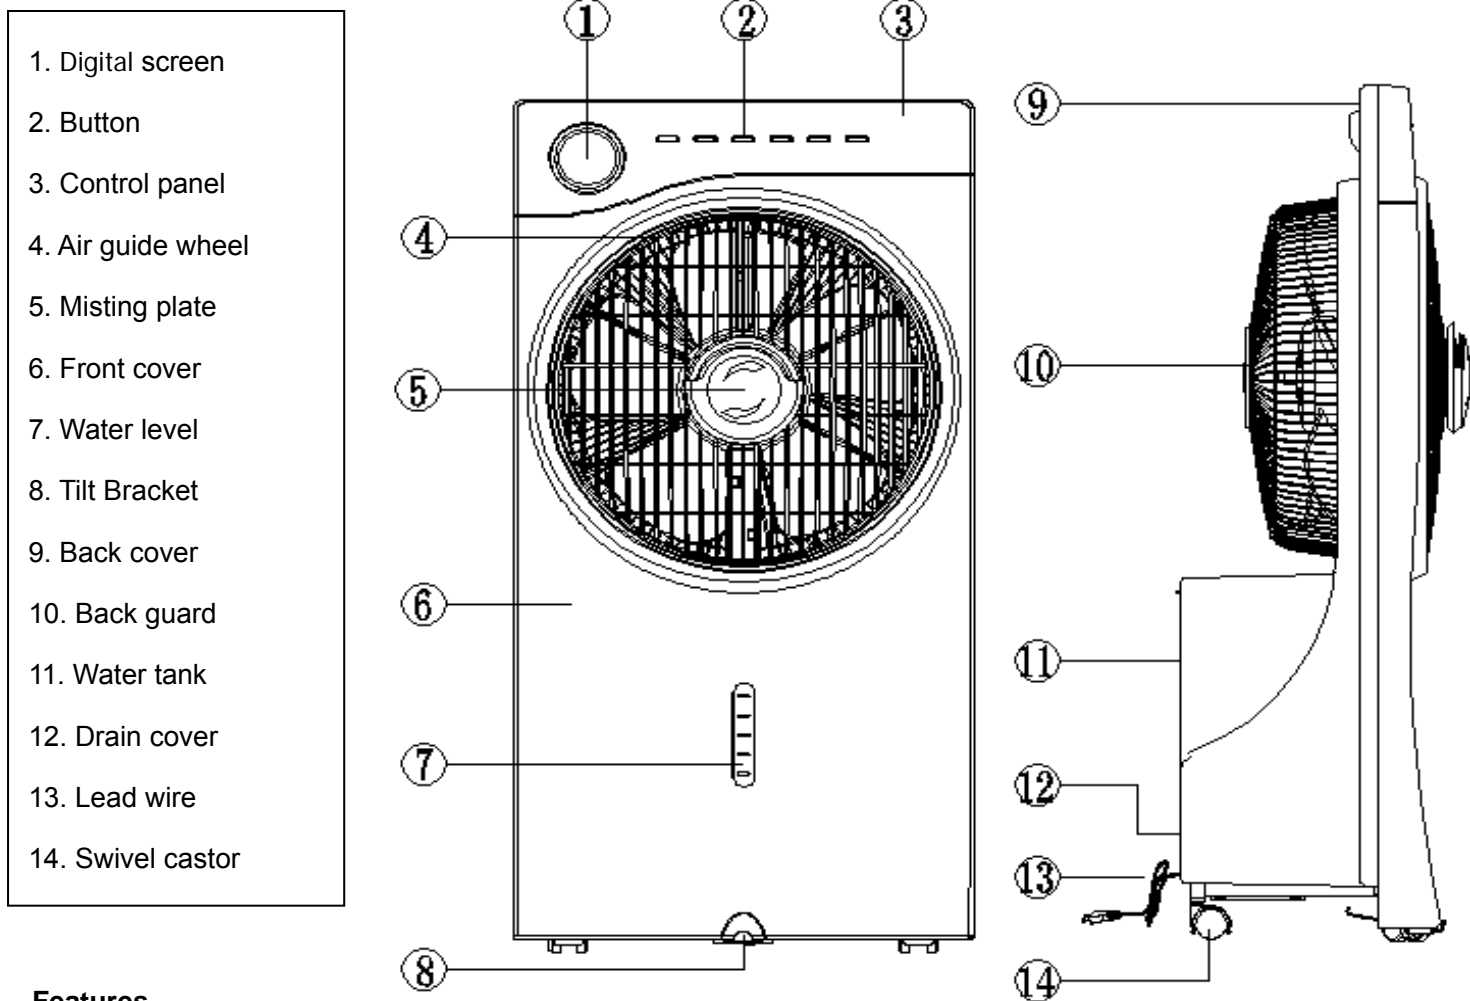

Features

This unit provides misting, photocatalyst, ion and box fan functions. You can use these functions at the same time or separately .

Misting function: Through HF vibration (Frequency 1.7 MHz or 2.4MHz, inaudible and non-harmful to the human body) the ceramic misting shatters water molecules, producing an elegant dry mist. No need to heat or add any chemical agent.

Dry mist can effectively reduce levels of formaldehyde, carbon monoxide, and bacteria in the air, refreshing the air and keeping you healthy.

Negative ion function: Negative ion can refresh the air. There are many positive ions in the air pollution (solid particles, bacterial, chemical fog).When positive ions meet negative ions from this appliance, their

structure will be changed and their activity lowered which can make the air pollution particles drop on the ground.

Photocatalyst function: this function helps in decomposing noxious gas and inorganic compounds in the air, inhibiting the growth bacteria and viruses. The air will feel fresher and deodorized.

- Model:WCF-01R
- Voltage:120V 60Hz
- Power: 90W
- Net Weight: 13.24 lbs (6 kg)
- Product size:16"X10"X31"
- Product size:39.5X25X79CM
- Capacity: 2.5L
- Misting volume: 130ml/h
- Misting power: 32W

Read these instructions before attempting to operate this product and save these instructions for future reference.

Important Safety Instructions

- This fan is designed for a 120v/60Hz electric supply.
- Before cleaning or moving the fan, make sure it is unplugged. When unplugging, grip the rubber part of the plug and do not pull the lead wire.
- Do not pull the plug with wet hands to avoid electrical shock.
- Do not damage, excessively bend, stretch, twist or press the electrical cord. Do not replace the electrical cord yourself. If the electric cord is damaged, it must be replaced by qualified person in order to avoid a danger.
- Do not put any foreign object in the inlet or outlet grilles. That may damage the fan, cause a risk or lower the power of the wind.
- Avoid water dripping in the appliance and proximity to open flames. Avoid placing the appliance near of inflammable or explosive objects.
- Do not spray pesticide or detergent directly on the fan to avoid any damage to the rubber finish.
- When fan will not be used for a long time, please turn off and unplug the fan. Remove batteries from remote controller.
- Do not try to repair the fan yourself. It must be done by a qualified technician. Contact Customer service for a service centre near you.




READ AND SAVE THESE INSTRUCTIONS


Operating safety instructions

- Locate the fan on the level ground, do not operate it at an angle or lying on the ground.
- When moving the fan, unplug it first. Move it with the handle at the back.
- Do not use this fan in an area with high humidity, in dusty conditions or in a temperature above 40°.
- Keep this fan out of reach from children or infirm persons. Do not let them use the appliances without supervision.
- When operating the fan, do not put your finger or other objects into the grille.

Operating instructions

- Fill water into water tank, then install the water tank in its holder at back of fan. Please be sure that the water tank has been secured to the back cover. (Please refer to picture 1).
- Make sure the appliance is located on a stable surface, insert the plug into the socket, press on/speed key to start the fan. (Please refer to picture 2).

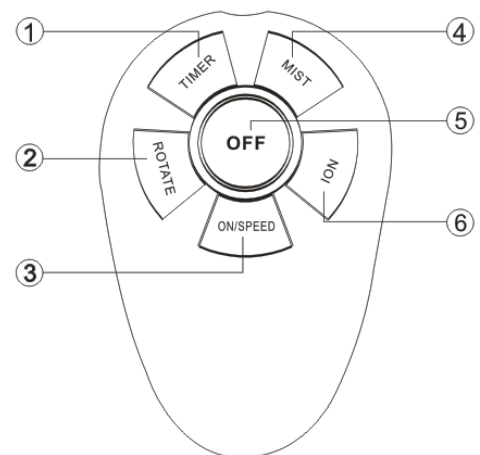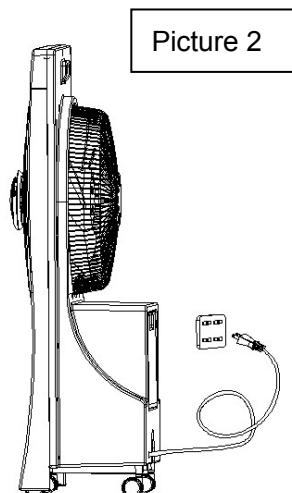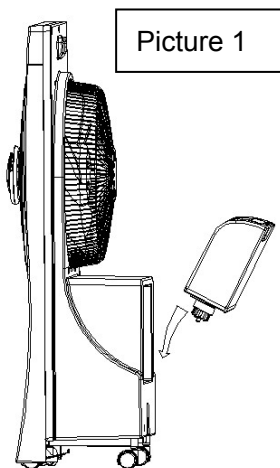

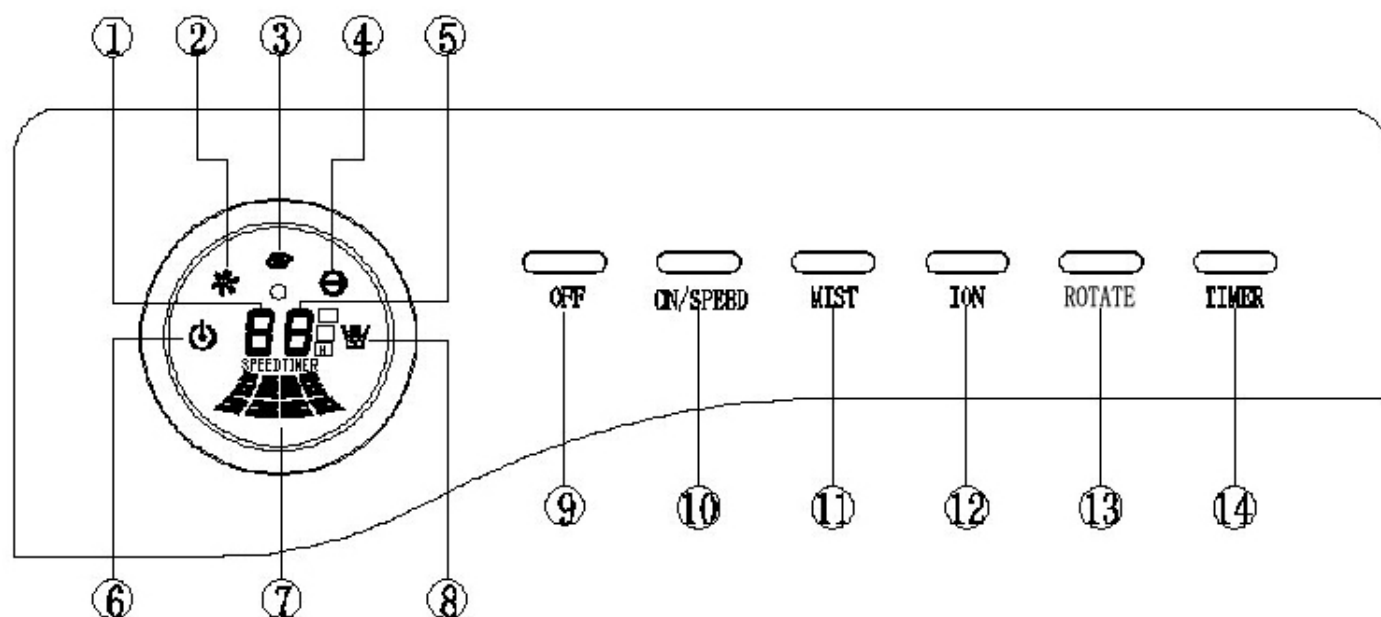

FND display screen

1. Wind speed icon
2. Fan function icon
3. Rotation icon
4. Ion function icon
5. Timer icon
6. Power on icon
7. Flashing icon
8. Misting icon

Buttons on the panel

9. Turn off button
10. On/ Speed
11. Mist button
12. Ion function button
13. Rotate function button
14. Timing button

Remote control

1. Timer
2. Rotate function
3. On/speed
4. Mist function
5. Turn off
6. Ion function

Power on: After a plug is inserted into the socket, a buzzer sound will be heard.

The power indicator on the FND screen is on.

ON/SPEED: Press the on/speed button, the FND screen will display wind speed at 1, and fan function icon is on the screen at the same time. Continue to press this ON/SPEED button, the wind speed will change to middle power (2). Press the button a third time, the wind speed will change to strong power (3). The wind speed changes in a 1-2-3 sequence when pressing the operation/wind power key every time.

- **MIST:** Press the MIST button to start the misting function, the FND screen will display the misting icon, press it again to stop this function.
- **ION:** Press the ION button to start the ION function, the FND screen will display the ION function icon, press it again to stop this function.
- **Rotate:** When the fan function is on, press the Rotate button to start rotating. The FND screen will display the rotation icon, press it again to stop this function. Please note that when the fan function isn't on, the rotation function cannot be used.

- **TIMER:** When the fan or the misting function is on, press the Timer button for timing. The FND screen will display the H icon and timer icon display at 1 hour, the timer icon will switch according to “1 hour→2 hours→3 hours→.....→9hours→timing off” sequence with every press of the Timer button. This means that the fan or misting function and the timer icon will be on until it turns off automatically - you may also stop these functions manually at any time.

Operation of remote control

Buttons on the remote control have the same functions than those on the appliance.

- The workable distance of this remote control is 16 ft (5 m) and workable center angle is 45°.
- If the remote control is close enough to the appliance but will not work, please replace the battery.
- Please do not let the children play with the remote control. It is not a toy.
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries

Maintenance and storage

Please clean water tank and the misting box once every two weeks with the following steps:

- Water tank cleaning

Remove the water tank from the appliance; add fresh water in tank, shake vigorously and drain. Let it air dry.

- Misting box cleaning

1. Unplug fan from power source (socket).
2. Pull the misting lead hose off from the misting box, then take the misting box out. Add 2~3 drops of detergent on the misting piece, clean the misting piece after 1 minute with a brush, rinse detergent and dry the misting piece with a soft dry cloth.

Wipe dust and stains on the machine with soft wet cloth. In case of stubborn stains, clean with a neutral detergent, Please do not use any corrosive cleansing liquid such as gas, or alcohol to clean the plastic parts of the appliance.

To store: Place the appliance into the box and keep it in a dry and well-ventilated area.

Warranty:

Thank you for investing in a UBERHAUS DESIGN product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This warranty does not affect your statutory rights. In case of any malfunction of your UBERHAUS DESIGN product (failure, missing part, etc.), please contact one of our service technician at our toll free service line at 1-866-206-0888 from 8 AM to 6 PM, Monday to Friday, Eastern time. RONA reserves the right to repair or replace the defective product, at its discretion.

The product is guaranteed for 12 months if used for normal trade purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair other than by an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed. Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.