



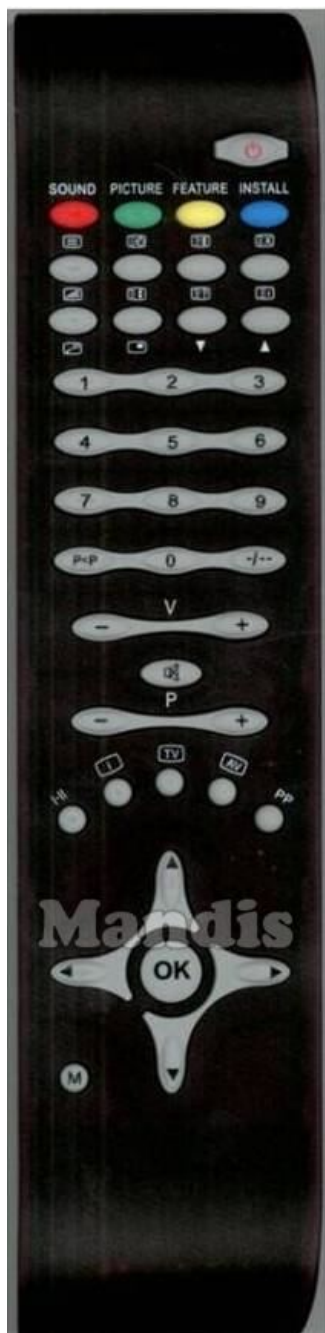

Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 Red/Sound	 Red	 6	 6
 Green/Picture	 Green	 7	 7
 Yellow/Feature	 Yellow	 8	 8
 Blue/Install	 Blue	 9	 9
 [=]	 REPEAT TEXT	 0	 0
 [=O]	 SETTINGS OPT	 P<P	 FAV PRE-CH
 [=+]	 PICTURE FORMAT	 -/--	 -/-- GUIDE
 [=X]	 HOME SMART	 V +	 + VOL
 [.≡]/[■]	 AD SUBT	 V -	 - VOL
 [=◆]/[■]	 APP MEDIA	 MUTE	 MUTE
 [=?]/↓	 ECO 3D	 P +	 + CH
 [=i]/↑	 DISC NAV LIST	 P -	 - CH
 1	 1	 I-II	 SOUND DUAL
 2	 2	 [i]	 DISPLAY INFO
 3	 3	 TV	 SEARCH TV/R
 4	 4	 AV	 TIMER AV

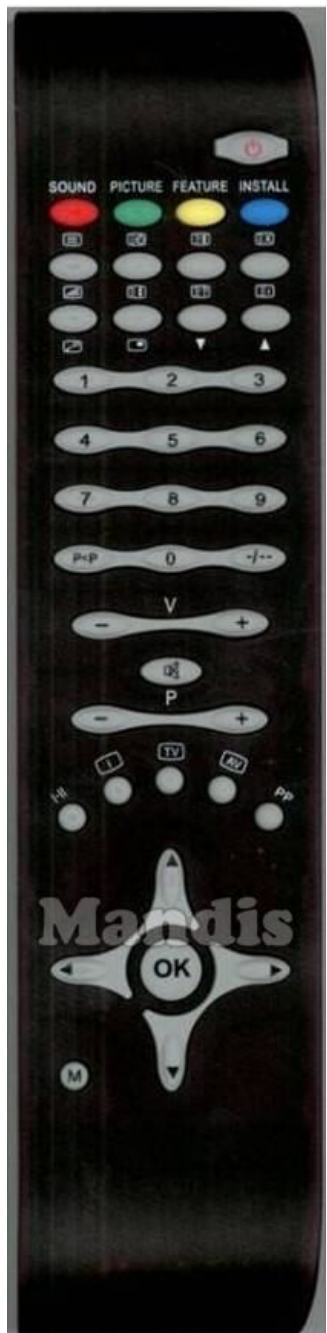

[illegible]