



# Nokia 230

## User Guide

# Table of Contents

<b>1</b>	<b>About this user guide</b>	<b>4</b>
<b>2</b>	<b>Get started</b>	<b>5</b>
	Keys and parts . . . . .	5
	Set up and switch on your phone . . . . .	6
	□□□□□ □□□ □□□□□ □□□ . . . . .	9
	Keypad . . . . .	9
<b>3</b>	<b>□□, □□□□□□□□ □□□ □□□□□□□□</b>	<b>10</b>
	Calls . . . . .	10
	Contacts . . . . .	10
	Send messages . . . . .	11
<b>4</b>	<b>□□□□□□ □□□ □□□□□□□□□□□□□□ □□□□□</b>	<b>12</b>
	Change tones . . . . .	12
	Change the look of your home screen . . . . .	12
	Profiles . . . . .	12
	Add shortcuts . . . . .	12
<b>5</b>	<b>Camera</b>	<b>14</b>
	Photos and videos . . . . .	14
<b>6</b>	<b>□□□□, □□□□□□□□□□□□□□ □□□ □□□□□□□□□□□□□□</b>	<b>15</b>
	Set the time and date manually . . . . .	15
	Alarm clock . . . . .	15
	Calendar . . . . .	15
	Calculator . . . . .	15
<b>7</b>	<b>Empty your phone</b>	<b>16</b>
	Remove private content from your phone . . . . .	16

<b>8 Product and safety information</b>	<b>17</b>
အချက်အလက်များကို ဖတ်ရှုပါ . . . . .	17
အချက်အလက်များ . . . . .	19
အချက်အလက်များကို ဖတ်ရှုပါ . . . . .	19
အချက်အလက်များကို ဖတ်ရှုပါ . . . . .	20
အချက်အလက်များကို ဖတ်ရှုပါ . . . . .	21
Battery and charger information . . . . .	21
အချက်အလက်များ . . . . .	22
အချက်အလက်များကို ဖတ်ရှုပါ . . . . .	22
အချက်အလက်များကို ဖတ်ရှုပါ . . . . .	23
အချက်အလက်များ . . . . .	23
Protect your device from harmful content . . . . .	23
အချက်အလက်များ . . . . .	24
အချက်အလက်များကို ဖတ်ရှုပါ . . . . .	24
အချက်အလက်များကို ဖတ်ရှုပါ (SAR) . . . . .	24
အချက်အလက်များကို ဖတ်ရှုပါ . . . . .	25
Copyrights and other notices . . . . .	25

# 1 About this user guide

 


**Important:** For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

## 2 Get started

### KEYS AND PARTS

#### Your phone

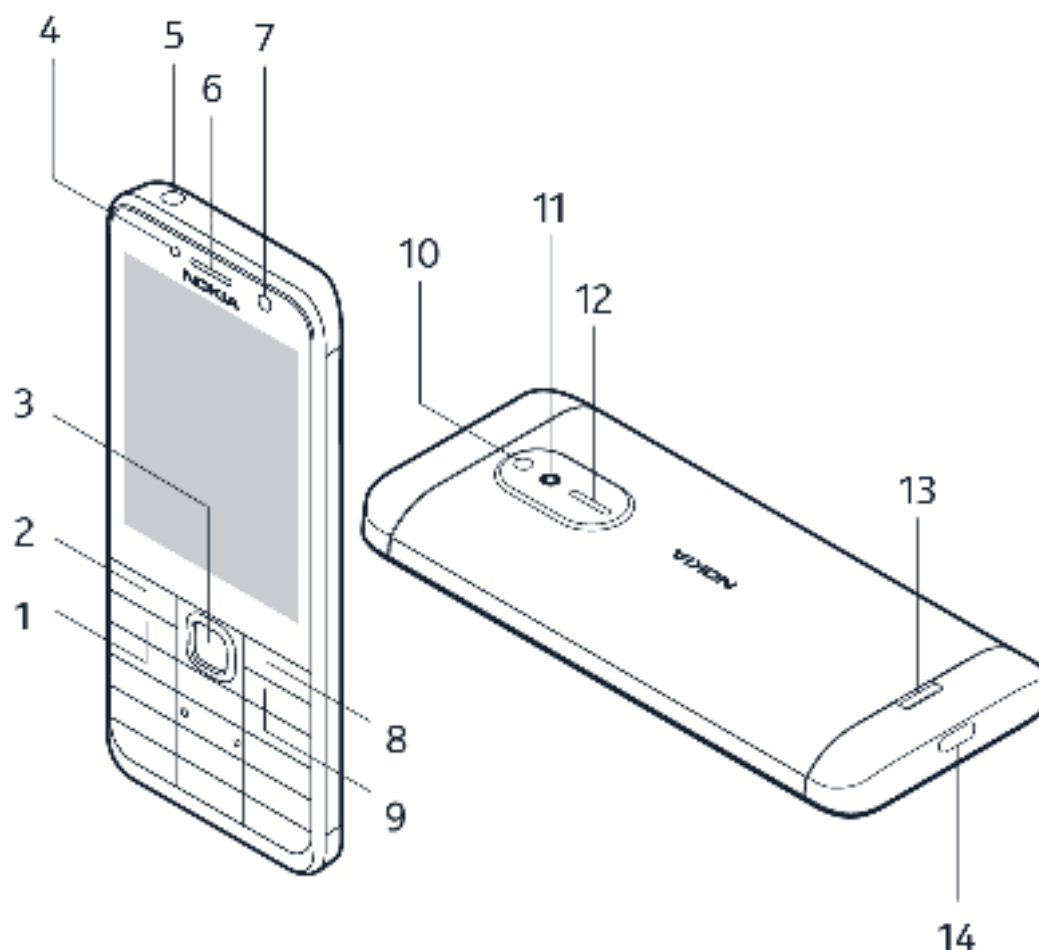

This user guide applies to the following model: TA-1609.

- |                       |                             |
|-----------------------|-----------------------------|
| 1. Call key           | 8. Right selection key      |
| 2. Left selection key | 9. Power/End key            |
| 3. Scroll key         | 10. Flashlight              |
| 4. Flash              | 11. Camera                  |
| 5. Headset connector  | 12. Loudspeaker             |
| 6. Earpiece           | 13. Back cover opening slot |
| 7. Front camera       | 14. USB connector           |

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.



**Note:** You can set the phone to ask for a security code. Select **Menu** > **Settings** > **Security** > **Keyguard** > **OK**, and enter a code. Note, however, that you need to remember the code, as HMD Global is not able to open or bypass it.

## Parts and connectors, magnetism

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

## SET UP AND SWITCH ON YOUR PHONE



 
**Note:** Pre-installed system software and apps use a significant part of memory space.

□ □ □ □ □ □ □    □ □ □

[illegible]


பெயர்: \_\_\_\_\_  
 பிள்ளை: \_\_\_\_\_  
 தாய்: \_\_\_\_\_  
 தந்தை: \_\_\_\_\_  
 குடி: \_\_\_\_\_  
 மொத்தம்: \_\_\_\_\_

## Open the back cover

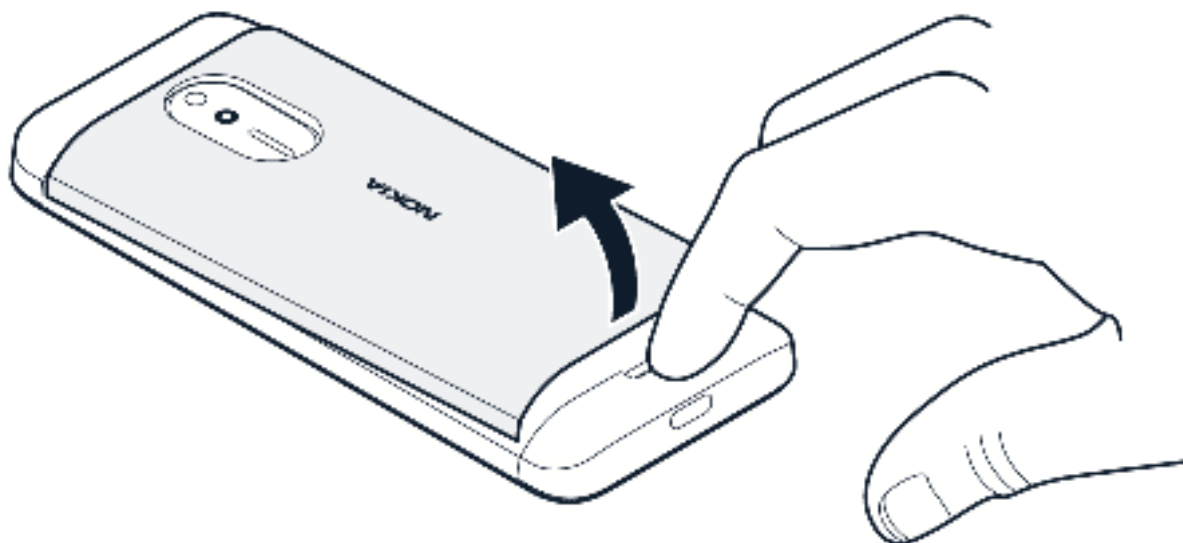

1. Put your fingernail in the small slot at the back of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.

## Insert the SIM cards

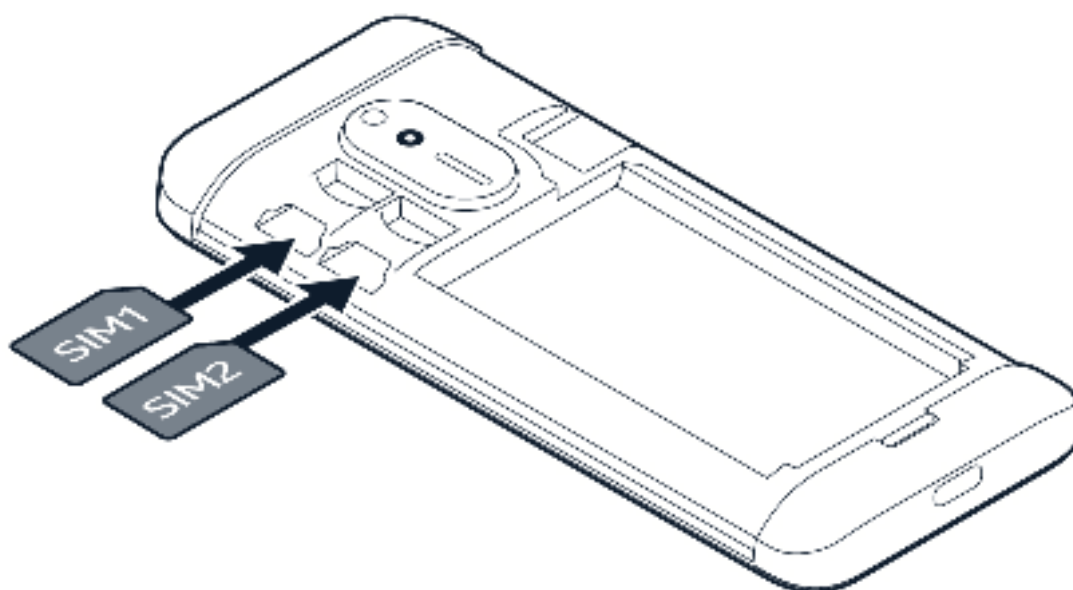 


1. Slide the SIM card in the SIM card slot.
2. If you have a dual-SIM phone, slide the second SIM in the SIM2 slot.

Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.



**Tip:** To find out if your phone can use 2 SIM cards, see the label on the sales box. If there are 2 IMEI codes on the label, you have a dual-SIM phone.

## Insert the memory card

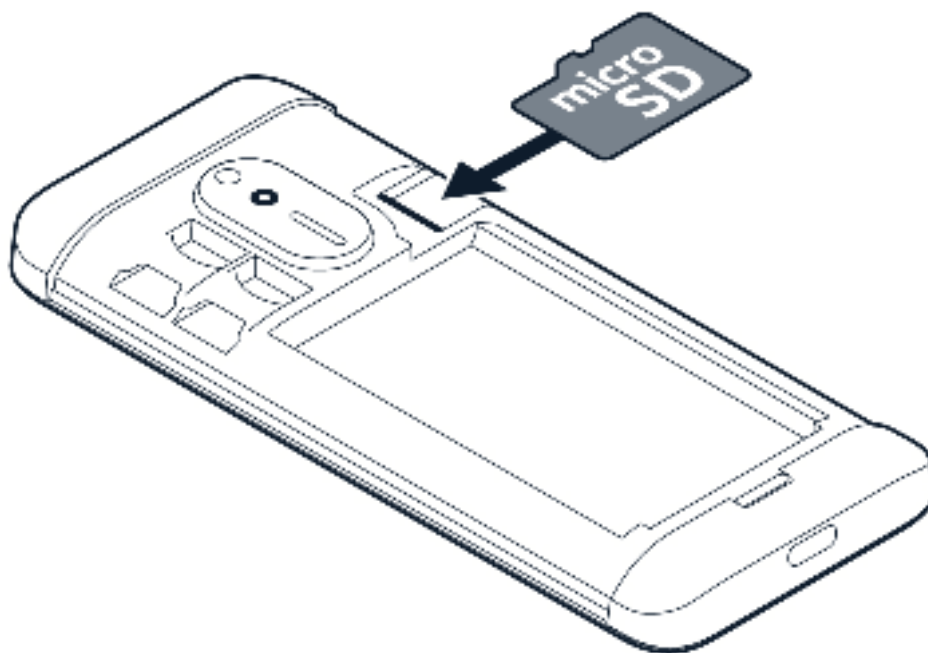 

1. Slide the memory card in the memory card slot.
2. Put back the battery.
3. Put back the back cover.

Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



**Tip:** Use a fast, up to 32 GB microSD memory card from a well-known manufacturer.

© 2024 Nokia. All rights reserved.

TM and © 2024 HMD Global. All rights reserved.




பொதுத் தகவல்

பொதுத் தகவல்: இந்தப் புத்தகம் உங்கள் தொலைபேசியைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது.

பொதுத் தகவல்

1. பொதுத் தகவல்: இந்தப் புத்தகம் உங்கள் தொலைபேசியைப் பற்றித் தகவல் கொடுக்கிறது.
2. பொதுத் தகவல்: இந்தப் புத்தகம் உங்கள் தொலைபேசியைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது.

பொதுத் தகவல்: இந்தப் புத்தகம் உங்கள் தொலைபேசியைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது.


 பொதுத் தகவல்: இந்தப் புத்தகம் உங்கள் தொலைபேசியைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது. USB பொதுத் தகவல்: இந்தப் புத்தகம் உங்கள் தொலைபேசியைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது, அதன் அம்சங்களைப் பற்றித் தகவல் கொடுக்கிறது.

KEYPAD

Use the phone keys

- To see the apps and features of your phone, on the home screen, select **Menu**.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.
- If you have selected the zoomed menu view, press the scroll key up or down to go to an app or feature. To open the app or feature, press the scroll key.

Lock the keypad

To lock the keys, select **Go to** > **Lock keypad**. To unlock the keys, press , and select **Unlock**.

Write with the keypad

Press a key repeatedly until the letter is shown.

To type in a space press **0**.

To type in a special character or punctuation mark, press the asterisk key, or if you are using predictive text, press and hold the **#** key.

To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.

### 3 □□, □□□□□□□ □□□ □□□□□□

## CALLS

11 11

[illegible]

1. ဝတ် ဝတ်ဝတ် ဝတ် ဝတ်ဝတ် ဝတ်ဝတ်ဝတ်ဝတ်ဝတ် ဝတ် ဝတ် ဝတ်ဝတ် + ဝတ်ဝတ် ဝတ် ဝတ် ဝတ် \* ဝတ်'ဝတ် ဝတ်ဝတ်၊
2.  $\cap$  ဝတ်ဝတ်၊ ဝတ်ဝတ်ဝတ် ဝတ် ဝတ် ဝတ် ဝတ် ဝတ်ဝတ် ဝတ် ဝတ် ဝတ် ဝတ်
3. ဝတ် ဝတ် ဝတ်,  $\otimes$  ဝတ်ဝတ်

□□□□ □□□□ □□□□□ □□□

U U U U U U

## CONTACTS

## Add a contact

1. Select **Menu** > **Contacts** > **Add contact**.
2. Select where to save the contact.
3. Write the name and select **OK**.
4. Type in the number and select **OK**.

## Save a contact from the call logs

1. Select **Menu** > **Call log**, and select the call type.
2. Scroll to the number you want to save and select **Opt.** > **Save**.
3. Select where to save the contact.
4. Add the contact details and select **OK**.

## Call a contact

You can call a contact directly from the contacts list.

Select **Menu** > **Contacts** > **Names**, scroll to the contact you want to call, and press the call key.

## SEND MESSAGES

### Write and send messages

1. Select **Menu** > **Messages** > **Create message**.
2. Type in a phone number, or select **Add** and a recipient from your contacts list.
3. Write your message.
4. To insert symbols to the message, press \*.
5. Select **Send**. If asked, select which SIM to use.

## 4 音調をカスタマイズして音調を変更する

### CHANGE TONES

#### Set new tones

1. Select **Menu** > **Settings** > **Tone settings**.
2. Select which tone you want to change and select for which SIM card you want to change it, if asked.
3. Scroll to the tone that you want and select **OK**.

### CHANGE THE LOOK OF YOUR HOME SCREEN

#### Choose a new wallpaper

1. Select **Menu** > **Settings** > **Display settings** > **Wallpaper**.
2. Select **Default** to select from pre-defined wallpapers, or **Photos** to select a picture from your phone or memory card.
3. Scroll to the wallpaper you want, and select **Select**.

### PROFILES

#### Set a profile

There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and an outdoor profile with loud tones.

1. Select **Menu** > **Settings** > **Profiles**.
2. To adjust a profile, scroll to it, and select **Select** > **Personalise**. Change the settings you want.
3. To set on a profile, scroll to it, and select **Select** > **Activate**.

### ADD SHORTCUTS

You can add shortcuts to different apps and settings on your home screen.

## Edit Go to settings

On the bottom left of your home screen is **Go to**, which contains shortcuts to various apps and settings. Select the shortcuts that are the handiest for you.

1. Select **Menu** > **Settings** > **Go to settings**.
2. Select **Select options**.
3. Scroll to each shortcut you want to have on the list and select **Mark**.
4. Select **Done** > **Yes** to save the changes.

You can also reorganize your list.

1. Select **Organise**.
2. Scroll to the item you want to move, select **Move** and where you want to move it.
3. Select **Back** > **OK** to save the changes.

## 5 Camera

### PHOTOS AND VIDEOS




#### Take a photo

1. Select **Menu** > **Camera**.
2. To zoom in or out, scroll up or down.
3. To take a photo, select **Capture**.

To see the photo you just took, on the home screen, select **Menu** > **Photos** > **Captured photo**.

#### Record a video

**Note:** You may need to insert a memory card to record videos.

1. To switch the video camera on, select **Menu** > **Camera** and scroll to .
2. To start recording, select .
3. To stop recording, select .

To see the video you just recorded, on the home screen, select **Menu** > **Videos** > **Recorded videos**.

## 6 時間, 日付を手動で設定する

### SET THE TIME AND DATE MANUALLY

#### Change the time and date

1. Select **Menu** > **Settings** > **Time settings**.
2. Select **Auto-update of date and time** > **Off**.
3. Select **Clock** > **Set the time** and enter the time.
4. Select **Date setting** and enter the date.

### ALARM CLOCK

#### Set an alarm

1. Select **Menu** > **Alarm clock**.
2. Select an alarm and enter the alarm time and other details.

### CALENDAR

#### Add a calendar event

1. Select **Menu** > **Calendar**.
2. Scroll to a date, and select **Opt.** > **Add reminder**.
3. Enter the event name, and select **OK**.
4. Select whether to add an alarm to the event, and select **OK**.

### CALCULATOR

#### Use the calculator

1. Select **Menu** > **Calculator**.
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Select **Equals** to get the result of the calculation.

Select **Clear** to empty the number fields.

## 7 Empty your phone

### REMOVE PRIVATE CONTENT FROM YOUR PHONE

If you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content. Note that it is your responsibility to remove all private content.

#### Restore factory settings

1. To reset your phone to its original settings, select **Menu** > **Settings** > **Restore factory set.** > **Full restore (delete data)**.
2. Select **Contin.**



## 8 Product and safety information

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

[illegible]

□ □ □ □ □ □ □ □    □ □ □ □ □ □    □ □ □ □    □ □ □ □



මගේම මගේම මගේම මගේමමම මගේමමමම ම ම මගේමම මම මගේමමමම ම මගේ මගේම මගේම, මගේමමමමමමම, මගේමම, මගේමමමමම ම මගේමමම මගේමමමමමමමමම මගේම, මගේමමමම, මගේමමම ම මගේමමමම මගේමම, මගේමමමම මගේ මගේමම! මගේ මගේමමමමමමමමම මගේමමම මගේම මගේමමම මගේ මගේම

□ □ □ □   □ □ □   □ □ □ □ □ □ □ □   □ □ □ □ □ □ □ □ □ □

[illegible]

□ □ □ □ □ □ □ □ □

[illegible]

□ □ □ □ □   □ □ □ □ □ □ □



□□□□□□□□ □□□□□□ □□□□□□ □□□□□□□□□□ □ □□□□□ □□□□□ □ □□□□□ □□□□ □□□□□□

□□□□□□□□, □□□□□□□ □ □□□□□□□ □□□□□□□□□□

[illegible]

□ □ □ □ □    □ □ □ □ □ □ □ □    □ □ □ □ □    □ □ □ □ □



□□□□ □□□□□□ □□□-□□□□□□□□ □□ □□ □□□□ □□□□

□ □ □ □ □    □ □ □ □ □ □ □ □ □ □    □ □ □ □ □ □ □ □ □ □    □ □ □ □ □



[illegible]

--	--	--	--	--	--	--

[illegible]

□□ □□□□ □□□:

- 000000 0000 0000!
- 000 000000 0000000 000 00-0000 00 000 0000 000000 000000 0000 000000
- 000000000 00000000 000000000 000000 000 0000 0000000 0000

1. 0000 00000000 00 00000000 00000000 00000000 00-00 00000000 00000000;
2. 000000 00000000 0000000000 00000 000000 000000000000 0000000000 0000 00000000 00000 00000; 000000 00000000 000000000000 00 00000000 000000 0000 000000
3. 00 00 00000000
4. 0000000000 00000000 00000 000000 0000000000 00000000 00000; 00 0000 00000 00000000 00 00000 00000000 00000000 00000 00000000 00000000 00000 0000

□□□□□□ □□□□ □□□□□□ □□□□□□ □□□□ □□ □□□□:

- [illegible]

☐ ☐ ☐ ☐ ☐    ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐    ☐ ☐ ☐ ☐    ☐ ☐ ☐

பெரிய அளவுக்கு, பல்வேறு தரப்பட்ட பண்புகளையும் கொண்டிருக்கின்றன. இவற்றைப் பற்றிப் படித்துப் பார்த்தால், பல்வேறு தரப்பட்ட பண்புகளையும் கொண்டிருக்கின்றன. இவற்றைப் பற்றிப் படித்துப் பார்த்தால், பல்வேறு தரப்பட்ட பண்புகளையும் கொண்டிருக்கின்றன.

- 0000000000 000000 0000000 0000000000, 0000000000 0000000000 0000000 000 000000 000 0000000 00 00000 0000000000 0000000000 0000000000 000000 00000 0000000 000000 00000 00 000000000000 000000000000 0000000000 00000
- 0000000000000 00000-000000 0000000 00000

- **በጥሩ የሚመስሉትን የሚመለከቱትን ማጥፋት**  
ጥሩ ጥሩ የሚመስሉትን የሚመለከቱትን ማጥፋት  
የሚመለከቱትን ማጥፋት ሲገባ, ጥሩ የሚመስሉትን  
የሚመለከቱትን ማጥፋት ጥሩ ጥሩ ጥሩ ጥሩ ማጥፋት  
የሚመለከቱትን ማጥፋት ማጥፋት፤
- **የሚመለከቱትን የሚመለከቱትን የሚመለከቱትን**  
የሚመለከቱትን ጥሩ ጥሩ የሚመለከቱትን ማጥፋት፤
- **የሚመለከቱትን ጥሩ ጥሩ የሚመለከቱትን የሚመለከቱትን**  
የሚመለከቱትን ማጥፋት ጥሩ ጥሩ ጥሩ ጥሩ የሚመለከቱትን  
የሚመለከቱትን ጥሩ የሚመለከቱትን ማጥፋት
- **የሚመለከቱትን ጥሩ የሚመለከቱትን ጥሩ ጥሩ የሚመለከቱትን**  
ጥሩ, የሚመለከቱትን ጥሩ የሚመለከቱትን ጥሩ የሚመለከቱትን  
የሚመለከቱትን ማጥፋት ጥሩ ጥሩ ጥሩ ጥሩ ማጥፋት፤
- **ጥሩ ጥሩ ጥሩ, የሚመለከቱትን የሚመለከቱትን ማጥፋት**  
የሚመለከቱትን ማጥፋት የሚመለከቱትን ማጥፋት
- **የሚመለከቱትን ጥሩ የሚመለከቱትን ጥሩ ጥሩ ማጥፋት**  
የሚመለከቱትን ማጥፋት ጥሩ ጥሩ ማጥፋት፤
- **የሚመለከቱትን የሚመለከቱትን ማጥፋት ጥሩ ጥሩ ማጥፋት**  
የሚመለከቱትን ማጥፋት ጥሩ'ን የሚመለከቱትን ማጥፋት,  
ጥሩ: የሚመለከቱትን, የሚመለከቱትን የሚመለከቱትን  
የሚመለከቱትን ማጥፋት, ጥሩ የሚመለከቱትን  
የሚመለከቱትን ማጥፋት ማጥፋት፤

[illegible]

--	--	--	--	--	--	--	--	--	--	--	--

[illegible]

Символ «Крест в корзине»

Crossed-out wheelie bin symbol



Смартфон, планшет, телевизор, а также другие электронные устройства, содержащие литий-ионные аккумуляторы, относятся к опасным отходам. Их нельзя выбрасывать в мусорный бак. Для правильной утилизации этих устройств обратитесь к местным властям или в специализированный центр по обращению с отходами.

BATTERY AND CHARGER INFORMATION

Battery and charger info

To check if your phone has a removable or non-removable battery, see the printed guide.

**Devices with a removable battery** Use your device only with an original rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

**Devices with a non-removable battery** Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, to replace the battery, take the device to the nearest authorized service facility.

Charge your device with a compatible charger. Charger plug type may vary. Charging time can vary depending on device capability.

Battery and charger safety info

Once charging of your device is complete, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Extreme temperatures reduce the capacity and lifetime of the battery. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. A device with a hot or cold battery may not work temporarily. Note that the battery may drain quickly in cold

temperatures and lose enough power to switch off the phone within minutes. When you are outdoors in cold temperatures, keep your phone warm.

Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not expose the battery to extremely low air pressure or leave it to extremely high temperature, for example dispose it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm. When charger is not included in the sales pack, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury.

To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

- Always switch the device off and unplug the charger before removing any covers or the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

安全 警告

この製品は、安全に使用するために、必ず以下の注意事項を厳密に守ってください。安全に使用するために、必ず以下の注意事項を厳密に守ってください。

安全に使用するための注意事項

この製品は、安全に使用するために、必ず以下の注意事項を厳密に守ってください。安全に使用するために、必ず以下の注意事項を厳密に守ってください。安全に使用するために、必ず以下の注意事項を厳密に守ってください。

□□□□□□ □□□□□□□□□□ □□□□□□□□ □□□□□□□□

[illegible]

- [illegible]

[illegible]

--	--	--	--	--	--	--	--	--	--	--

[illegible]

0000	00000000	00000000	00000000000000000000	00000	000000000000	000000
------	----------	----------	----------------------	-------	--------------	--------

## PROTECT YOUR DEVICE FROM HARMFUL CONTENT

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests or browsing the internet. Do not accept Bluetooth® connections from sources you do not trust.
- Install antivirus and other security software on any connected computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. HMD Global does not endorse or assume liability for such sites.

□ □ □ □ □ □ □ □ □ □ □ □

[illegible]

☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐    ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐    ☐ ☐ ☐ ☐ ☐ ☐

[illegible]

□□□□□□□□□□ □□□□ (SAR)

00 000000 00000000 00000 00000000 0000000000 000000 0000000000000000 00000 0000

[illegible]

SAR 係根據電磁波之電場強度而計算，電磁波之電場強度與電磁波之電場強度平方成正比，電場強度平方與電場強度成正比，電場強度與電場強度平方成正比。

[illegible][illegible]



[illegible]

මෙමගින් මාර්ගගතව පරීක්ෂණය කළ හැකි පිටපත් සහිතව ප්‍රතිචාරය ලබාදීමට සූදානම් වෙමු. මෙමගින් ප්‍රතිචාරය ලබාදීමට සූදානම් වෙමු. මෙමගින් ප්‍රතිචාරය ලබාදීමට සූදානම් වෙමු.

[illegible]

000000 0000000000 0000000 (WHO) 000000 0000000 00, 00000000 0000000000 0000 00000000 00000000  
 000000000000 00000000 0000 0000 0000 000000 0000000000 000000 0000; 000 0000 000000  
 0000000000 000000 0000000 00, 000000 0000 000000 0000 00000000 000000 0000 0000 000000  
 0000 0 0000 0000 00000000000 0000 000000 0000 000000000-0000 000 00000000 0000 0000 00000000  
 00000; 000 0000 0 00000000000 0000 000 RF 0000000000 0000000000 00000000 0000 WHO-0 000000000  
[www.who.int/peh-emf/en](http://www.who.int/peh-emf/en) 0 0000

□□□□□□ □□□□□□ □□□□□□□□□□ □□□□□□□

මම මනසින් මනසින්මමමම මම, මනසින්ම ම මනසින්ම මමම, මනසින්ම මම මනසින්ම මනසින්ම මනසින්ම මමමම මනසින්ම මමම මම මමම මම මමම මමම! මනසින්ම මනසින්ම මනසින්ම මම, මනසින් ම මනසින්ම මනසින්ම මම, මනසින් ම මනසින්මමමම මම මනසින්ම මම මමම.

## COPYRIGHTS AND OTHER NOTICES

## Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

TM and © 2024 HMD Global. All rights reserved. HMD Global Oy is a licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.

This product includes open source software. For applicable copyright and other notices, permissions, and acknowledgements, select \*#6774# on the home screen.