

THINKTPMS S2
Quick Start Guide
TKTS2

IMPORTANT: Read these instructions carefully and use this unit properly before operating. Failure to do so may cause damage and/or personal injury and will void the product warranty.

 
 Safety Instructions

Any maintenance and repair work must be carried out by trained experts. Failure to do so may result in the failure of the TPMS sensor. THINKCAR does not assume any liability in case of faulty or incorrect installation of the unit.

CAUTION

- ✓ When mounting/dismounting the wheel, follow the operation guideline of wheel change manufacturer strictly.
- ✓ Do not race with the vehicle on which the LTR-01 RF sensor is mounted, and always keep the drive speed under 240km/h.
- ✓ To guarantee optimal performance, the sensors may only be installed with original valves and accessories provided by THINKCAR.
- ✓ Make sure to program the sensors using THINKCAR-specific TPMS tool prior to installation.
- ✓ Do not install programmed TPMS sensors in damaged wheels.
- ✓ After installing the TPMS sensor, test the vehicle's TPMS following the steps described in the original manufacturer's user manual to confirm proper installation.

Components & Controls




Technical Parameters	22g
Weight	22g
Dimension(L*W*H)	About 71.5*40*15mm
Working Frequency	433.92MHz/315MHz
IP Rating	IP67

When replacing or servicing the sensor, please only use the original valves and accessories provided by THINKCAR to ensure proper sealing. It is mandatory to replace the sensor if it is externally damaged. Always remember to lighten the nut to the correct torque of 4N·m.

Installation Steps

1. Loosening the tire

 Remove the valve cap and nut and deflate the tire. Use the bead breaker to break the tire bead



▲ Caution: The bead loosener must be facing the valve.

2. Dismounting the tire

Clamp the tire on the tire changer, and adjust the valve at 1 o'clock to the tire fitting head. Use the tire tool to dismount the tire bead.



⚠ Caution: Always observe this starting point during the whole dismounting process.

5. Remounting the tire

Place the tire on the rim, ensure that the valve starts on the opposite side of the rim from the tire fitting head. Mount



A Caution: Studies of follow-up manufacturing

Warranty

The sensor is guaranteed to be free from material and manufacturing defects for a period of twenty-four (24) months or for 31000 miles, whichever comes first. This warranty covers any defects in materials or workmanship under normal use during the warranty period. Excluded from the warranty are defects due to improper installation and usage, induction of defect by other products, damage due to collision or fire failure.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a different power outlet.
- Plug the equipment into a different power outlet.
- Consult the equipment manufacturer.

When the FCC notices that a particular piece of equipment is causing interference, it may require the manufacturer to take the following steps:

- (1) The device must accept any interference that is received, including interference that may cause undesired operation.
- (2) The device must not cause interference to any other equipment.

Devices that comply with FCC rules are labeled as FCC compliant. FCC compliance limits set forth the maximum amount of interference that a device can cause in an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC Statement

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada.

L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage,
et (2) l'utilisateur de l'appareil doit accepter tout brouillage

This equipment should be installed and operated with a

Cet équipement doit être installé et utilisé à une distance minimale de 20 centimètres entre le radiateur et radiator and your body.

voire corps.