

折叠尺寸:98\*64mm 展开尺寸685\*192mm  
80g双胶纸

C:0/M:85/Y:95/K:0

PANTONE COOL GRAY 8C



## 1MORE TWS Q21 User Guide

www.imore.com

IC: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The present appliance is not conforme au CRD d'Industrie Canada aux appareils radio exempts de licence.

(3) L'opérateur doit prendre des mesures pour empêcher le bruitage, et

(4) l'opérateur doit faire fonctionner l'appareil.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil est conforme à la classe B avec ICES-003 de Canada.

This device complies with FCC rules part 15, IC SAR values at a typical operating near the body. To ensure that IC exposure levels below the levels tested, all accessories with this equipment to maintain a minimum separation distance of 0 cm from the body. If you do not use the accessories close to the body that do not meet these requirements are not consistent with the SAR limits and it is illegal to use them.

Ce dispositif a été testé pour la conformité avec les valeurs SAR d'un fonctionnement typique près du corps. Pour assurer que les niveaux d'exposition IC sont inférieurs aux niveaux testés, tous les accessoires avec cet équipement doivent maintenir une séparation minimale de 0 cm entre le corps de l'utilisateur et l'appareil. Ces accessoires ne doivent pas être utilisés à moins d'une distance d'un mètre de l'utilisateur, car les exigences SAR peuvent ne pas être respectées.

Cette exposition peut être réduite en utilisant des accessoires qui ne sont pas compatibles avec les limites SAR et il est conseillé d'éviter leur utilisation.

FCC: What should I do if the earphones aren't power on?




Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

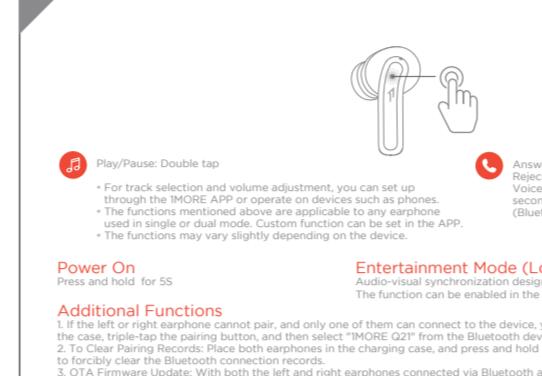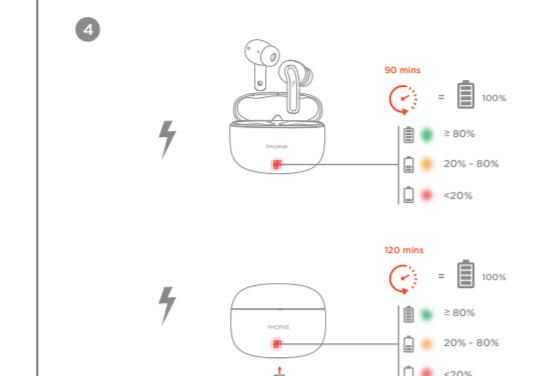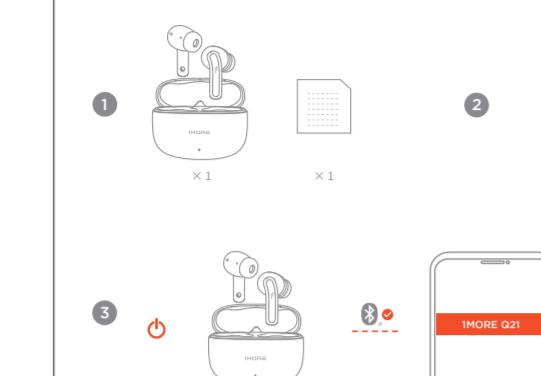

**1MORE (1) Year Limited Warranty**  
All products bearing this symbol are waste electrical and electronic equipment (WEEE) as directive 2012/19/EU which means that they must not be disposed of as household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment or return it to the manufacturer. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the authorities for more information about the location as well as terms and conditions of such collection points.  
WEEE symbol:

**VEEE**  
All products bearing this symbol are waste electrical and electronic equipment (WEEE) as directive 2012/19/EU which means that they must not be disposed of as household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment or return it to the manufacturer. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the authorities for more information about the location as well as terms and conditions of such collection points.  
VEEE symbol:

**FCC**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

**Caution!**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

C-2462-Q21  
The device has been granted an exemption under one part of Device types S31 -FCC ID: 2ASDH-Q21 has also been tested against this SAR limit, the testing distance of head is 0 mm.

NOTE: These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

4. Bluetooth connection is unstable, resulting in interruptions?  
① Shatter the distance between the device and earphones, avoid any physical obstructions.  
② Turn on the earphones and the device to connect again.  
③ Why do some functions differ from the user guide when using third-party music app?  
④ The earphones are not charged enough.  
⑤ Is the earphone case damaged?  
⑥ It is recommended to use the music player that comes with the brand's phone system.  
⑦ For more detailed product usage visit, the "Technical Support" section on the official IMORE website.

**Safety Caution**  
Do not expose batteries or battery cases to excessive heat such as sunshine, fire or the like.

CE: TinLab Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/35/EU.

The power delivered by the charger shall be between 5.2W and 5.5W required by the radio equipment, and max 50W in order to achieve the maximum charging speed.

开机 8.05s

Specifications are based on laboratory testing data.

**Warning**  
Warning of a battery with an incorrect type that can defeat a safeguard (such as catching fire, explosion, leakage of compressed gas, etc.) and cause personal injury.

Disposal of batteries or battery cases into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion, leakage of compressed gas, or fire, and cause personal injury.

For maximum safety, please use the original earphones and earbuds provided by the manufacturer.

3.0TA 防爆耳塞: 右耳机蓝牙连接且电量不低 50% 时, 可直接在 IMORE APP 中开启防爆模式。

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

4. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

5. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

6. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

7. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

8. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

9. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

10. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

11. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

12. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

13. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

14. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

15. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

16. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

17. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

18. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

19. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.

After connecting successfully, click the icon next to the connected device name and ensure the "Media/Audio" option is selected.

4. Connect the headphones to an Android device.

After connecting successfully, click the icon next to the connected device name and ensure the "Phone Audio" option is enabled.

20. What should I do if the earphones don't work?

Please ensure the headphones have power if not, charge them for at least 30 minutes before turning on.

3. Connect the headphones to the device.