





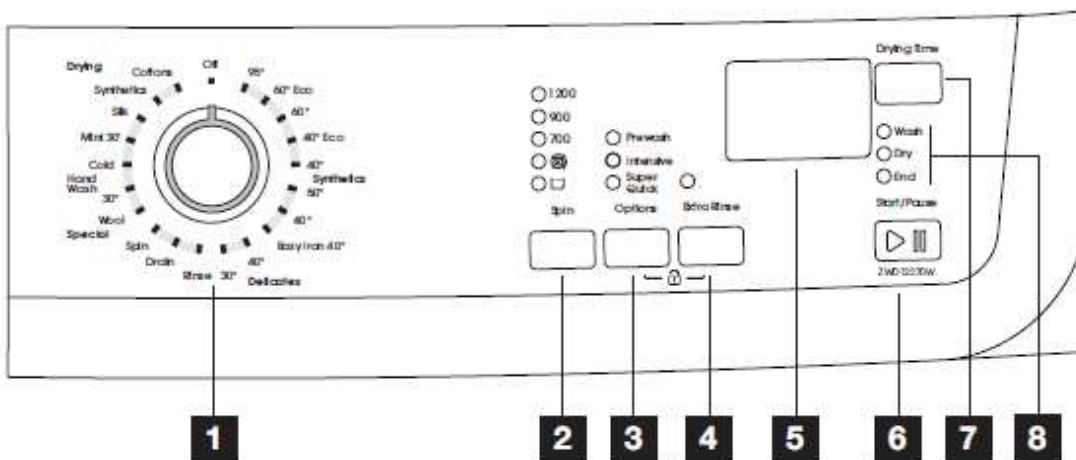
Operating Instructions – Zanussi Washer Dryer ZWD12270W

Detergent dispenser drawer

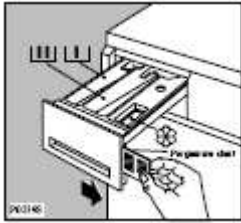

-  Prewash
-  Main wash
-  Fabric softener

Control panel and functions



1 – PROGRAMME SELECTOR DIAL & ON/OFF SWITCH

Allows you to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anti-clockwise.

2 – SPIN REDUCTION BUTTON

Press the spin button repeatedly to change the spin speed to a speed different from the one suggested by the washer/dryer or to select the 'NO SPIN' or the 'RINSE HOLD' option. The relevant light will light up

3 – OPTIONS BUTTON

By pressing this button you can select one of the following options: Pre-wash, Intensive, Super Quick. The relevant light will light up.

4 – EXTRA RINSE BUTTON

By pressing this button the machine will perform additional rinses

5 – DISPLAY

The display shows information about the programme: duration of the selected programme, selected drying time, incorrect option selection, alarm codes, heating phase, child safety lock and end of programme

6 – START/PAUSE BUTTON

This will start the selected programme and you can also PAUSE a programme by pressing this button

7 – DRYING TIME BUTTON

By pressing this button you can select a timed programme for cotton or synthetics, the relevant light will illuminate

8 – PROGRAMME PROGRESS DISPLAY

The different pilot lights illuminate during the washing phase, the drying phase and at the end of the cycle

Maximum load for cottons = 6kg

Maximum load for synthetics = 3kg

Maximum load for delicates = 3kg















Maximum load for synthetics, easy iron = 1kg











Maximum load for wool = 2kg

Maximum load for hand wash = 2kg

Maximum load for silk = 1kg

Programme Table

Programme/ Temperature	Type of laundry	Options	Description of programme
Cottons 95°	White cotton (heavy soiled cotton items): e.g. sheets, tablecloths, household linen, towels.	Spin red.   Prewash, Intensive, Super Quick, Extra rinse	Main wash at 95°C 3 rinses Long spin at max speed
Cottons 60° Eco	White and fast coloured cotton (normally soiled cotton items): sheets, household linen, underwear.	Spin red.   Prewash, Extra rinse	Main wash at 60°C 3 rinses Long spin at max speed
Cottons 60° - 40°	Coloured cotton lightly soiled, shirts, blouses, towels, underwear	Spin red.   Prewash, Intensive, Super Quick, Extra rinse	Main wash at 60° - 40°C 3 rinses Long spin at max speed
Cottons 40° Eco	Coloured cotton lightly soiled, shirts, blouses, underwear.	Spin red.   Prewash, Extra rinse	Main wash at 40° 3 rinses Long spin at max speed
Synthetics 50° - 40°	Synthetic or mixed fabrics, underwear, coloured garments, non-shrink shirts, blouses.	Spin red.   Prewash, Intensive, Super Quick, Extra rinse	Main wash at 50° - 40° 3 rinses Short spin at 900 rpm
Synthetics Easy iron 40°	Synthetic or mixed fabrics to be gentle washed and spun	Spin red.   Prewash, Extra rinse	Main wash at 40° 4 rinses Short spin at 900 rpm
Delicates 40° - 30°	Delicate fabrics, for example curtains	  Prewash, Super Quick Intensive, Extra Rinse	Main wash at 40°-30°C 3 rinses Short spin at 700 rpm

Wool 40°	Programme for wool «Pure new wool, non- shrink, machine washable» label.	Spin red.,  , 	Main wash at 40° 3 rinses Short spin at 900 rpm
Handwash 30° - Cold	Special programme for hand washing fabrics	Spin red.,  , 	Main wash at 30° - Cold 3 rinses Short spin at 900 rpm
Mini 30' 30°	Short cycle for lightly soiled fabrics		Main Wash at 30°C 2 rinses Short spin at 700 rpm
Silk 30°	Silk items to be gentle washed and spun.	 , 	Main wash at 30°C 2 rinses Short spin at 700 rpm
Rinse	Separate rinse cycle for hand washed cotton items.	Spin red.  ,  Extra rinse	3 rinses Long spin
Drain	For emptying out the last rinse water in programmes with the Rinse Hold  option.		Draining of water
Spin	Separate spin for cottons.	Spin red.	Drain and long spin

Drying programmes

Degree of drying	Type of fabric	Max Load	Spin speed	Drying time mins
Extra dry Ideal for: laundry materials	Cotton and linen (bathrobes, bath towels, etc.)	3 kg	1600 rpm	90
			1400 rpm	95
			1200 rpm	100
		1.5 kg	1600 rpm	50
			1400 rpm	55
			1200 rpm	60
Store dry (*) Suitable for items to put away without ironing	Cotton and linen (bathrobes, bath towels, etc.)	3 kg	1600 rpm	80
			1400 rpm	85
			1200 rpm	90
		1.5 kg	1600 rpm	40
			1400 rpm	45
			1200 rpm	50
Iron dry Suitable for ironing	Synthetics and mixed fabrics (jumpers, blouses, under- wear, household linen)	2 kg	900 rpm	75
			900 rpm	40
	Cotton and linen (sheets, tablecloths, shirts, etc.)	3 kg	1600 rpm	65
			1400 rpm	70
			1200 rpm	75
		1.5 kg	1600 rpm	35
			1400 rpm	40
			1200 rpm	45




Programme Information

ECO PROGRAMMES	This programme can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This obtains a good washing efficiency by saving energy
WOOL & HANDWASH	Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics with the hand wash care symbol
SILK	Delicate washing programme suitable for silk and mixed synthetics. Washing temperature is only 30°C. The maximum spin speed is automatically reduced to 700rpm
EASY IRON	On this programme laundry is gently washed and spun to avoid creasing, thereby making ironing easier.
MINI 30	This is a special programme at 30°C, suitable for laundry to be freshened up
RINSE	Use this programme to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final spin at maximum speed. The spin can be reduced by pressing the spin button.
DRAIN	For emptying out the water of the last rinse in programmes with the rinse hold option. Firstly, turn the programme selector dial to 'OFF', then select programme DRAIN and press the START/PAUSE button
SPIN	Separate spin for hand washed garments and after programmes with RINSE HOLD option. Before selecting this programme the selector dial must be turned to OFF. You can choose the spin speed to adapt it to the fabrics to be spun
OFF = CANCELLING	To reset a programme and to switch off the machine turn the selector dial to OFF. Now a new programme can be selected.

Operating sequence

1 Load the laundry



- 2 Measure out detergent – Pour required amount of detergent into main wash compartment . If you wish to carry out a prewash, pour detergent into prewash compartment .
- 3 Measure out fabric softener – If required pour fabric softener into compartment marked , without exceeding MAX level.
- 4 Switch the machine on – the display will show a blinking zero or three blinking dashes.
- 5 Select desired programme/fabric – Once a programme is selected, the relevant phase indicator lights will come on and the duration of the programme will appear on the display.
- 6 Select temperature – The appliance will suggest a temperature for the programme, if you wish to change it press the temperature button.
- 7 Select Spin Speed or Rinse Hold
- 8 Select the desired Options
- 9 Set the delay – Pressing the delay button repeatedly will increase the delay time, which will appear on the display for 3 seconds.
- 10 Start the programme – press the Start/Pause button



How to change an option or programme during the cycle

First press the Start/Pause button. If the programme is running, you will have to cancel the programme and select a new one. The cycle will resume from the beginning and the water in the tub will not be emptied. If it is necessary to drain the water, press the Skip/Reset button repeatedly until only the Drain light is on, then re-start the machine.

How to cancel a programme during the cycle

Pause the machine with the Start/Pause button. Press the Skip/Reset button repeatedly until the display shows three blinking dashes.

How to open the door during the cycle of a programme

It is possible to open the door of the machine while it is paused providing;

- The machine is not in the heating phase beyond 55°C
- The water level is not too high
- The drum is not turning

Otherwise, if it is absolutely necessary to open the door, switch the machine off and wait 3 seconds. Be careful of the level and the temperature of the water in the machine! Upon restarting, the cycle will resume where it was interrupted.

End of programme

The machine stops automatically and the Start/Pause light goes off. If the Rinse Hold option was selected, the Rinse Hold light remains lit to indicate the water must be drained.

Drying

Drying 3kg of Cottons (which has just been washed)

1. Load the laundry
2. Turn the selector dial to 'COTTONS' programme in the 'DRYING' sector
3. Depress the 'DRYING TIME' button until the time you want appears on the display
4. Press the START/PAUSE button to start the programme
5. At the end of the programme, the buzzer sounds. Three flashing zeros '0:00' will appear on the display. At this point an 'ANTI CREASE' phase, which lasts for about 10 minutes, will start. The door can be opened only at the end of this phase.
6. Turn the selector dial to the OFF position to switch the machine off. Remove the laundry

NOTE: If you wish to open the door before the anti crease phase or to interrupt it, press any key or turn the programme selector dial to any programme position (except OFF) and the door can then be opened immediately

Auto drying 2kg of synthetics (NON STOP programme)

For non-stop programmes it is essential that you do not exceed the maximum load sizes of 3kg for cotton and 2kg for synthetics

1. Load the laundry
2. Add detergent and fabric softener
3. Switch the machine on by turning the selector dial to the selected wash programme/fabric
4. Select the drying times
5. Select the required options by using the relevant buttons. If possible do not select a spin speed lower than that suggested by the machine, to avoid too long a drying time.
6. Start the programme by pressing the START/PAUSE button
7. At the end of the programme, turn the selector dial to the OFF position to switch the machine off. Remove the laundry.