



Chefmaster 6ltr Soup Kettle

Instruction Manual

Model

HEA776 – Black 6ltr Soup Kettle

HEA777 – Stainless Steel 6ltr Soup Kettle

Thank you for purchasing your Chefmaster Soup Kettle. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Always position on a flat stable surface
- Repairs should always be carried out by a qualified technician
- Do not operate this product without water in the outer container
- Keep lid closed when not serving
- Do not move this product when it contains hot liquid
- Do not use this product outside
- Do not carry when hot
- Always switch off and unplug the unit before cleaning
- Move by holding the product by the base
- Always store flat and do not store products on top of it
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children.

Pack Contents

- 1 x Chefmaster Soup Kettle
- 1 x Lid
- 1 x Magnetic label strip
- 14 x Contents labels

Before Use

- Remove all packaging including all protective plastic, from your Chefmaster Soup Kettle
- Position on a flat surface
- Fill the outer container with 400ml of water
- Insert the outer container
- Plug your Chefmaster Soup Kettle into the mains
- The soup kettle will now be ready to turn on

Operation

- Ensure the soup kettle is plugged in and the power is on
- Select the setting you require (Between 1 – 12)
- To maintain temperature use the lowest setting possible

Cleaning & Maintenance

- Before cleaning disconnect the soup kettle from the electricity supply.
- The exterior of the soup kettle should be cleaned with a warm, damp cloth
- The collar and inner container can be washed by machine
- DO NOT submerge the soup kettle in water or use water sprays to clean it
- Always clean your Chefmaster Soup Kettle daily
- It is recommended that fresh water is used every day

Troubleshooting

Fault	Possible Cause	Solution
The power indicator light is not on	The unit is not switched on The plug or lead are damaged The fuse has blown	Check the unit is plugged in and switched on Contact your Chefmaster distributor Replace the fuse
The unit is on, but is not heating	Thermostat is too low The heating element has failed	Adjust thermostat Contact your Chefmaster distributor

Transportation and Storage

Please handle your soup kettle with care to prevent any damage to the unit and internal parts. The soup kettle should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

HEA776 – Black 6ltr Soup Kettle

Voltage ~230v 50/60Hz

Power 300watt

Weight 3.5kg

Dimensions 280 dia x 370mm

HEA777 – Stainless Steel 6ltr Soup Kettle

Voltage ~230v 50/60Hz

Power 300watt

Weight 3.5kg

Dimensions 280 dia x 370mm

- Chefmaster Soup Kettle is supplied with a 3 pin plug and lead with a 13 amp fuse
- Appliance must be earthed
- If in doubt contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have undergone a stringent testing process to ensure that they comply with all European standards and specifications.

All Chefmaster products carry the CE approval symbol.