


Product FAQ's

Q: How do you adjust the electric pedal assistance?

A: In manual shift mode, on the controller - short press the “+” or “-” button.

Lowest gear is **1**, highest is gear **3**. The default is gear **1** when the meter is turned on. **0** means neutral gear without power assistance.

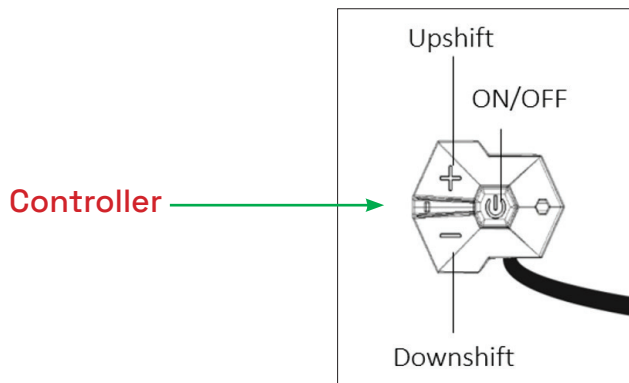

Q: How do you slow down and brake on the Bravo?

A: First, stop pedaling, then release the throttle and apply the brake by squeezing the brake lever on the left.

**Brake
Lever** →



Product FAQ's

Q: How do the lights work?

A: Long press the “+” button for 1 second, the system turns on the lights (supported by the controller) and switches to display day/night modes. Long press the “+” button for 1 second again, the system turns off the lights and switches the display mode.



Headlight

Q: How many speeds modes are there on the Bravo?

A: Three modes available.

Q: How far can you go on a Bravo?

A: Up to 90km.

Q: How heavy is a Bravo?

A: 26kg.

Q: What is the recommended age for riding Bravo?

A: Over 16.

Q: What is the load of a Bravo?

A: 30-105kg.

Q: How long does it take to charge a Bravo?

A: Charging time depends on the battery status; it takes up to 8 hour for a full charge from zero percent.

Q: How fast can Bravo go? *under good road condition and good weather condition

A: Up to 25km/hr.

Q: What is the motor power output for Bravo?

A: 250W.