

maxcom



TITAN
VALKIRIA

 
Content

1. Packing List	2
2. About the Smartwatch	3
3. About Smartwatch Keys	4
4. Charging Tips	5
5. Pair & Connect	6
6. Audio Settings	9
7. Customize Your Watch Face	16
8. Theme Setting	17
9. Settings on "Sports Modes with Smart Recognition"	17
10. Quality Guarantee	19
11. FAQs	19
12. To Download User Manuals in PDF	19
13. Technical Specifications	20
14. Key Safety Tips	20
15. Disclaimer	20

1. Packing List



Smartwatch with strap

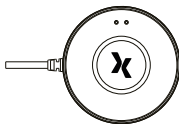

Charging cable



Warranty card

Quickstart manual

2. About the Smartwatch



3. About Smartwatch Keys

1) Power Key:



Press and hold for 2 seconds to turn on/off the smartwatch.

Short press to turn on/off the display.

2) Back key:



Short press to return to the previous menu.

Short press the Home screen to turn on/off the display.

3) Sport key:

a. Short press to enter Sports Modes.

After entering a sports mode, press and hold for 2 seconds to end it and save sports record.

b. Double-click to enter Voice Assistant.

Press and hold for 2 seconds to use Emergency SOS.

 


4. Charging Tips

- Please fully charge the smartwatch before using it.



- When charging the smartwatch, please keep the magnetic charging cable away from any metal conductor to prevent a fire.

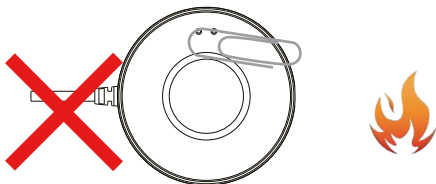

5. Pair & Connect

1) To install the App (GloryFit)

Two alternative ways to download the App

- a. Use your smartphone to scan the QR code below to download GloryFit.



Android



iOS



GloryFit

b. Enter "GloryFit" in App Store or Google Play to find and download the App.



App Store



GloryFit
Health & Fitness
★★★★★ 58



Google Play



GloryFit



GloryFir
CRREPA

Install

2) Pair and connect as follows

- a. When first using GloryFit , please allow it to access BT, location and grant other necessary permissions on your compatible smartphone.
- b. Enter "Connecting device" in GloryFit, find FW100 and tap "Pair".
- c. Allow GloryFit to access notifications of your compatible smartphone to connect the App with the smartwatch.
- d. Necessary notifications can be set in GloryFit for calls, text messages and applications.

6. Audio Settings

1) Setting BT Calling:

a. A maximum of 70 contacts of your compatible smartphone can be transferred to the smartwatch via GloryFit.

b. Set up Emergency Contacts in GloryFit

c. Tap  to turn on/off BT Calling.



d. Once BT calling is on, you can receive incoming phone calls on the smartwatch.

 


 
e. Once BT calling is on, you can also make phone calls directly on the smartwatch.



f. For users with an Android smartphone or an iPhone below iOS 15.0 to enable BT calling, please connect BT audio of the smartwatch as follows:


Steps to enable BT calling on iPhone:

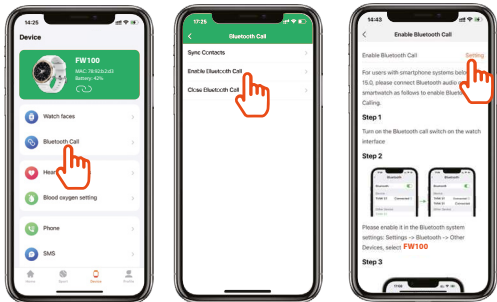


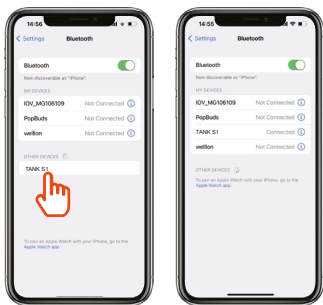


Steps to enable BT calling on Android smartphones:

 Step I: Once you've connected your smartwatch with the App, please tap "Pair" in the BT pairing request to enable BT Calling.

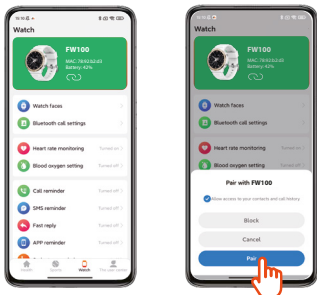

  Step II: Once you've connected your smartwatch with the App, please operate as follows to enable BT calling if you don't find the BT pairing request or you've tapped "Cancel" by mistake.

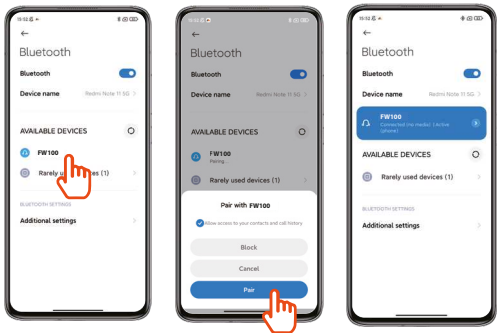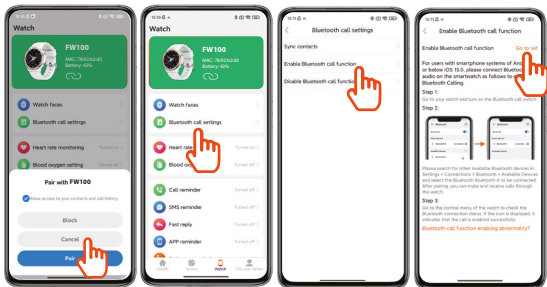

2) Setting Up Multimedia Audio:

a. Enter Settings → Sound settings. Turn on Media Audio and Ringtone to sync and play audio on the smartwatch from your compatible smartphone.





b. Open "Music" on the smartwatch to play music from your compatible smartphone.



7. Customize Your Watch Face

1). Touch and hold the watch face for 2 seconds to quickly switch from one face to the next.



2). Setting Always-on Display

Enter Settings → Always-on Display and turn on Always-on Display.



8. Theme Setting

Tap  to quickly switch between themes.

 


9. Settings on "Sports Modes with Smart Recognition"


Enter Settings → Sport recognition and turn on Sport recognition to enable the smartwatch to sense five sports movements automatically – walking, running, cycling, elliptical and rower.



- a. Walking can be activated by a continuous walk for 10 minutes.

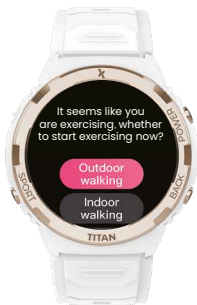

 - b. Cycling can be activated by a continuous cycling for 10 minutes.

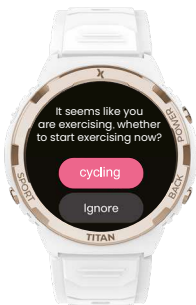

c. Running, Elliptical and Rower can be activated by continuous exercises for 3 minutes in running, on an elliptical trainer, and a rowing machine respectively.



13. Specification

Model	FW100 Titan Valkiria
Screen	1.3" AMOLED 360×360
Battery	300 mAh
Waterproof class	IP69K & 5ATM
Housing	ABS/TPU reinforced/stainless steel
Dimensions	48×45.3×13.2 mm
Strap	Silicon 20 mm

Frequency	2402-2480MHz
Power (EIRP)	BT: 2.91dBm; BT LE: -2.70dBm

(EN) CONDITIONS OF USE AND SAFETY

NOTE: reading the following rules will minimize the risk of improper use of the device

- **USE:** the device emits an electromagnetic field that may have a negative impact on other electronic devices, including medical equipment.
- The device and its accessories may contain small parts. The device and its components should be kept out of the reach of children.
- **SERVICE:** do not make any repairs or modifications yourself, any faults should be removed by a qualified service.
- **CLEANING:** The device must not be cleaned with chemical or corrosive substances.
- **ELECTRONIC EQUIPMENT:** To avoid the risk of demagnetization, do not allow electrical devices to be near your device for long periods of time.
- **WATER RESISTANCE:** IP65 class means resistance to splashes, IP67 means resistance to short-term getting wet, IP68 means the possibility of immersion at a depth of 1 m for up to 30 minutes (static), IP69 means the possibility of swimming and other water activities, excluding the sauna.
- **DUST-PROOF:** The device is dust-proof,
- **DISPLAY:** avoid putting too much pressure on the display and using sharp tools, as this may damage it.
- Do not short-circuit the charging cable with metal objects as this may result in a short circuit, damage to the power supply or a fire.
- Do not expose the device to low or high temperatures, direct sunlight or high humidity. The device must not be placed near a heating installation, e.g. a radiator, radiator, oven, central heating stove, fireplace, grill, etc.
- Do not expose the Device to intense sunlight for long periods of time

If the device does not work properly, have it repaired at the nearest authorized service center or file a complaint with the seller. The manufacturer is not responsible for defects caused by the user as a result of improper use or non-compliance with the operating instructions.