



ROG STRIX

POWER SUPPLY UNIT

Quick Start Guide (English)

快速使用指南（繁體中文）

快速使用指南（简体中文）

クイックスタートガイド (日本語)

Guide de démarrage rapide (Français)

Schnellstartanleitung (Deutsch)

Guida rapida (Italiano)

Краткое руководство (Русский)

دليل التشغيل السريع (العربية)

Guia de Início Rápido (Português do Brasil)

Vodič za brzi početak (Hrvatski)

Rychlý průvodce (Čeština)

Beknopte handleiding (Nederlands)

Οδηγός γρήγορης εκκίνησης (Ελληνικά)

Gyors üzembe helyezési útmutató (Magyar)

Panduan Singkat (Bahasa Indonesia)

간단사용설명서 (한국어)

Przewodnik szybkiego startu (Polski)

Ghid de pornire rapidă (Română)

Guía de inicio rápido (Español)

Kratko uputstvo za početak (Srpski)

Vodič za hitri začetek (Slovenščina)

Snabbstartshandbok (Svenska)

Hızlı Başlangıç Kılavuzu (Türkçe)

Contents

English	3
繁體中文	6
简体中文	9
日本語	12
Français	15
Deutsch	18
Italiano	21
Русский	24
العربية	27
Português do Brasil	30
Hrvatski	33
Čeština	36
Nederlands	39
Ελληνικά	42
Magyar	45
Bahasa Indonesia	48
한국어	51
Polski	54
Română	57
Español	60
Srpski	63
Slovenščina	66
Svenska	69
Türkçe	72

Conventions used in this guide

To ensure that you perform certain tasks properly, take note of the following symbols used throughout this manual.



DANGER/WARNING: Information to prevent injury to yourself when trying to complete a task.




NOTE: Tips and additional information to help you complete a task.

Product overview



The device illustration is for reference only. Actual product specifications may vary with models.

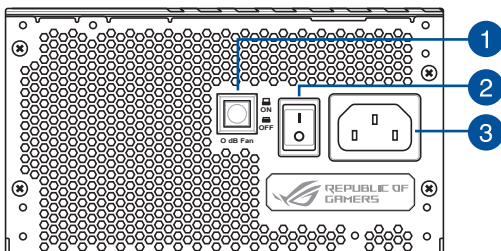

1

0 dB Fan button*

3

Power connector

2

Power switch

* Pressing this button will turn off the 0dB function, allowing the PSU fan to spin at all times.

Installing your ROG STRIX Power Supply Unit




Before installing or removing cables, ensure that the system is turned off, and all power cables for the system and all attached devices are unplugged.

1. Follow the directions of your chassis manual and secure your ROG STRIX power supply unit into your chassis using the mounting screws.
2. Connect the bundled cables to your ROG STRIX power supply unit.
3. Connect the power connectors to your motherboard and peripheral devices according to your preference. You may refer to the list below to check which devices each power connector can be connected to.



- The power connectors may vary between different models of ROG STRIX Power Supply Units.
- Refer to your motherboard's user manual for more information on the location and connecting the power connectors mentioned below.

- Connect the 24-pin or 20-pin **Main Power Connector** to the motherboard's 24-pin or 20-pin power connector.
 - Connect the 4+4 pin **CPU +12V Power Connector** to the CPU power socket on the motherboard.
 - Connect the 4-pin **Peripheral Power Connector** to peripheral devices if needed.
 - Connect the 6+2 pin **PCI-E +12V Power Connector** to the PCI-E graphics card.
 - Connect the **SATA Power Connector** to devices with a Serial ATA interface.
4. Connect your ROG STRIX Power Supply Unit to a power source using the bundled power cord.
 5. Flip the **Power Switch** to the "I" position to turn on your power supply unit

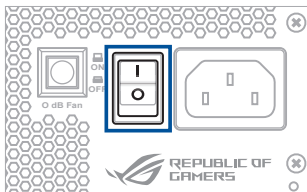

Safety information

- High voltages are present in the power supply unit, it is extremely dangerous to open the power supply case or attempt to repair/clean the power supply unit. You should **NEVER**, under any circumstances, open the power supply unit.
- The Warranty will become void if the cover of the power supply unit is opened; there are no serviceable components inside the power supply unit.
- **DO NOT** insert any objects into the power supply unit.
- **DO NOT** place any objects in front of the fan or the ventilation area of the power supply unit that may obstruct or restrict the airflow.
- **USE ONLY** the modular cables bundled with the power supply unit.
- **DO NOT** use the power supply unit near water, or in high temperature or high humidity environments.
- The power supply unit should be operated in suitable environment.
(Operating temperature: 0° to 50°C, Relative Humidity: 20% to 80%)
- The power supply unit is for integration into a computer, and not intended for external or outdoor usage.
- Failure to comply with any manufacturer instructions and any of the safety instructions will immediately void all warranties and guarantees.

Notice labels

