

Induction Cooker

USER MANUAL TIH-1500G-BL

 


- ◆ Please read the user manual carefully before using and retain it in a safe place for future reference.
- ◆ This product is for household use only.
- ◆ Some illustrations in this manual may not match with the real object, just for reference only.

Product Configuration



Control Panel

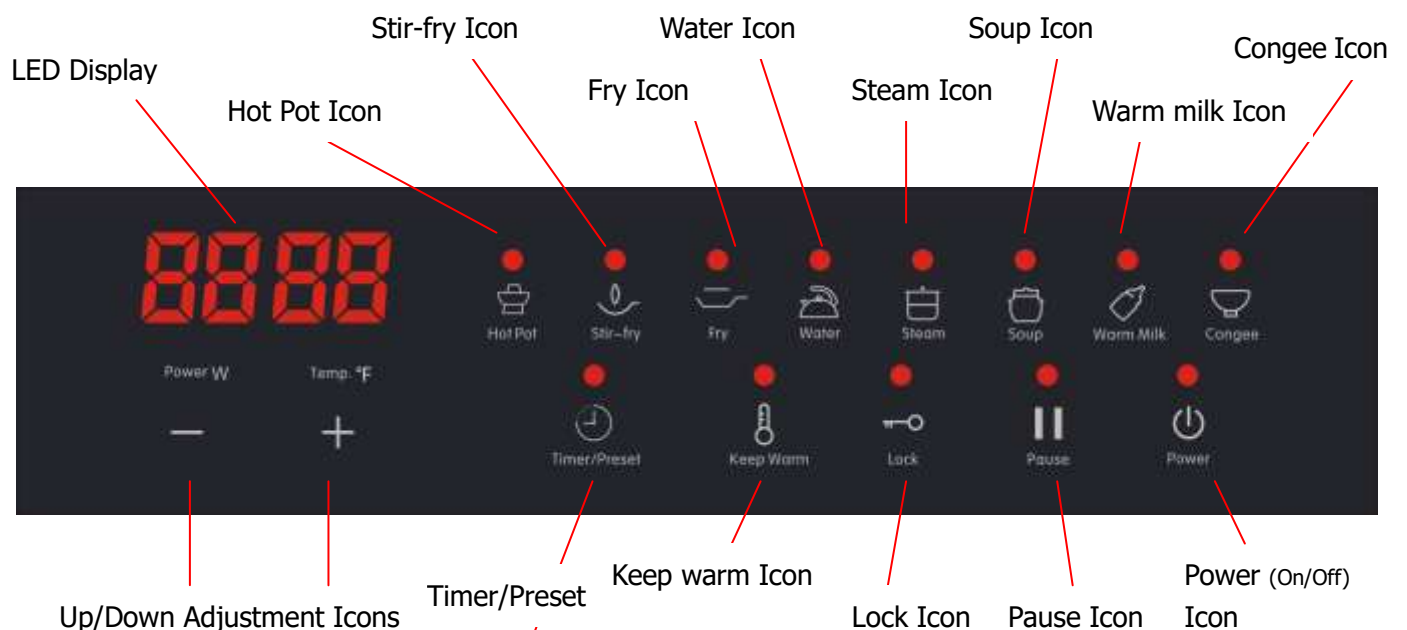

1. Safety Caution

Warning:

Switch off the induction cooker in case of any crack on the cook-top panel.

1. Do not place the unit in any place that is near gas or hot environment in order to avoid damages or malfunction.
2. To reduce the risk and damage, this plug should be fit into an individual outlet. The rated electrical current is not less than 15A.
3. Place the unit on a level surface, the distance between it and its background surrounding must be not less than 4 inches.
4. Do not immerse the appliance and electric cord in water liquid, or allow liquid to go into the cabinet and get short/contact inner electrical parts, the power cord must be plugged out before cleaning.
5. Do not cover gas vent with anything during cooking, otherwise it will cause danger.
6. To avoid danger, please uncap the cover before heating tinned food.
7. If it is still not working after the inspection by you, please immediately contact our service center, do not apart the unit to avoid any danger.
8. Be sure to use the power cord recommended by the appliance manufacturer after it is damaged.
9. It would get dangers when the metal gets heated directly or indirectly.
10. Do not place any metal on the plate, also the nonmetal pad within 4 inches.
11. Do not cook with an empty pot; it will cause malfunction or danger.
12. Always clean the unit to avoid any dirt goes into the fan to affect normal working.
13. Do not touch the plate while the unit is working, to avoid getting burned.
14. Do not let children operating alone to avoid getting burned or danger,
15. Who with cardiac pacemaker, please operating the unit after confirm with doctor there's no any affect.
16. Do not operate the unit on the gas stove or metal surface to avoid any danger.
17. Please do not place paper, cloth or other articles under the bottom of the pan to get heated, to avoid the danger of fire.
18. Do not place the unit on the cloth, carpet to avoid blocking the gas vent.
19. Please kindly avoid hitting the plate of the unit, in case of getting cracked, should turn off the unit and plug out immediately, and then contact with service points of our company.
20. Do not touch the control panel with any sharp implements.
21. Do not place any metal on the unit while operating.

2. Operating Instructions

- A. Connect the power cable to an available outlet.
- B. After inserting the plug into the socket, a "Beep" will sound and all the indicators flash a time. The indicator of **[Power]** will flash, indicating the appliance is in standby mode.
- C. Place a suitable cookware on the center of the cooking zone.
- D. To begin heating, press **[Power]** key once, the indicator of **[Power]** lights up and the display shows [ON]. Press the corresponding function keys to start operation.
- E. Stop the operation and switch to standby mode by pressing **[Power]** key while cooking.

2.1 Cooking Mode

2.1.1 Hot Pot: Press the [Hot pot] key and the indicator of [Hot Pot] lights up, display will show [1500] representing that the default power is 1500W. User can press [+] or [-] to adjust 8 power levels from 200W to 1500W (200W, 450W, 600W, 800W, 1000W, 1200W, 1300W, 1500W). To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.1.2 Stir-fry: Press the [Stir-fry] key and the indicator of [Stir-fry] lights up, display will show [464] representing that the default power is 464F. This function cannot be adjusted. To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.1.3 Fry: Press the [Fry] key and the indicator of [Fry] lights up, display will show [464] representing that the default power is 464F. User can press [+] or [-] to adjust 8 temperature levels from 176F to 464F (176°F, 248°F, 284°F, 320°F, 356°F, 398°F, 428°F, 464°F). To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.1.4 Water: Press the [Water] key and the indicator of [Water] lights up, display will show [00:20] representing that the appliance works under default power level and it is not adjustable. The default operation time is 20 minutes. To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.1.5 Steam: Press the [Steam] key and the indicator of [Steam] lights up, display will show [00:30] representing that the appliance works under default power level, where it cannot be adjusted. The default operation time is 30 minutes. A "Beep" will sound and the appliance will stop the operation and return to standby mode. To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.1.6 Soup: Press the [Soup] key and the indicator of [Soup] lights up, display will show [02:00] representing that the appliance works under default power level and it is not adjustable. The default operation time is 2 hours. To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.1.7 Warm Milk: Press [Warm Milk] key and the indicator of [Warm Milk] lights up, display will show [00:10] representing the appliance works under default power level and it is not adjustable. The default operation time is 10 minutes. To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.1.8 Congee: Press the [Congee] key and the indicator of [Congee] lights up, display will show [01:30] representing that the appliance works under default power level and it is not adjustable. The default operation time is 1 hour and 30 minutes. To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.1.9 Keep Warm: Press the [Keep warm] key and the indicator of [Keep warm] lights up, display will show [176] representing that the default temperature is 176F. User cannot adjust the levels. To cancel this mode, user can press other function keys or [Power] key to stop the operation.

2.2 Timer Function (Only for mode Hop pot, Fry, Stir fry and Keep warm):

User can set the cooking time when cooking mode is selected. Press the [Timer/Preset] key once to access the timer function, the indicator will light up. Display will show [02:00], user can press [+] or [-] to set the desired time, [+] for hour and [-] for minute. The time can be set from 0 minute to 2 hours and 59 minutes. After setting, user can press [Timer/Preset] key once to confirm or wait until the display stop flashing. When the countdown of timer ends, user can hear "Beep" sound and the appliance will stop the operation and enter standby mode automatically. To cancel this function, user can hold the [Timer/Preset] key for 3 seconds.

2.3 Pre-Set Timer (Delay Timer) Function (Only for mode Water, Steam, Soup, Warm Milk and Congee):

Press [Timer/Preset] when the unit is at standby mode, the display will show [02:00], it means the default pre-set time is 2 hours. User can press [+] or [-] key to set for the desired time; [+] key to increase and [-] to decrease (press and hold for 3 seconds to access quick adjustment), the timer can be adjusted from 1 minute to 23 hours 59 minutes. After started cooking time set, user can choose the desired program. When countdown of timer is down to "0", the unit will enter the cooking function. The unit is automatic to exit the setting state to the original working state when there is no operation within 5 seconds. If there is no operation in 1 min after Pre-set pressed, unit will go back to standby model.

2.4 Lock Function:

To activate the lock, user can press the [Lock] key and hold for 3 seconds. This will lock the appliance and all the function keys are not allowed to operate including [Power] key. Hold for 3 seconds to unlock.

2.5 Pause Function:

To activate Pause function, user can press the [Pause] key and the unit will stop working, display will show [-|-]. To cancel the function, press again the [Pause] key and the unit will go back to the selected mode.

Note:

When the unit is working at maximum power, it will reduce to 1200w in 3 minutes and then to 1000w in 5 minutes (after 8 minutes total). That is unit overheat protection function to ensure the unit is in normal working mode.

3. Selection of Cookware

3.1 Material required:

- ✧ Steel, cast iron, enameled iron, stainless steel, flat-bottom pans/pots with bottom diameter from 4.7 inches to 10.2 inches.
- ✧ The compatible cooking pot is required as suggested above, do not try to use other pot instead (especially pressure sensors vessels.). Please refer to following suggested cooking pot/cookware icon for this induction cooker.



Stainless Steel Pot
/Kettle



 
Iron Blast Pan



Magnetic Stainless
Steel Pan



Magnetic Stainless
Iron Pan



Iron Frying Pan

3.2 Please kindly refer to the requirement below when you use your own cookware instead of the cooking pot coming with this induction cooker,

- ✧ Pan/pot must be suitable for induction cooker.
- ✧ Pan/pot should be flat bottom and come with the lid with steam vent

4. Maintenance and Daily Care

1. Remove the power plug prior to clean the unit. Do not clean it until the surface cools down.
2. Glass plate, panel and the shell:
 - ① Soft cloth for slight stain.
 - ② For greasy, dirt, blot by using a clean damp cloth with neutral detergent.
3. While the radiator-fan working, dust and dirt would remain on the gas vent, please clean it by brush or cotton stick regularly.
4. Remember do not washing the unit by water directly to avoid damaging.
5. To protect induction cooker, be sure to have a good contact between plug and socket before using.
6. Do not pull out the power cord directly during operation. To extend the appliance's life, press the [Power] button first, and then pull out the power cord.
7. In order to make operating time longer, the fan would still working for cooling the plate, is better to plug out after the fan stops working.
8. Please pull out the power cord and put it away when not used for a long time.
9. Some models have structural design to against cockroaches, if needed, can put something like mothball to expel the cockroaches.

5. Troubleshooting

If any errors occur during operation, please check the following table before calling for service. Below are common errors and the checks to perform.

Symptoms	Check points	Solutions
After connecting the power and pressing the [Power] key, the appliance has no response.	Is the electricity in suspension?	Use after resuming the electricity.
	Is the fuse broken down?	Check the root causes carefully. If the problem cannot be fixed, please contact Service Center.
	Is the plug connected firmly?	
Heating being interrupted in normal use and a “Beep” will be heard.	Incompatible cookware or no cookware is used?	Replace compatible cookware for the induction cooker.
	Is the cookware not considerably placed form the center of the heating zone?	Place the cookware at the center of the defined heating zone.
	Is the cookware being heated but continually being removed?	Place a cookware inside the heating zone.
No operation during the heating being in use.	Is the cookware empty or the temperature too high?	Please check whether the appliance is being misused.
	Is the air intake/exhaust vent clogged or dirt has accumulated?	Remove the stuff clogging the air intake/exhaust vent. Operate the appliance again after cooling down.
	Is the cooker working over 2 hours without any external instruction?	Reset cooking modes or use timer function.
Error codes occur.	E0 Internal circuit error E1 Without cookware or Incompatible cookware used E2 Internal overheat E3 Over-voltage E4 Under-Voltage E5 Top plate sensor open/short circuit E6 IGBT sensor open circuit/short circuit E7 Top plate overheat	When showing error signal E1, E2 and E7, please check whether the cookware is not suitable, or switch on the appliance again after it is cooled down naturally. When showing E0, E3-E6, please contact Service Centre for checking and repairing.

If the above solutions cannot fix the problem, unplug the appliance immediately, contact Tatung service center for assistance. Note the error code and report it. **To avoid any danger and damage to the appliance, do not disassemble or repair by yourself.**

6. Product Specifications

Model	TIH-1500G-BL
Rated Voltage	120V/60Hz
Power	1500W
Unit Dimensions	11.4" x 14.5" x 1.7 " (290 x 370 x 43 mm)
Net Weights	5.3 lb (2.4kg)

7. Contact us

We appreciate your purchase of Tatung product.

If you have any questions or need assistance, please contact us at the following:

Tatung USA Service Center

2850 El Presidio Street, Long Beach, CA 90810, USA

Business Hours: Mon.-Fri. 8:00 am -4:00 pm (Pacific Standard Time)

Phone: (310) 637-2105 ext. 216, ext. 242

Email: service@tatungusa.com

www.tatungusa.com



 
4002064

Electric Household Cooking and Food Serving Appliances



電磁爐

TIH-1500G-BL

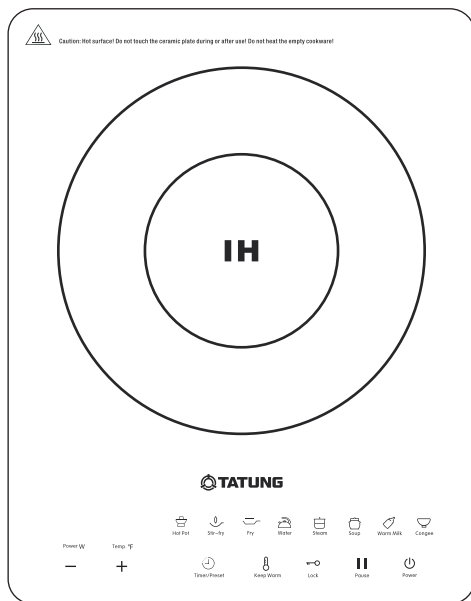

Induction Cooker

使用說明書

1. 安全注意事項

使用本產品時，請遵守下列安全注意事項

1.1 為了防止火災、灼傷和觸電

使用電磁爐前

1. 請確保當地使用的電壓與本產品上所標明的額定電壓相符。
2. 請使用獨立電源插頭。請勿使用延長線，以免因電力負荷過度而導致火警或危險。
3. 應把產品平穩放置於乾燥的地方，並與牆壁保持至少10公分的距離作散熱用途，及保持進風口及出風口暢通。

使用電磁爐時

1. 切勿過度加熱。（應使用低火力段預熱。）
2. 切勿乾燒空鍋，否則容易造成過熱、工作異常及面板變色等問題。
3. 切勿讓產品置於無人看管的狀態下運作。
4. 切勿將攜帶式氣體爐、石油氣罐及罐裝食品放在電磁爐面板上，以防止它們被錯誤加熱而造成爆炸。
5. 切勿在電磁爐運行時，將類似刀、叉、湯匙、蓋子、鋁箔或鋁盤等的金屬物或導磁性物品，以及蒸煮袋、磁性指環、手錶或飾物等放在面板上或面板附近，或接觸鍋具，否則可能造成該物品變熱。（物件被加熱時所產生的熱量會造成灼傷或受傷。）
6. 必須使用說明書內建議的合適鍋具，及確保鍋具整潔及底部平穩地置於面板上。否則可能造成該物品變熱。（物件被加熱時所產生的熱量會造成灼傷或受傷。）
7. 切勿令面板受到重壓或使重物墜落於其上。
8. 切勿讓面板受到外來的猛烈撞擊。

面板餘溫處理

1. 使用後面板會變熱，故短時間內切勿觸摸面板以免造成燙傷。
2. 請待冷卻後才清潔本產品。

*** 警告：如果面板使用時因收到外來的猛烈撞擊或因重物墜落而造成破損，切勿觸摸，應立即停止使用並關掉電源及拔除插頭，並聯絡大同專業服務中心進行檢查及維修，以免造成電擊、短路或火災等危險。

電磁爐相關注意事項

1. 切勿將易燃材料、噴霧劑及煙霧劑等放在產品下方或附近，有可能導致火災或爆炸。
2. 切勿讓不習慣操作本產品的人獨自使用本產品。
3. 切勿加熱密封的罐頭食品，以防罐頭內的氣體因受熱膨脹而發生危險。
4. 請時常留意烹調情況及溫度，避免過熱或乾燒。否則操作時可能因溫度過高，使產品的安全保護功能自動啟動並將電源截斷，影響烹調效果。
5. 使用本產品時如有孩童在旁，請加倍小心，切勿讓孩童單獨使用或將其置於孩童能觸及的地方；另外行動不便、心神喪失者，受到藥物及酒精影響的人，需有人在旁監督下才能使用。
6. 切勿將金屬物件（如針或金屬線）插入產品的進風口／出風口。
7. 切勿使用外置計時器或遙控系統來操作本產品。
8. 鍋具與面板中間不應夾雜其他物件，讓鍋具底部能夠直接受熱。
9. 產品內有高壓，切勿試圖拆卸、維修或改裝本產品，以免釀成意外。如須檢查或維修，請與大同專業服務中心聯絡。
10. 如果附帶的電線有破損，必須聯絡大同專業服務中心更換，以免發生危險。

使用電磁爐後

1. 請關掉本產品的電源及拔出其電源插頭，避免因長時間通電導致內部電子組件損毀，甚至引起火警。
2. 長時間不使用時，必須按電源鍵關掉產品。因機體尚有餘溫，待散熱風扇完全停止運作後才可拔掉電源插頭。切勿依靠面板感測器關掉產品。
3. 請保持產品清潔，並注意防蟲、防塵、防潮的保護，避免蟑螂等昆蟲進入電磁爐內部造成電路板短路。

 
1.2 防止火災或意外發生

為了避免發生意外，請注意下列事項


1. 在加熱時如果有食材或熱水噴濺出的現象，請使用低火力烹調並時刻注意食物烹調情況。
2. 如果有配戴心律調節器或去顫器的使用者，欲使用產品前請先諮詢醫生。
3. 保持鍋具平穩。（如果鍋具掉下來，可能會導致損傷或灼傷。）
4. 切勿將紙品等物放於鍋具下。（由於鍋具的熱量，紙品會燒焦。）
5. 遠離大量熱氣、蒸氣或濕熱地方；切勿將產品靠近水源使用，防止機身進水。

6. 切勿用水直接沖洗產品機身、電源線或插頭，讓它們接觸到水或讓液體滲入產品帶電部分；在清潔時亦不可把部份或整部產品浸入水中，以免影響產品的安全性能及造成觸電的危險。再次使用產品前，必須確保插頭已充分乾燥。
7. 必須小心使用電源線，不可在電源線上放重物或夾住電源線；不可改裝電源線；切勿用力拉扯或扭曲電線，在拔出或插入插頭時，要用手握穩插頭本身。拔出插頭前，必須確保電源已關上。
8. 切勿將電源線懸掛在桌子、櫥櫃的邊緣或令它接觸發熱的表面。切勿在電源線纏結的情況下使用本產品，否則會加快電源線的損耗。
9. 請勿於同一時間按兩個或以上的功能鍵，亦不要讓熱的物件和控制板接觸，因為這會令電磁爐出現錯誤的反應。
10. 切勿手濕操作產品、插入或拔除插頭。
11. 切勿將本產品用於烹飪以外的其他用途。（如果本產品用作烹飪以外的用途，則可能會發生故障。）
12. 切勿將本產品放置於任何金屬表面上使用。否則可能會損害產品本身，或造成火災等危險。
13. 請勿把電磁爐放置在地毯、檯布、紙品或墊子等軟物件上使用，以免堵塞進風口或出風口。（進風口／出風口被堵塞，會造成過熱以致電源自動關閉或引致其他災害）
14. 本產品只可作家庭使用，切勿在室外使用或用作說明書建議以外的其他用途。如不當使用本產品，或作（半）商業用途，或未依照使用手冊操作，維修保養將無效，本公司將不會承擔任何損壞的維修及賠償。
15. 當產品機身或零件出現故障或不能正常操作，切勿自行使用或更換其他非生產商授權的零件或配件，以免發生危險，否則維修保養無效。

2. 各部名稱

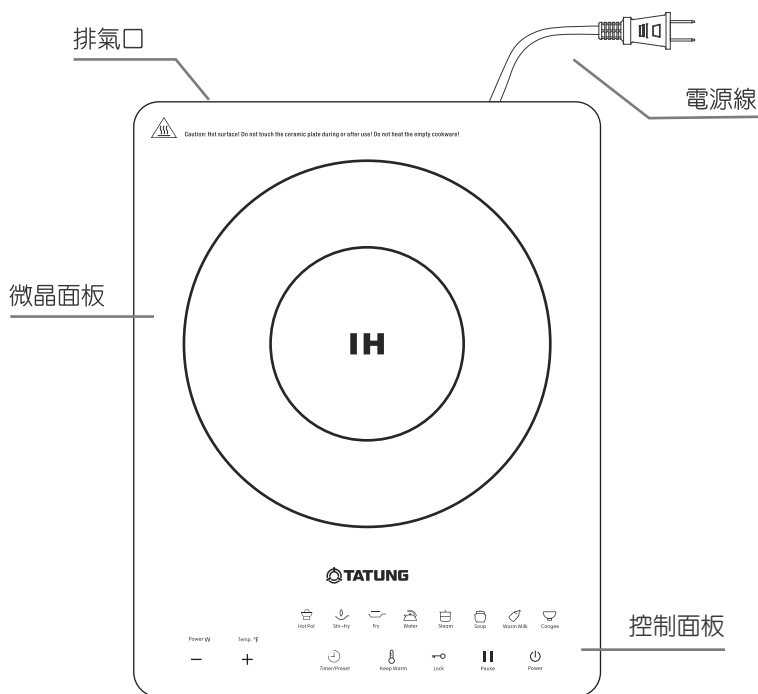

控制面板

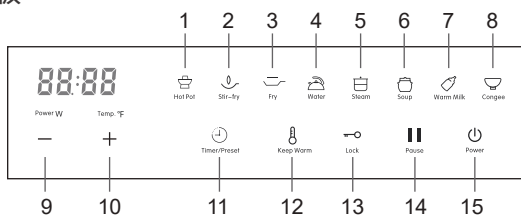 

- | | | |
|--------|---------|------------|
| 1. 火鍋鍵 | 6. 煲湯鍵 | 11. 定時/預約鍵 |
| 2. 炒菜鍵 | 7. 暖奶鍵 | 12. 保溫鍵 |
| 3. 煎炸鍵 | 8. 煲粥鍵 | 13. 安全鎖鍵 |
| 4. 煲水鍵 | 9. 減少鍵 | 14. 暫停鍵 |
| 5. 蒸煮鍵 | 10. 加大鍵 | 15. 電源鍵 |

3. 產品規格

規格 型式	電壓	消耗功率	額定電流	產品尺寸 (mm)	產品淨重 (KG)
	120V~ 60Hz	1500 (W)	12A	290x370x43	2.4

4. 操作說明

接上電源後，電磁爐發出“嗶”一聲，【開關】鍵的指示燈閃亮，表示產品進入待機狀態。將合適的鍋具放置於加熱範圍中央，按【開關】鍵一次，產品進入選擇模式，【開關】鍵的指示燈長亮，再按相應的功能鍵使用本產品。完成烹飪後可按【開關】鍵停止加熱，產品會回復待機狀態。

煮食功能

- 火鍋：按【火鍋】鍵一次，【火鍋】鍵的指示燈亮，顯示屏出現【1500】，此時火力指示燈會亮起，表示火鍋功能的預設火力為1500瓦。用戶可按【+】和【-】鍵調節火力，共有8段火力選擇。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。
- 炒菜：按【炒菜】鍵一次，【炒菜】鍵的指示燈亮，顯示屏出現【464F】，此時溫度指示燈會亮起，表示炒菜功能的預設溫度為464°F。用戶不可調節溫度擋位。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。
- 煎炸：按【煎炸】鍵一次，【煎炸】鍵的指示燈亮，顯示屏出現【464F】，此時溫度指示燈會亮起，表示炒菜功能的預設溫度為464°F。用戶可按【+】和【-】鍵調節火力，共有8段溫度選擇。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。
- 煲水：按【煲水】鍵一次，【煲水】鍵的指示燈亮，顯示屏出現【00：20】，表示煲水功能預設時間為20分鐘，此時火力指示燈會亮起，產品在預設火力下運作，用戶不可調節火力，完成後產品發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。
- 蒸煮：按【蒸煮】鍵一次，【蒸煮】鍵的指示燈亮，顯示屏出現【00：30】，表示蒸煮功能預設時間為30分鐘，此時火力指示燈會亮起，產品在預設火力下運作，用戶不可調節火力。完成後產品發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。

- 煲湯：按【煲湯】鍵一次，【煲湯】鍵的指示燈亮，顯示屏出現【02：00】，表示煲湯功能預設時間為2小時，此時火力指示燈會亮起，產品在預設火力下運作，用戶不可調節火力。完成後產品發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。
- 暖奶：按【暖奶】鍵一次，【暖奶】鍵的指示燈亮，顯示屏出現【00：10】，表示暖奶功能預設時間為10分鐘，此時火力指示燈會亮起，產品在預設火力下運作，用戶不可調節火力。完成後產品發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。
- 煲粥：按【煲粥】鍵一次，【煲粥】鍵的指示燈亮，顯示屏出現【00：30】，表示煲粥功能預設時間為30分鐘，此時火力指示燈會亮起，產品在預設火力下運作，用戶不可調節火力。完成後產品發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。
- 保溫：按【保溫】鍵一次，【保溫】鍵的指示燈亮，顯示屏出現【176F】，此時溫度指示燈會亮起，產品在預設火力下運作，用戶不可調節火力。保溫功能預設時間為120分鐘，完成後產品發出“嗶”聲後返回備用狀態。若要轉換模式可按其他功能鍵，或按【開關】鍵停止有關運作。

定時功能（只適用於火鍋、炒菜、煎炸模式）

若用戶需要設定烹煮時間，於選取所需的煮食模式後，按【定時/預約】鍵一次，【定時/預約】鍵的指示燈亮起，顯示屏會出現預設定時時間【00：00】。用戶可按【+】和【-】鍵調整設定時間，【-】鍵設定小時，【+】鍵設定分鐘（長按3秒可作快速調節），設定時間範圍由1分鐘至2小時59分鐘。

用戶可按【定時】鍵一次確認或等待顯示屏數字停止閃動。完成設定後，產品開始以倒數的方式顯示剩餘時間。當倒數結束，電磁爐會發出“嗶”聲後返回備用狀態。如需取消定時功能，可選擇長按【定時】鍵3秒，或按【開關】鍵返回備用狀態。

預約功能（只適用於煲粥、煲湯、煲水、暖奶及蒸煮模式）

於備用狀態下，按【開關】鍵進入選擇模式，再按【定時/預約】鍵一次，【定時/預約】鍵上方的指示燈亮起，顯示屏會出現預約時間【00：30】。用戶可按【+】和【-】鍵調整設定時間，【-】鍵設定小時，【+】鍵設定分鐘（長按3秒可作快速調節），預約時間範圍由1分鐘至23小時59分鐘。

設定時間後，用戶可選擇需要預約的煮食模式，對應的功能指示燈會亮起。產品開始以倒數方式顯示剩餘時間。當倒數結束，產品便會發出“嗶”聲後按指定的烹調模式開始運作。若1分鐘內未有選定烹調模式，設定將會自動取消並返回備用狀態。如需取消預約功能，用戶可長按【定時/預約】鍵3秒，或按【開關】鍵返回備用狀態。

暫停功能

在運作狀態下，按【暫停】鍵一次暫停加熱，【暫停】鍵的指示燈亮起，顯示屏出現【-||-】圖案，表示產品暫時停止加熱。用戶可按【暫停】鍵一次取消暫停功能。

安全鎖功能

在待機狀態下，安全鎖處於解鎖狀態。進入選擇模式或運作狀態下，按【安全鎖】鍵，使產品不能選擇功能、調節火力及時間。長按【安全鎖】鍵3秒可解鎖並重新進入運作狀態或選擇模式。

 
5. 鍋具選擇

5.1 合適的鍋具（使用磁鐵可以有效分辨鍋具是否帶有磁性）

1. 材質：鐵或導磁不鏽鋼底的鍋具。必須使用註明“適合電磁爐煮食”的鍋具。
2. 形狀：底部直徑必須在12-20公分範圍內的鍋具，並與面板接觸均勻。
3. 鍋具的重量（連盛載食物）不能超過5公斤。



不鏽鋼水壺



鐵製鍋



磁性不鏽鋼鍋



鐵製彩色鍋



磁性鐵製琺瑯壺



鐵板鍋

5.2 不合適的鍋具（磁鐵不能吸在鍋具底部）

1. 材質：非鐵質金屬、不鏽鋼（底部不能導磁）、陶瓷、玻璃、鋁或銅為底的鍋具。
2. 形狀：底部凹凸差距過大、有弧度、鍋底有腳、鍋具底部為圓形及底部直徑小於12公分或大於20公分。鍋具太輕，底部太薄或沒有明顯紋道亦不適合，因為鍋具可能於加熱過程中彎曲或移動。
3. 即使標示為可加熱用的陶製鍋具，可以用於電磁爐上加熱，也不建議使用。因本產品可能無法有效分辨鍋具是否有磁性而無法加熱、導致操作不穩定、影響煮食效果或令產品啟動其安全功能及出現錯誤訊息。



鋁製水壺



耐熱玻璃鍋



陶鍋



底部凹凸不平



鍋底直徑較小



鍋底附腳

6. 清潔與保養

1. 清潔前請關掉電源並拔出插頭。
2. 面板的清潔：面板骯髒時，用扭乾的濕布擦拭。如擦不掉時，用稀釋的中性廚房去污粉或清潔劑清潔後，再用濕布擦拭即可。
3. 機身的清潔：機身骯髒時，用柔軟濕布擦拭。如有油污難以清除時，用稀釋的中性廚房清潔劑清洗後，再用濕布擦拭即可。
4. 切勿使用蒸氣清潔工具進行清潔。
5. 電磁爐經過長時間使用後，進風口或出風口會積聚一些灰塵或油污，並可能影響電磁爐運作。請定期進行清潔，建議使用棉花棒擦拭。
6. 如有酸性食物（醋、果醬、帶有檸檬汁及梅子等食品）黏在面板上，請立即清潔，否則面板可能會褪色。
7. 如有任何塑膠物料、廚房用錫紙、糖類或含有糖的食品不小心融化於發熱的面板上，必須在面板是溫熱時，立即用柔軟濕布擦拭，否則冷卻後才清潔或會損壞面板。
8. 切勿把產品用水直接沖洗或浸入水中清洗。如果本產品內部零件受潮，可能造成故障或其他災害。
9. 切勿使用堅硬刷子刷洗爐面，並避免碰撞面板。
10. 切勿使用有機溶劑或苯等化學藥品擦拭產品及其面板／控制面板，以免產生化學反應。
11. 如長期不使用本產品，請拔下電源插頭，進行清潔後套上塑膠袋並收藏於乾燥的環境。切勿將電源線纏繞在產品四周或壓住電源線，避免造成電源線磨損或破裂。
12. 建議經常清潔鍋具底部及產品面板污穢，產品的面板可能會因使用不當（如使用不潔淨底部的鍋具加熱或加熱湯水外溢且未及時擦淨）而產生發黃、發黑或劃痕等現象，按說明書操作並做好日常保養，可以避免或減少此類現象發生。

7. 簡易故障排除

使用時，如發現產品有問題，在維修前請先對照下表進行檢查及處理方法。

故障現象	檢查要點	處理方法
接通電源後，按“電源”按鍵，產品無反應。	是否停電？	待電力恢復後使用。
	保險絲是否燒斷？	小心檢查原因。若有需要，請聯絡大同專業服務中心進行檢查及維修。
	電源線插頭是否鬆脫？	
開啓電磁爐後不加熱，並發出蜂鳴聲。	是否忘記放置鍋具或鍋具不適合？	放上或更換適合電磁爐使用的鍋具。
	鍋具是否置於不正確位置？	將鍋具放置於產品的陶瓷面板標示的位置上。
	加熱的鍋具是否經常被移走？	將鍋具放到適當的位置上。
在正常運作時產品停止操作。	是否加熱空鍋或食物溫度過高？	請檢查是否錯誤使用。可再重新開啓本產品。
	進風口或出風口是否被阻塞或堆積了髒物？	清除堵塞在進風口／出風口處的污物，並請保持通風口暢通。
	是否已超過2小時沒有進行功能切換操作指示？	請重新輸入所需的烹調指示或選用定時功能。
故障代碼。	E0 內部電路故障 E1 沒有放置鍋具/鍋具不適合 E2 產品內部溫度過高 E3 電壓過高 E4 電壓過低 E5 電磁爐爐面感測器開路或短路 E6 電磁爐IGBT感測器開路或短路 E7 爐面溫度過高	當出現E1、E2、或E7，請檢查是否鍋具問題，或待溫度下降后，再嘗試重新啓動本產品。 當出現E0、E5-E6時，請聯絡服務中心進行檢查及維修。

如果按照以上處理方法／操作仍然無法正常使用，請即時關閉電源開關，聯絡大同專業服務中心進行檢查及維修，並將故障代碼告知大同專業服務中心。切勿自行拆卸及修理產品，避免產生觸電危險及對產品造成損害。

大同公司客戶服務中心

服務時間: Mon-Fri., 8:30 am to 4:00 pm (Pacific Standard Time)

服務專線: 1-310-637-2105 ext 242, ext 216

email: service@tatungusa.com

公司地址: 2850 El Presidio Street, Long Beach, CA 90810 U.S.A

www.tatungusa.com



4002064