



B220 - M175/M185/M220

Setup Guide

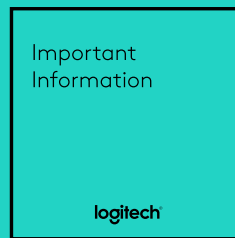


logitech®

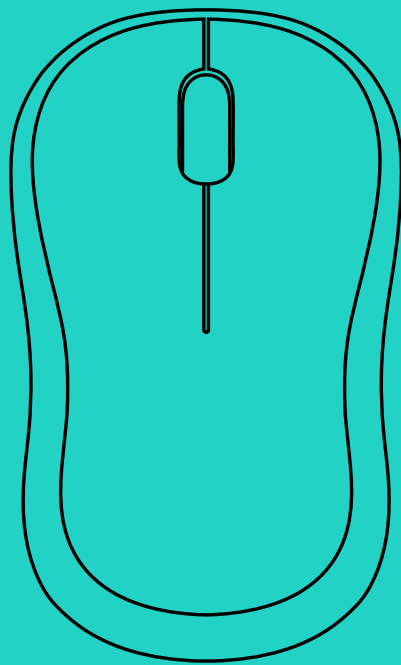


LANGUAGES

English	5	Česká verze	20
Deutsch	6	Slovenčina	21
Français	7	Українська	22
Italiano	8	Eesti	23
Español	9	Latviski	24
Português	10	Lietuvių	25
Nederlands	11	Български	26
Svenska	12	Hrvatski	27
Dansk	13	Srpski	28
Norsk	14	Slovenščina	29
Suomi	15	Română	30
Ελληνικά	16	Türkçe	31
По-русски	17	32 العربية	
Po polsku	18	33 עברית	
Magyar	19		


1

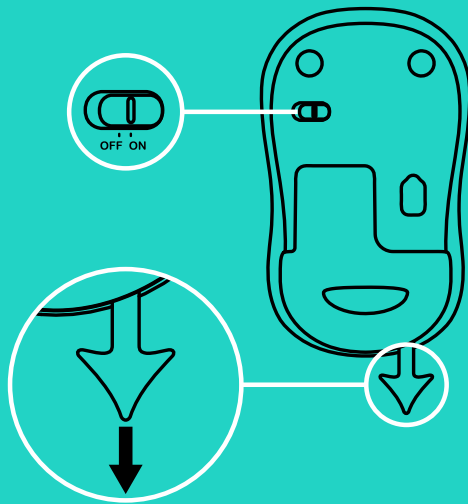

2

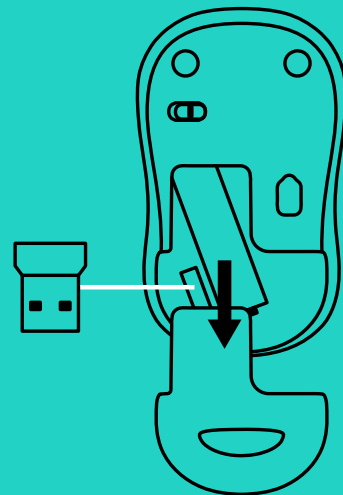


3

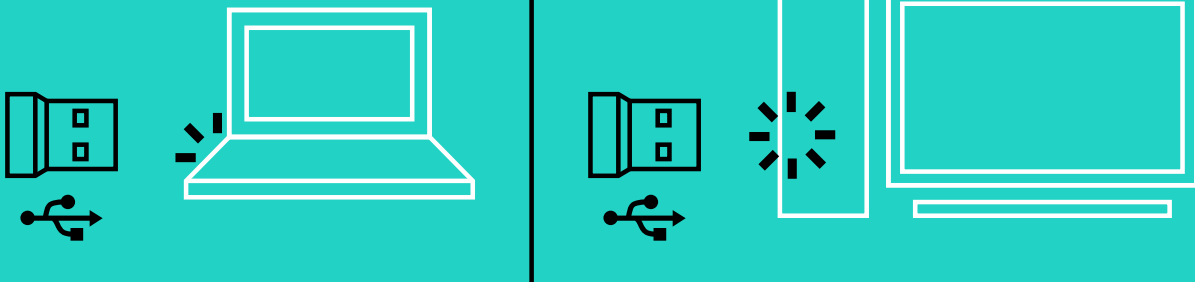

www.logitech.com/support/b220
www.logitech.com/support/m175
www.logitech.com/support/m185
www.logitech.com/support/m220

MOUSE FEATURES

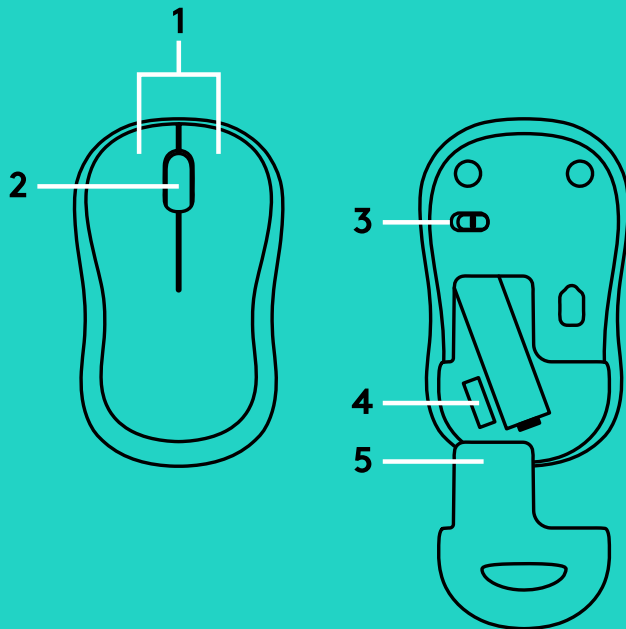

1. Left and right buttons
2. Scroll wheel
Press the wheel down for middle click.
Function can vary by software application.
3. On/Off slider switch
4. Battery door release
5. USB Nano receiver storage

TROUBLESHOOTING

Mouse is not working

- Is the mouse powered on?
- Is the receiver securely plugged into a USB port?
Try changing USB ports.
- If the receiver is plugged into a USB hub, try plugging it directly into a USB port on your computer.
- Check the orientation of the battery inside the mouse.
- Try a different surface. Remove metallic objects between the mouse and the receiver.
- Try moving the receiver to a USB port closer to the mouse.
- For Windows® operating systems, reconnect the mouse with the receiver by launching the Connect utility from www.logitech.com/connect_utility