

# START HERE!

## Package Contents:



Scanner



Antenna



AC Adapter

Rechargeable  
Battery HolderBattery  
Holder

Belt Clip

See the User Guide for complete instructions

## Still need help?


visit our FAQs on our website at  
[www.whistlergroup.com](http://www.whistlergroup.com)



# WHISTLER

## INSTALL BATTERIES

1

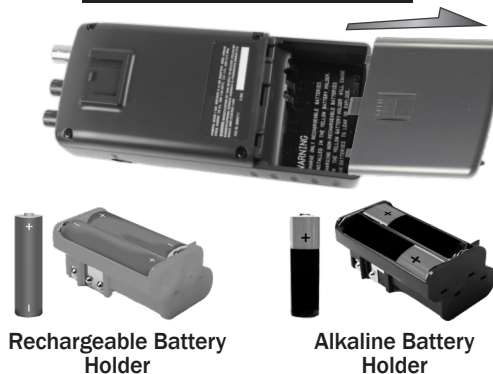

- Slide open the battery compartment.
- Place 4 AA batteries into the correct battery holder matching polarity symbols (+ / -):
  - Black** – Alkaline (non-rechargeable)
  - Yellow** – Rechargeable Ni-MH or Ni-Cd
- Place the battery holder into the battery compartment. The battery holder fits only one way. Do not force it.
- Replace the cover.

## CONNECT ANTENNA

2



- Align the antenna slots with the tabs on the antenna jack.
- Press the antenna over the jack and turn the base of the antenna clockwise.

## PROGRAM FREQUENCIES

3



### Find Frequencies:

Go to [www.radioreference.com/db/browse](http://www.radioreference.com/db/browse). Select your state/country and county/region to locate a list of frequencies in your area.

### Program Frequencies:

- Preset squelch between 10 and 12 o'clock position
- Press PGM to enter the program mode. Enter the channel number (1-400) where you want to store a frequency, then press PGM again.
- Use the number keys and the period(.) key to enter the frequency.
- Press ENT to store the frequency into the channel.
- Press PGM to go to the next channel.
- Press SCAN to begin scanning.