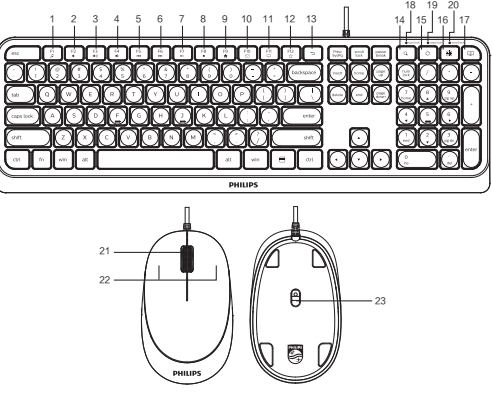


 Philips Keyboard Mouse Combo 2000 Series SPL1627   	 Function overview 1 fn + <Media play> 2 fn + <Volume -> 3 fn + <Volume +> 4 fn + <Mute> 5 fn + <Pause/Play> 6 fn + <Stop> 8 fn + <Homepage> 9 fn + <Email> 10 fn + <Computer> 11 fn + <Favorite> 12 fn + <Music> 13 fn + <Search> 14 fn + <Refresh> 15 fn + <Calculator> 17 Lock screen 18 Number lock indicator 19 Caps lock indicator 20 Small lock indicator 21 Small wheel 22 Left and right buttons 23 Optical sensor Connection Guide  1. Plug the USB connector into the computer USB port. 2. The product features plug-and-play.	Packaging contents 1. Wired keyboard and mouse 2. User manual and important information System requirement 1. Windows 7/Windows 8/Windows 10 or later 2. Windows 7/Windows 8/Windows 10 or later Note: Multimedia functions are partially invalid in different OS versions. Technical specifications 1. Mouse wire length: 1.5m 2. Keyboard wire length: 1.6m 3. Number of buttons: 3 4. Mouse buttons lifespan: 3 million clicks 5. Resolution: 1200 DPI 6. Keyboard key lifespan: 10 million keystrokes 7. Interface: USB 8. Mouse size: 110x265x63x4.8mm 9. Keyboard size: 432x881x63x42.19mm 10. Product weight: 655g ± 10g 11. Operating temperature range: 0 °C to 40 °C 12. Operating humidity range: 10% - 85% Trouble shooting 1. Make sure that the USB connector of the product has been correctly plugged into the USB port of the computer. 2. Make sure the computer meets the minimum system requirement. You can't solve the problem, please try to find the solution from Philips website or nearest retailer. Please do not disassemble the product by force. Attention 1. Photoelectric technology can correctly detect the movement of mouse on most surfaces. Do not use the mouse on any reflective, transparent or uneven surfaces. 2. Please use dry and soft cloth to clean the product. 3. Do not disassemble the product by force. 4. Do not direct the light from the bottom of the mouse to your eyes. 5. Do not get in the rain or in the sun or fire. 6. Do not flush directly with water.	Ръководство на потребителя България Минимални изисквания 1. Microsoft Windows 7, Windows 8, Windows 10 или по-късна версия. 2. Windows 7 или по-късна версия. 3. Windows 7 или по-късна версия. 4. Windows 7 или по-късна версия. 5. Windows 7 или по-късна версия. 6. Windows 7 или по-късна версия. 7. Windows 7 или по-късна версия. 8. Windows 7 или по-късна версия. 9. Windows 7 или по-късна версия. 10. Windows 7 или по-късна версия. 11. Windows 7 или по-късна версия. 12. Windows 7 или по-късна версия. 13. Windows 7 или по-късна версия. 14. Windows 7 или по-късна версия. 15. Windows 7 или по-късна версия. 16. Windows 7 или по-късна версия. 17. Windows 7 или по-късна версия. 18. Windows 7 или по-късна версия. 19. Windows 7 или по-късна версия. 20. Windows 7 или по-късна версия. 21. Windows 7 или по-късна версия. 22. Windows 7 или по-късна версия. 23. Windows 7 или по-късна версия. Ръководство на потребителя България Минимални изисквания 1. Microsoft Windows 7, Windows 8, Windows 10 или по-късна версия. 2. Windows 7 или по-късна версия. 3. Windows 7 или по-късна версия. 4. Windows 7 или по-късна версия. 5. Windows 7 или по-късна версия. 6. Windows 7 или по-късна версия. 7. Windows 7 или по-късна версия. 8. Windows 7 или по-късна версия. 9. Windows 7 или по-късна версия. 10. Windows 7 или по-късна версия. 11. Windows 7 или по-късна версия. 12. Windows 7 или по-късна версия. 13. Windows 7 или по-късна версия. 14. Windows 7 или по-късна версия. 15. Windows 7 или по-късна версия. 16. Windows 7 или по-късна версия. 17. Windows 7 или по-късна версия. 18. Windows 7 или по-късна версия. 19. Windows 7 или по-късна версия. 20. Windows 7 или по-късна версия. 21. Windows 7 или по-късна версия. 22. Windows 7 или по-късна версия. 23. Windows 7 или по-късна версия.	Korisnički priručnik Croatian Priručnik korisnika 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Priručnik korisnika 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor
Uživite si Philips Priručnik korisnika 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Priručnik korisnika 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Brugermanual Dansk Funktionsoversigt 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Brugermanual Dansk 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Gebruiksaanwijzing Nederlands Gebruiksaanwijzing 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Gebruiksaanwijzing Nederlands 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Käyttöohje Suomi Käyttöohje 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Käyttöohje Suomi 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Manuel utilisateur Français Manuel utilisateur 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Manuel utilisateur Français 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor
Benutzerhandbuch Deutsch Benutzerhandbuch 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Benutzerhandbuch Deutsch 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Εγχειρίδιο χρήστη Ελληνικά Εγχειρίδιο χρήστη 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Εγχειρίδιο χρήστη Ελληνικά 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Felhasználói kézikönyv Magyar Felhasználói kézikönyv 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Felhasználói kézikönyv Magyar 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Manuale utente Italiano Manuale utente 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Manuale utente Italiano 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Brøkerhændeboek Norsk Brøkerhændeboek 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Brøkerhændeboek Norsk 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor
Instrukcja obsługi Polski Instrukcja obsługi 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Instrukcja obsługi Polski 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Manual do usuário Português Manual do usuário 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Manual do usuário Português 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Manual de utilizator Română Manual de utilizator 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Manual de utilizator Română 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Руководство пользователя Русский Руководство пользователя 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Руководство пользователя Русский 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Korisnische uputstvo Srb Korisnische uputstvo 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Korisnische uputstvo Srb 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor
Návod na použitie Slovenčina Návod na použitie 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Návod na použitie Slovenčina 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Uporabniški priročnik Slovenčina Uporabniški priročnik 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Uporabniški priročnik Slovenčina 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Manual de usuario Español Manual de usuario 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor Manual de usuario Español 1. Media Player 2. Volume - 3. Volume + 4. Mute 5. Pause/Play 6. Stop 8. Home 9. Email 10. Computer 11. Favorite 12. Music 13. Search 14. Refresh 15. Calculator 17. Lock screen 18. Number lock indicator 19. Caps lock indicator 20. Small lock indicator 21. Small wheel 22. Left and right buttons 23. Optical sensor	Användarmanual Svenska Användarmanual 1. Media Player 2. Volume - 3	