

Resetting Filter Light Settings



LCD Keypad

1. Switch Keypad Off
2. Hold down on the down arrow until '02' appears on the screen, then release.
3. Change '02' to '23' using the 'up' arrow
4. Press 'POWER' button once
5. Press 'FUNC' button once

*****The Filter Light should no longer be flashing*****



LED Controller (TEMP Keypad)

1. Switch Keypad Off
2. Hold down on the down arrow until '02' appears on the screen, then release.
3. Change '02' to '23' using the 'up' arrow
4. Press 'POWER' button once
5. Press 'FUNC' button once


*****The Filter Light should no longer be flashing*****



Touch Screen Keypad

1. Press Menu (#10)
2. Press 'Next'
3. Press 'Next' again - you should be on 'Menu 3'
4. Press 'About your HRV'
5. Tap on the HRV logo 5 times
6. Press 'Next'
7. Press 'Next' again - you should be on 'Installer 3'
8. Press 'Filter Reset'
9. 'Press Reset'

*****The Filter Light should no longer be flashing*****

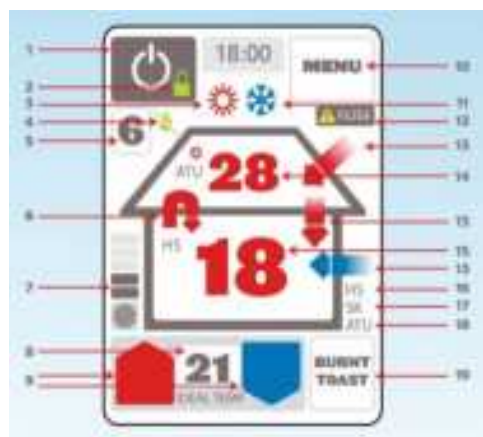

NB: Please don't hesitate to contact us on 0800 478 123 if you need any assistance with the above.