 


尺寸: 110x72mm

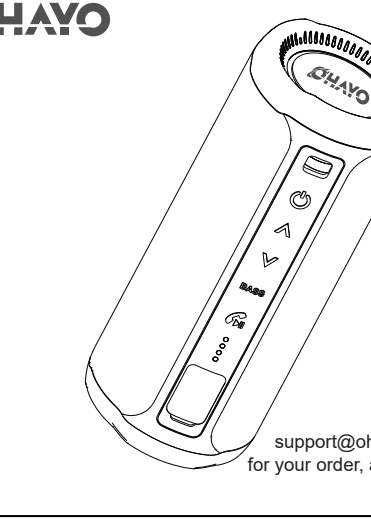 


X10 MAX

QUICK START GUIDE

Send your Amazon ORDER ID to: support@hayo.com to help us facilitate the warranty for your order, and you can get a speaker or headphones.

POWER ON

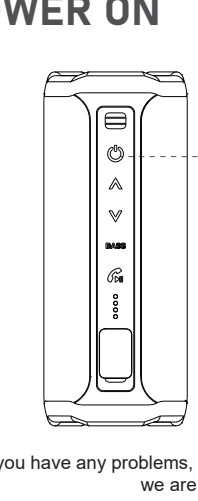

  **ON/OFF**

 
Press and hold 2s to turn on/off

PACKING CONTENTS

- 1* Bluetooth speaker
- 1* Data charging cable
- 1* Quick manual
- 1* AUX audio cable

If you have any problems, please feel free to contact us at: support@hayo.com, we are always here to RESEND/REFUND you.

BLUETOOTH CONNECTION

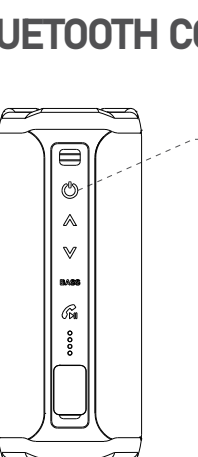

Pairing
The Bluetooth indicator blinks

ON
The Bluetooth indicator blinks

 
Connected
The Bluetooth indicator is solid

The blue light flashes slowly when playing

The blue light is always on when paired

support@hayo.com

MODE SWITCH

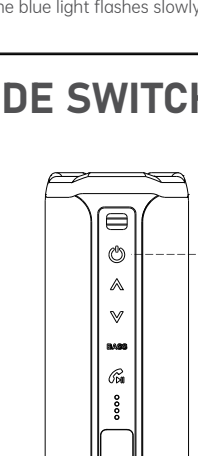

BT **AUX** **USB-A**

Double click to switch mode: BT, TF, AUX, USB-Audio

support@hayo.com

PLAY



Short press: Turn up the volume
Long press: Next song

 
Short press: Volume reduction
Long press: Previous song

Short press: Previous/Next song
Long press: Reject call

Music playing state: Play/Pause function,
Long press: to disconnect the Bluetooth connection

support@hayo.com

LIGHT/BASS

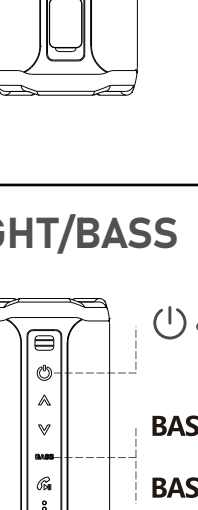

Short press: Switch RGB light effect mode
There are total of seven light effect modes, and the seventh mode is to turn off the light

Short press: Switch music BASS mode
Double-click: Wake up the voice assistant
Long press: Restore factory settings

Note: RGB light and BASS has memory function. After the speaker is power on again, they will status before is power off

support@hayo.com

TWS



① Press double-click the **Bluetooth** button of one of the speakers and the music playback TWS, after hearing the connection success prompt tone, then the second speaker enter TWS mode

② Press successfully, they will hear a prompt tone, and the orange lights on the two **Bluetooth** and the **Bluetooth** will light up

③ Disconnect TWS: If you need to use the TWS mode, double-click the **Bluetooth** button of any one of the speakers to stop

Note: Pairing TWS playing mode ensuring that the device is not connected to Bluetooth

support@hayo.com

CHARGE



The indicator blinks while charging

When the battery is fully charged, the battery indicator is always on

support@hayo.com

[illegible]



FFC Caution

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

However, this device may not be used in the following environments:

- Where radio or electromagnetic waves are expected to be exposed to the equipment (such as in a radio station or a security system for a building).

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If the equipment does cause harmful interference to you or your radio or television reception, you can attempt to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a different power outlet or a different branch circuit.
- Consult the dealer or a experienced radio/television technician for help.

The device has been evaluated to meet the national level of exposure requirements. The device is not used in a portable equipment condition without restrictions.

support@royce.com