

Website:


<https://www.amazon.com.au/stores/page/03E76697-E36A-4D73-93BB-66E374C1F7CE>

**Joyoung 九阳
/ TECHBEAR**

Operation Instruction

**九阳 Microcomputer
Intelligent Rice Cooker**

F- 40FY750

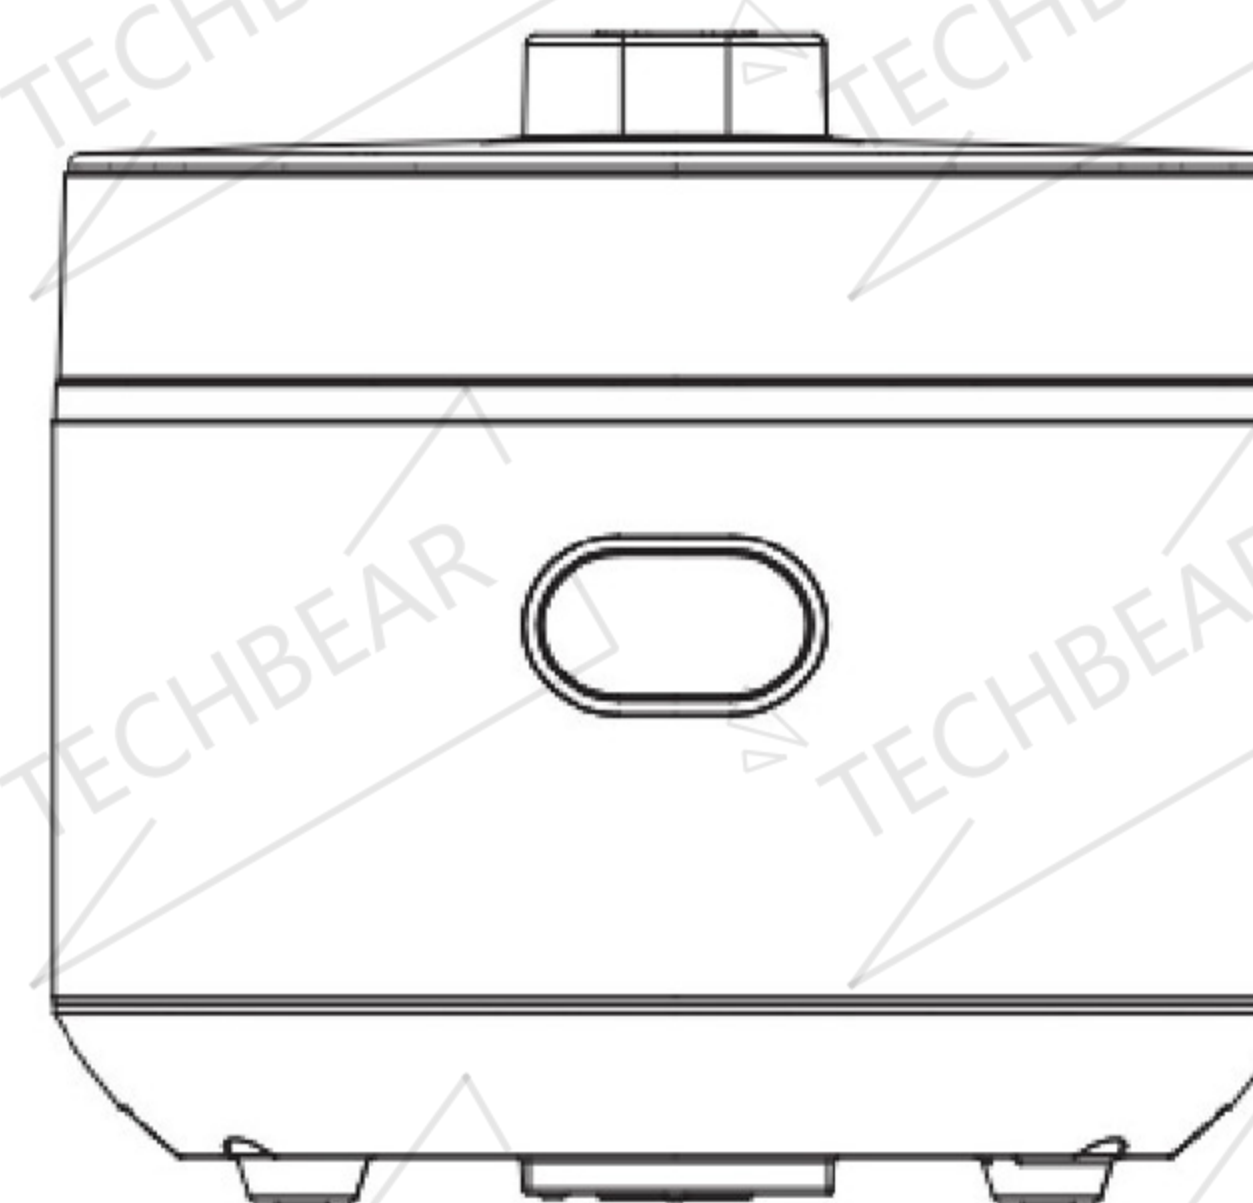

WeChat Scan

Dear users:

Thank you for buying Jiuyang Rice Cookers at TECHBEAR. All the contents in this book are for your reference only.

If you still have problems during use, please consult the local Joyoung after-sales service center or BIBI BEAR customer service center.

Precautions

In order to ensure safety and avoid injury and financial loss to you and others, be sure to observe the following safety precautions. If you do not follow the safety warnings, the wrong use may lead to accidents.

- ⊘

Absolutely prohibited
- ⚠

Must follow
- !

Daily attention
- ⊘

1. Keep it out of reach of children. Do not allow children to operate it alone to avoid electric shock, burns or other injuries.
- ⊘

2. Do not insert metal shavings, iron wires, needles and other foreign bodies in the product or in the gap, otherwise it will cause electric shock or abnormal work.
- ⚠

3. When cleaning, product failure or not in use, in order to prevent leakage or accidental start, please be sure to unplug the power plug.
- ⚠

4. Do not put the product directly on the fire or any place near the heat source or fire source, otherwise the product will be damaged or malfunction, or even dangerous.
- ⚠

5. Please do not put this product on the table that is not stable, wet, high temperature, smooth, heat resistant (such as plastic tablecloth, cotton cloth, carpet, etc.), so as to avoid electric shock, fire, falling off and other injuries and property losses.
- !

6. Use a power socket with rated current of 10A or above and AC voltage of 220V to avoid fire, electric shock and other accidents.
- !

7. Do not plug or pull the plug with wet hands to avoid electric shock. When removing the plug, you must hold the plug handle and do not pull the power cord, otherwise the power cord may be damaged.
- !

8. If the power cord is damaged, it must be replaced with a special cord or a special component purchased from its manufacturer or maintenance department.
- !

9. Before use, ensure that the power cable is reliably connected to the socket; otherwise, the device may be damaged due to poor contact, resulting in short circuit or fire.
- !

10. This product is a Class I appliance, and the grounding cable of the socket should be well grounded.
- !

11. This product is for household use only. The Company shall be liable for any accident or injury resulting from any commercial use, inappropriate use or non-compliance with this instruction manual.
- !

12. The appliance cannot be operated with an external timer or independent remote control system.
- !

13. This product is only for indoor use, not in wet places and outdoor use, to prevent electric shock and device aging caused damage accidents.
- !

14. Do not move the product while working
- !

15. This product is not suitable for the following people: sensory or psychological dysfunction, lack of relevant experience or knowledge (including children), etc. Unless they use this product under the supervision and guidance of a professional. Children should be watched to ensure that they do not play with this product.
- !

16. If the product fails, please send it to Jiuyang after-sales Service Department for repair or contact BIBI BEAR customer service staff. Do not disassemble the product or replace the accessories by yourself, so as to avoid fire, electric shock or injury.

17. After opening the package, please immediately put the plastic bag into the trash can, so as to prevent children from playing and causing choking danger.
18. When the product is working, do not open the top cover, do not approach the metal part of the product and the steam hole to prevent burns.
19. The bottom and edge of the inner liner should be kept clean, the bottom of the liner and the surface of the heating plate should not be accompanied by water droplets, rice grains and other debris, the inner liner is placed smoothly, otherwise it will burn out the components due to poor contact between the heating plate and the inner liner.
20. When the product is working, do not cover the pot with a wet cloth to prevent steam from being discharged and heat dissipation of the body from causing device damage.
21. Do not immerse or drench the appliance in water.
22. Please use the rice spoon that comes with this product. Do not use the utensils with sharp edges and corners to avoid damaging the inner liner.
23. It is strictly prohibited to use the inner liner that does not come with this product to prevent the components from being damaged by overheating.
24. Do not put any bags, cans or bottles into this product to heat, otherwise there is a risk of explosion.
25. Do not start the operation when the liner is not placed in the host or the liner is empty, so as to avoid damage to the components.
26. Keep the product dry when not used for a long time, and do not store it in a humid environment.
27. It is strictly prohibited to lift the inner liner during work or before cooling, so as not to burn.
28. The normal working altitude of this product ranges from 0 to 2000 meters.
29. Do not cook acidic food (pH<5).

Package included


1 x 4L Riec Cooker 1 x rice spoon, 1 x soup spoon, 1 x measuring cup, 1 x steamer, 1 x power cord, 1 x User Manual

Specification


Model	F-40FY750		
Rated voltage	220V		
Rated frequency	50Hz		
Rated power	860W		
Rated capacity	4.0L		
Energy efficiency class	Lv 3		
Executive standard	GB 4706.1-2005 GB 4343.1-2018 Q/JY 026-2018	GB 4706.14-2008 GB 17625.1-2012	GB 4706.19-2008 GB 12021.6-2017

Prepare to cook | Power on

- ① To measure the rice, use the included measuring cup

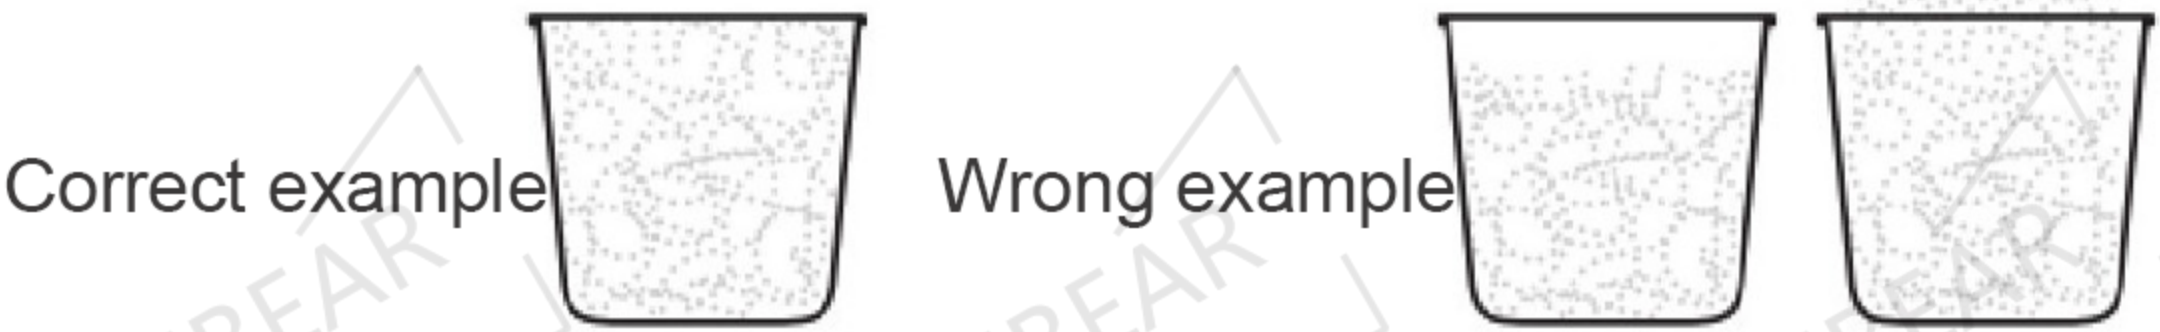

2 Add water

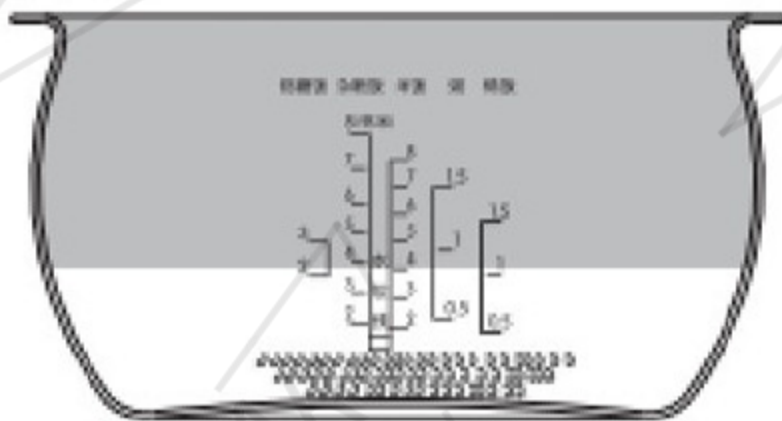

- When cooking with 4 cups of rice, please add water to the mark 4 (this figure is for reference only).

Instructions

Note: All functions should not exceed the corresponding highest water level;
Do not wash rice with the liner. In addition to the "low-sugar rice" and "cooking" functions,
do not put other functions into the steamer when cooking, so as not to affect the food effect.

1 保温/Thermal insulation function

After cooking, the rice cooker will automatically enter the heat preservation state. You can also select the "Heat preservation" button to enter the heat preservation state in the standby state.

- The maximum heat preservation time is 12 hours.

2 热饭/Hot meal

- Pour the leftover rice into the inner container and turn the rice. Sprinkle with just enough drinking water.
- Select the "hot meal" function and press the "Start" button to enter the cooking state.

3 低糖饭/Low Sugar Rice

- Rinse the prepared ingredients and put them into the inner container.
- Add the right amount of water to the calibration line of the inner tank (depending on the amount of meters).
- Then put the steamer into the inner tank and close the lid of the rice cooker.
- Select the "low-sugar rice" function and press the "Start" button to enter the cooking state.

4 粥/Porridge

- Wash the prepared ingredients (millet/brown rice/multi-grain/seafood) and put them into the container.
- Add appropriate amount of water to the calibration line of the inner tank (depending on the amount of rice), and close the lid of the rice cooker.
- Select the function of each classification porridge, press the "start" key to enter the cooking state.

5 蛋糕/Cakes

- Spread salad oil on the bottom and edge of the inner liner, pour in the cake embryo, and close the lid of the rice cooker.
- Select the "Cake" function by the "Feature" key, and press the "Start" key to enter the cooking state.

6 煲汤/Soup

- Wash the raw materials, cut them into pieces, put them into the inner tank, add water to the inner tank, and add water that cannot exceed the highest water level of the porridge.
- Close the cover of the rice cooker, select the "soup" function through the "Feature" key, and press the "Start" key to enter the cooking state.

7 煲仔饭/Claypot rice

- Put the cleaned rice into the inner tank, add water to the water level of the corresponding rice type, and close the cover of the rice cooker.
- Select the "Rice" button and press the "Start" button to enter the cooking state.)
- During the cooking process, hear the prompt sound, spread the mixed ingredients and seasonings on the rice, close the lid of the rice cooker, and wait for the end of cooking.

8 Approximate time required to cook Quick Cooking Rice/快速饭, Wood-fired Rice/柴火饭, Extreme Rice/极速饭, Low Sugar Rice/低糖饭

Function	How many cups of rice?	Two cups of rice	Three cups of rice	Eight cups of rice
Quick Cooking Rice		About 35 minutes	About 40minutes	About 45 minutes
Wood-fired Rice		About 45 minutes	About 50 minutes	About 55 minutes
Extreme Rice		About 25 minutes	About 30 minutes	/
Low Sugar Rice		About 35 minutes	About 40 minutes	/

- This data was obtained from tests conducted under laboratory conditions (room temperature: 23.0°C, rated voltage: 220V-, rice-water volume ratio of 1:1.2, rice type Fukurinmen Northeast Rice, altitude not exceeding 1000m).
- The time is the time from the start of cooking to the time required to enter the heat preservation state. It also varies depending on voltage, room temperature, season, amount of water, rice type, and so on.
- The rice types available for Extreme Rice are: Northeastern Rice, Silk Hmong Rice, Thai Fragrant Rice; and the rice types available for Wood-fired Rice are: Northeastern Rice, Silk Hmong Rice, Thai Fragrant Rice, Brown Rice.

Installation & cleaning

Note: When cleaning, please make sure that the rice cooker is in the power off state.
When taking/placing the inner tank, please handle it gently to avoid collision and deformation;
Do not scrub the liner with steel balls or hard objects to avoid scratching the liner coating.

- Clean the outside of the rice cooker, and then open the cover of the rice cooker, hold the inner cover with one hand, and grasp the center of the silicone sheet on the inner cover with the other hand to forcefully remove the inner cover, and then screw out the steam valve cap counterclockwise.
- Remove the inner liner, clean the inner liner inside and outside with a soft sponge, and then dry with a dry soft cloth. Then clean the inner cover, sealing ring and steam valve, dry them with a soft rag, and fasten them in place.

Statement

The data in this manual is provided by Joyoung R & D Center database. For reference only.

Maintenance service

Please entrust local dealers or Joyoung after-sales service outlets for repair and installation, or contact BIBI BEAR customer service for help.

Fault phenomenon: Indicator light does not light?

Causes:

1. Circuit power is not connected
2. Wiring faults

Solution:

1. Check whether the power supply is connected
2. Send it to the designated after-sales service department for repair.

Fault phenomenon: Heat plate does not heat?

Causes:

1. Circuit fault
2. The fuse is blown out
3. Heating disk fault

Solution:

1. Send to designated after-sales service department for repair

Fault phenomenon: Indicator light heating disk does not heat?

Causes:

1. Circuit fault
2. Heating disk fault

Solution:

1. Send to designated after-sales service department for repair

Fault phenomenon: Cooked to a burnt rice?

Causes:

- 1.The liner is not properly placed
2. Bile deformation
3. Circuit fault
4. Sensor failure

Solution:

1. Turn the liner gently to restore it to normal
- 2.Send to designated after-sales service department for repair

Fault phenomenon: Indicator light does not light?

Causes:

1. Overcooking or undercooking
2. The ratio of rice to water is wrong
3. The liner not in place. It's hanging
4. There's a foreign object between the inner bladder and the heat tray
5. Bile deformation
6. Circuit fault
7. Sensor failure

Solution:

1. Adjust the total capacity of rice and water, ranging from the highest to the lowest scale line
2. Adjust the ratio of rice to water
3. Gently turn the liner to restore it to normal
4. Clean foreign matter, but do not use water to wash directly
5. Send to designated after-sales service department for repair

Fault phenomenon: Automatically enter the heat preservation function or the digital screen displays error code: E5?

Causes:

1. Not put into the bladder
2. Dry burning without water in the inner tank
3. The liner is not in place. It's in the air

Solution:

1. Cut off the power supply, and the pot can still be used normally after cooling

Fault phenomenon: The porridge overflowed?

Causes:

1. Too much rice is cooked

Solution:

1. Adjust the amount to moderate

Fault phenomenon: The digital screen displays the error code E1/E2/E3/E4/E6/E7

Causes:

1. Circuit fault

Solution:

1. Press "Cancel" button, power off again, and then re-power, if still abnormal, please send to the designated after-sales service department for repair

Function Panel

东北米
• Northeast Rice

特快饭
• Express Rice

香浓粥
• Congee

热饭
• Hot Rice

丝苗米
• Simiao Rice

柴火饭
• Wood-fired Rice

稀饭
• Thin Rice

蒸煮
• Steam Cook

泰香米
• Thai Fragrant Rice

杂粮饭
• Mixed Grain Rice

砂锅粥
• Casserole Congee

煲汤
• Soup

糙米
• Rough Rice

煲仔饭
• Rice in Casserole

婴儿粥
• Baby Congee

蛋糕
• Egg Cake

Select Rice

Rice

Timing

Minutes

Congee

Feature

米种

米饭

调时

调分

粥

特色

预约
Appointment

快煮饭
Quick Cook

开始
Start

低糖饭
Low Sugar Rice

保温
Keep warm
取消
Cancel