

Weather Forecaster

model 75107TBLA1



CO	Nī	EN	ITS

Unpacking Instructions 2	Placement Guideli
Package Contents 2	Using the Forecas
Product Registration 2	Troubleshooting
Features & Benefits: Sensor 2	Care & Maintenar
Features & Benefits: Display 3	Replace Intelli-Tim
Setup 5	Specifications
Sensor Setup 5	FCC Information
Display Setup 6	Customer Support
Intelli-Time® Clock 7	Warranty
Set the Time, Date & Units 7	

Placement Guidelines	8
Using the Forecaster	
Troubleshooting	
Care & Maintenance	
Replace Intelli-Time® Battery	11
Specifications	11
FCC Information	12
Customer Support	13
Warranty	13

Questions? Contact Customer Support at (877) 221-1252 or visit www.AcuRite.com.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

ACU) RITE

Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

Package Contents

- 1. Display
- 2. Outdoor Sensor
- 3. Instruction Manual

IMPORTANT

PRODUCT MUST BE REGISTERED TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online to receive 1 year warranty protection

www.AcuRite.com


Features & Benefits



OUTDOOR SENSOR

- 1. Integrated Hanger For easy placement.
- Wireless Signal Indicator
 Flashes when data is being
 sent to the display.
- 3. Battery Compartment
- 4. A-B-C Switch ID code that must match display's A-B-C switch to ensure units synchronize.
- 5. Battery Compartment Cover

Features & Benefits

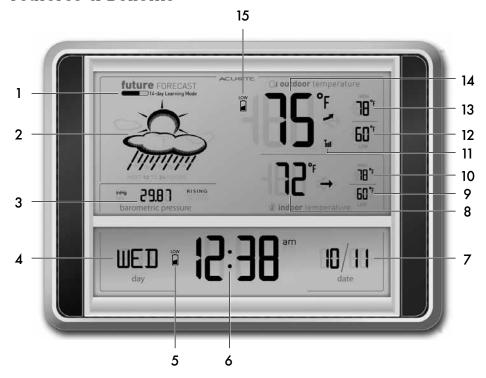


DISPLAY FRONT

- Learning Mode Icon
 Disappears after weather forecast self-calibration is complete.
- 12 to 24 Hour Weather Forecast Self-Calibrating Forecasting pulls data from the outdoor sensor to generate your personal forecast.
- 3. Current Barometric Pressure
- 4. Day of the Week
- 5. Display Low Battery Indicator
- **6. Intelli-Time® Clock**Automatically updates itself for Daylight Saving Time.
- 7. Date
- 8. Current Indoor Temperature

 Arrow icon indicates the direction the temperature is trending.

- Indoor Low Temperature Record Lowest temperature recorded since midnight.
- Indoor High Temperature Record
 Highest temperature recorded since midnight.
- 11. Outdoor Sensor Signal Strength
- 12. Outdoor Low Temperature Record Lowest temperature recorded since midnight.
- 13. Outdoor High Temperature Record Highest temperature recorded since midnight.
- 14. Current Outdoor Temperature

 Arrow icon indicates the direction the temperature is trending.
- 15. Sensor Low Battery Indicator

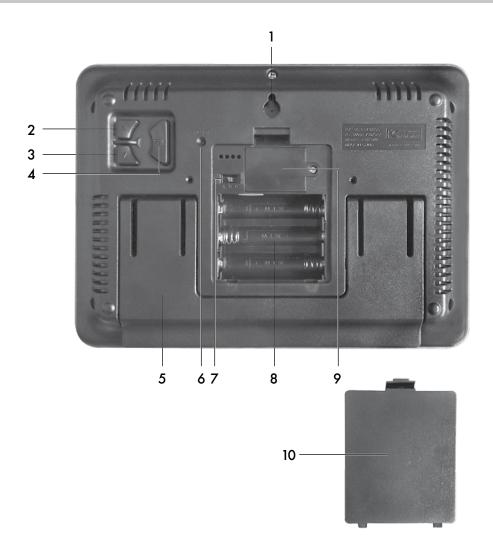

DISPLAY BACK

- 1. Integrated Hang Hole For easy wall mounting.
- Button
 For setup preferences.
- 3. ▼ Button
 For setup preferences.
- 4. SET Button
 For setup preferences.
- 5. Fold-out Tabletop Stand

6. RESET Button

For full reset to factory defaults.

7. A-B-C Switch

ID code that must match sensor's A-B-C switch to ensure units synchronize.

- 8. Battery Compartment
- 9. Intelli-Time® Battery Compartment
- 10. Battery Compartment Cover

Sensor Setup

Set the A-B-C Switch

The A-B-C switch is located inside the battery compartment. It can be set to A, B or C. However, you must select the same letter choices for both the sensor and the display in order for the units to synchronize.

2 Install or Replace Batteries

AcuRite recommends high quality alkaline or lithium batteries for the best product performance. Heavy duty or rechargeable batteries are not recommended.

The sensor requires lithium batteries in low temperature

conditions. Cold temperatures can cause alkaline batteries to function improperly. Use lithium batteries in the sensor for temperatures below -4°F / -20°C.

- Slide off the battery compartment cover. Take note of the A-B-C switch setting inside the battery compartment.
- Insert 2 x AA batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
- 3. Replace the battery cover.





Display Setup

Set the A-B-C Switch


Locate the A-B-C switch inside the battery compartment. Set the A-B-C switch to A, B or C. You must select the same letter choices for both the display and the sensor in order for the units to synchronize.

2 Install or Replace Batteries

- Remove the battery compartment cover.
- Insert 3 x AA alkaline batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
- 3. Replace the battery cover.





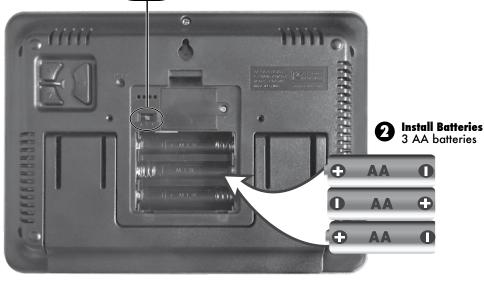

PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.

BATTERY SAFETY: Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from equipment that will not be used for an extended period of time. Follow the polority (+/-) diagram in the battery compartment. Promptly remove dead batteries from the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT short-circuit the supply terminals.

Intelli-Time® Clock

Intelli-Time products are pre-programmed with the correct time and date. Intelli-Time technology instructs the time and date to set themselves. All you need to do is select your Time Zone and Daylight Saving Time preferences. The clock will then automatically set itself and change for Daylight Saving Time.

Set the Time & Date

Press the "SET" button, located on the back of the display, to enter SET MODE. Once in set mode, the preference you are currently setting will flash on the display.

To adjust the currently selected (flashing) item, press and release the "▲" or "▼" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "SET" button again to adjust the next preference. The preference set order is as follows:

TIME ZONE (PST MST CST EST AST HAST AKST)
DST (Daylight Saving Time ON or OFF)*
CLOCK HOUR
CLOCK MINUTE
CALENDAR MONTH
CALENDAR DATE
CALENDAR YEAR

You will automatically exit SET MODE if no buttons are pressed for 30 seconds. Enter setup mode at any time by pressing the "SET" button.

*If you live in an area that observes Daylight Saving Time, DST should be set to ON, even if it is not currently Daylight Saving Time.

Select Temperature Units

To select between degrees Fahrenheit (°F) or Celsius (°C) temperature scales, press and release the "▼" button while in normal display mode (NOT in SET MODE).

Select Barometric Pressure Units

To select between inHg or hPa barometric pressure units, press and release the "A" button while in normal display mode (NOT in SET MODE).

Placement for Maximum Accuracy

AcuRite sensors are sensitive to surrounding environmental conditions. Proper placement of both the display and outdoor sensor are critical to the accuracy and performance of this product.



Display Placement

Place the display in a dry area free of dirt and dust. Display stands upright for tabletop use or is wall-mountable.




Outdoor Sensor Placement

Sensor must be placed outside to observe outdoor conditions. Sensor is water resistant and is designed for general outdoor use, however, to extend its life place the sensor in an area protected from direct weather elements.

Hang the sensor using the integrated hang holes or hanger, or by using string (not included) to hang it from a suitable location, like a well covered tree branch. The best location is 4 to 8 feet above the ground with permanent shade and plenty of fresh air to circulate around the sensor.

Important Placement Guidelines

- To ensure accurate temperature measurement, place units out of direct sunlight and away from any heat sources or vents.
- Display and outdoor sensor must be within 330 ft (100 m) of each other.
- To maximize wireless range, place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.
- To prevent wireless interference, place both units at least 3 ft (.9 m) away from electronic devices (TV, computer, microwave, radio, etc.).

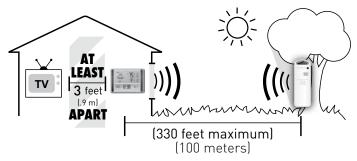

Setup is Complete

The sensor will now synchronize with the display. It may take a few minutes for synchronization to complete. Please refer to the troubleshooting section of this manual if anything appears to be functioning improperly.


Using the Weather Forecaster

Learning Mode

Self-Calibrating Forecasting uses a unique algorithm to analyze changes in pressure over a time period (called Learning Mode) to determine your altitude. After 14 days, the Learning Mode icon disappears from the display screen. At this point, the self-calibrated pressure is tuned in to your location and the unit is ready for superior weather prediction.

Weather Forecast

AcuRite's patented Self-Calibrating Forecasting provides your personal forecast of weather conditions for the next 12 to 24 hours by collecting data from the sensor in your backyard. It generates a forecast with pinpoint accuracy personalized for your exact location.

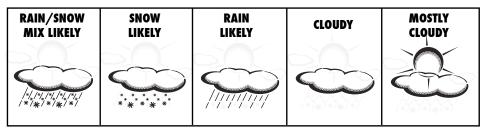

View the complete list of icons at www.AcuRite.com/acurite-icons

Barometric Pressure

This forecaster displays the current pressure with an indicator for FALLING, STEADY, or RISING for the direction the pressure is trending.

Troubleshooting

Problem	Possible Solution	
No outdoor sensor reception	 If the wireless signal indicator shows no bars: Relocate the display and/or the outdoor sensor. The units must be within 330 ft (100 m) of each other. Make sure both units are placed at least 3 feet (.9 m) away from electronics that may interfere with the wireless communication (such as TVs, microwaves, computers, etc). Use standard alkaline batteries (or lithium batteries in sensor when temperature is below -4°F/-20°C). Do not use heavy duty or rechargeable batteries. NOTE: It may take a few minutes for display and sensor to synchronize after batteries are replaced. 	
Display screen not working	 Check that the batteries are installed correctly. Batteries may need to be replaced. Reset the unit by pressing the RESET button, located on the back of the display. Time and date will need to be entered after a reset. 	
Outdoor temperature is flashing or showing dashes	Flashing of the outdoor temperature is generally an indication of wireless interference. 1. Bring both the sensor and display indoors and remove at least one battery from each. 2. Reinstall the battery in the outdoor sensor. 3. Reinstall the battery in the display. 4. Let the units sit within a couple feet of each other for a few minutes to gain a strong connection.	
Inaccurate forecast	 Weather Forecast icon predicts conditions for the next 12 to 24 hours, not current conditions. Has Learning Mode icon disappeared from the display? Learning Mode must complete before forecast and pressure will be accurate. Allow unit to run continuously for 33 days. Battery removal or resetting the display will restart Learning Mode. After 14 days, forecast should be fairly accurate, however Learning Mode calibrates for a total of 33 days. 	
inaccurate temperature	Make sure both the display and sensor are placed out of direct sunlight and away from any heat sources or vents (see page 8).	

Care & Maintenance

Display Care


Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

Outdoor Sensor Care

Clean with a soft damp cloth. Do not use caustic cleaners or abrasives.

Replace Intelli-Time® Battery

Intelli-Time technology is powered by a pre-installed coin-cell battery that stores the time and date settings. The battery has a shelf life of several years. Time and date will need to be entered after replacing Intelli-Time battery. To replace the Intelli-Time battery:

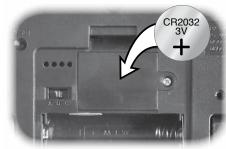

- Locate the coin cell battery compartment door on the back of the display, inside the battery compartment. Unscrew and remove the compartment cover.
- 2. Insert 1 x CR2032 coin cell battery into the battery compartment, as shown. Install battery with "+" positive terminal facing OUT.
- 3. Screw in the battery cover.



WARNING: THIS PRODUCT CONTAINS A BUTTON-CELL BATTERY. IF SWALLOWED, IT COULD CAUSE SEVERE INJURY OR DEATH IN JUST 2 HOURS.

SEEK MEDICAL ATTENTION IMMEDIATELY IF INGESTED.



Specifications

TEMPERATURE RANGE	Outdoor: -40°F to 158°F; -40°C to 70°C	
	Indoor: 32°F to 122°F; 0°C to 50°C	
WIRELESS RANGE	330 ft / 100 m depending on home construction materials	
OPERATING FREQUENCY	433 MHz	
POWER	Display: 3 x AA alkaline batteries 1 x CR2032 coin cell battery	
	Sensor: 2 x AA alkaline or lithium batteries	
DATA REPORTING	Outdoor Data: 16 second updates Indoor Data: 60 second updates	

FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

1- This device may NOT cause harmful interference, and 2- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

· Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation of the device.

Customer Support

product available and contact us in any of the following ways: class service. For assistance, please have the model number of this AcuRite customer support is committed to providing you with best-in-

7521-125 (778)

mos. **AtiMUSA**. www to su fisiV

- ▶ Register your Product
- Support User Forum
- Submit Feedback & Ideas
- ▶ Installation Videos
- ▶ Instruction Manuals
- Replacement Parts

TO RECEIVE WARRANTY SERVICE PRODUCT MUST BE REGISTERED

TNATAO9M

PRODUCT REGISTRATION

moo.atiMusA.www Register online to receive I year warranty protection

so the above limitation or exclusion may not apply to you. or incidental domages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, the proper limitation of incidental or consequential to you We expressly disclaim all liability for special, consequential,

writing and signed by a duly authorized agent of ours. consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or corporation is authorized to bind us to any other obligation. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in worlding or waive the terms of this warranty unless done in We further disclaim liability from personal injury relating to our products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the any of our products, the purchaser assumes all liability for the

products, your purchase or your use thereof, exceed the original purchase price paid for the product. In no case shall our liability for any claim relating to our

Applicability of Policy

This Return, Refund, and Warranty Policy applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the policies applicable to the country in which you made your purchase.

resale sites such as eBay or Craigslist. refund, or warranty services if you buy products used or from Additionally, this Policy applies only to the original purchaser of our products. We cannot and do not offer any return,

Governing Law

Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin. This Return, Refund, and Warranty Policy is governed by the lows of the United States and the State of Wisconstin. Any dispute relating to this Policy shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County,

Limited 1-Year Warranty

products, AcuRite provides the benefits and services set forth herein. For purchases of Chaney products, Chaney provides the benefits and services set forth herein. Instrument Company. For purchases of AcuRite AcuRite is a wholly owned subsidiary of Chaney

period of one year from the date of purchase. We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a

from action of surface by us, and action costs and option, be repaired or replaced by us. Transportation costs and option, be repaired or soft shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation will give no credit for products which have received normal will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abeen damaged (including by acts of nature), tampered, been damaged (including by octs of nature), tampered, the products of the Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole and the province of sale will a property or the sale will be seen to be seen as the sale will be seen to be seen as the sale will be seen to be seen as the sale will be sale win the sale will be sale will be sale will be sale will be sale wi

or replacement is not feasible, we may, at our option, refund the amount of the original purchase price. Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair

PURPOSE. AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY







Temperature & Humidity



Weather Alert Radio



Kitchen **Thermometers** & Timers



Clocks

It's more than accurate, it's ACUPRITE.

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

www.**AcuRite**.com