



USER MANUAL

Contents page

Safety Warning.....	3
Function and Operation.....	4
Frequently Asked Questions.....	5
Specification.....	5
Warranty.....	6
Serial Number.....	2

条码处

General Information

Thank you for purchasing our Remo Bluetooth sound furniture.

Please read the manual before using this unit.

Technology is constantly changing, occsionally updates will be made to the user manual.

Do not use this unit in a humid or under water environment.

Do not place this unit in direct sunlight or heat; unit should not be subjected to temperatures below 35 degrees.

Set up bed on a level and stable floor surface.

Never try to repair this unit yourself, this will void the warranty.

Removing back panel or touching wiring could result in electric shock.

Do not use chemicals of any kind on this product.

Do not press the buttons too hard, this could damage the product.

Functions and Operation

Number	Icon	Function
1		To turn on/off the unit ; to play/stop
2		To decrease the volume.
3		To increase the volume.
4		Touch to take you back to the previous track or hold to rewind through the current track.
5		Touch to take you to the next track, or hold to fast forward through the current track.
6		This USB port can charge your device with the USB cable, can not support the audio input function, output power is 1A.

Basic operation

1. When power is on,  power button will show a red light.
 2. Touch the  power button for 2 seconds, the other buttons will light up with a white light. The  power button red light will be twinkling which indicates that you can search for the Bluetooth signal.
 3. The Remo Bluetooth device's name is "eMoMo", cord is 0000. When pairing with the Bluetooth device, the  power button red light will be off and the white light will be on. You will hear a "du" signal sound, this indicates that the Bluetooth pairing was successful.
 4. Softly touch the  power button to play or stop the audio file.
 5. Touch the  power button for 2 seconds again to turn off the unit.
- Note: The color of the lights may vary according to the color of the external cover.

Frequently Asked Questions

Problem	Possible cause and suggested solutions
No power or will not turn on	AC adaptor isn't plugged into a working socket or not plugged into the power supply jack properly at the back of the unit. Open the back of the unit and check to see if any wires are loose or disconnected. Check your power supply. If the unit still does not work, please replace the unit.
No sound	The volume switch is on minimum for shipping. Check volume. Check speaker cables for connection with the main unit.
The Unit doesn't respond	Please un-plug from power and try again. Check to be sure iPod/iPhone is docked correctly
Bluetooth does not sync	Bluetooth can only pair with one device at a time. If you need to change devices, you must turn off the previous device's Bluetooth and reboot the player. Please wait for approx. 10 seconds to restart the machine. Avoid pairing the device behind a wall or in a corner. Do not exceed 26 feet in distance from unit to pairing device. The name of the device will come up on your Bluetooth as "eMoMo".

Specification

Input	100V~240V
Output	12V $\equiv$ 2A
Rated Power	25W
Frequency Response	40-22 kHz
Signal-to-Noise Ratio	>65 db
Bluetooth Edition	2. 0+EDR

WARRANTY

- This limited warranty does not restrict your statutory rights in any way.
- The warranty period is 1 year from the date of purchase.
- You can certify your purchase date either by the original Invoice/Receipt, or by the registration code.
- For Product Registration, please visit us at www.emomotech.com
- Product serial Number is on page 2.
- The warranty is limited to the repair of the faulty audio device. The warranty does not cover any transport or other direct/indirect costs or any risks associated with removing/dismounting, transporting, and installing the products.
- Warranty does not apply if...
 - The warranty will be voided if the unit is misused and not used the original device, such as iPhone/iPod/iPad released by Apple.
 - the warranty does not apply if the unit is not installed correct, the connection is bad or there is shipment damage.
 - the warranty will be void if operation instructions are not followed or the unit has been modified in any way. No parts can be used other than parts manufactured or approved by eMoMo.
 - to damage due to faulty or unsuitable peripheral devices.
 - to damage caused by accidents, lighting, water, fire, heat, war, civil unrest, or other events beyond the control of eMoMo and its distribution partners.
 - to products whose serial numbers have been altered, deleted, removed, or rendered illegible.
 - if repairs or modifications have been performed by unauthorised persons.
- If you wish to make a claim under the warranty, please always try to contact the distributor whom you purchased this product firstly, or you can contact the Remo Audio manufactory by below:
America(North America, Central America, South America):
US-SERVICE@emomotech.com
Europe:
EU-SERVICE@emomotech.com
Australia:
AUS-SERVICE@emomotech.com
Asia(including Russia & other territory):
ASIA-SERVICE@emomotech.com
Tel:+86 755 27643116 Fax:+86 755 27643115

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.