

INSTRUCTION MANUAL
HYDRAULIC TABLE TRUCK



Model: TF15/15A

TF15/TF15A Hydraulic Table Truck (Cable Release 2)

I. Use & applicable range

It is a convertible vehicle using for lifting and transporting in workshop, warehouse and wharf, etc.

II. Basic Data:

Model	TF15/TF15A
Load Capacity	150kgs
Lift Height	730mm
Lowest Height	210/330mm
Table Dimensions	700×450×35mm
Packing Dimensions	800×470×260/340mm
Net Weight	37kgs

III. Installing

1. Install the handle (#10) on the frame seat (#15), and fix them by two M10 bolts.
2. Insert the foot pedal (#63) into the hole of the foot pedal holder (#59), and fix them by M8 bolt.
3. Insert the brake thread (#14) into the press bolt (#45), and fix them by M8 nut.


IV. Using

1. Test the cart before using it. Firstly step the foot pedal rod to lift the table to the max height, and then release the limit oil valve to check whether the cart is ok.
2. Please fix the cart and to brake the wheel before loading.
3. Adjust the table's height by step the foot pedal lift up and down to load or unloading in its rated loading.
4. When lower the table, draw up the handle.

V. Warning

- (1) Operate strictly according to the instruction manual.
- (2) Do not use the cart on slop.
- (3) Do not allow people to sit or ride on the cart.
- (4) Keep feet and hand away from under the lowering table. Suggest to wear safety shoes during operation.
- (5) Do not transport the loads during the raising process.
- (6) Do not random regulate the safety valve.
- (7) The maintenance is to be performed by the professional person
- (8) Failure to operate the cart will cause the damage to the person health or property loss.
- (9) The cart must used in the rated capacity, it is not permit to load the heavy goods that the rated capacity of the cart.

TF15

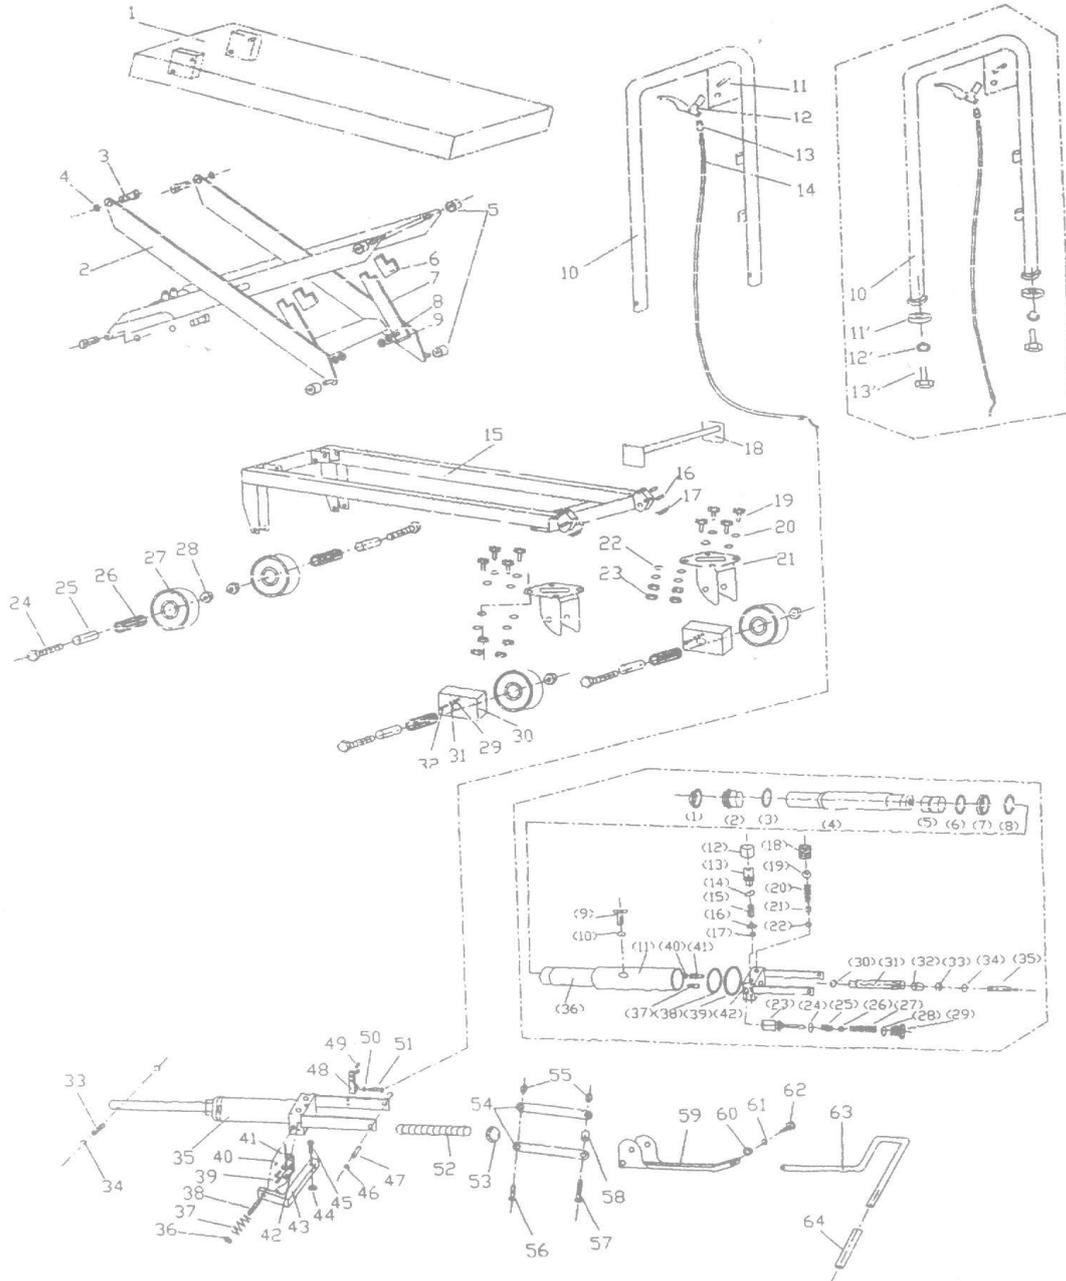

**TF15/15A Hydraulic Table Truck
(Cable Release 2)**

No.	Description	Q'ty	No.	Description	Q'ty	No.	Description	Q'ty
1	Table	1	40	Spring Washer	2	[11]	Outer Cylinder Body	1
2	Link Assembly	1	41	Spring Pin	1	[12]	Adjust Pressure Cover	1
3	Shaft	4	42	Support Holder	1	[13]	Adjust Pressure Screw	1
4	C-ring	4	43	Draw Board	1	[14]	O-ring	1
5	Roller Guide	4	44	Hex Cap Nut	1	[15]	Adjust Pressure Spring	1
6	Rubber Cover	2*	45	Hex Cap Screw	1	[16]	Spring Seat	1
7	Support Rod	2*	46	C-ring	2	[17]	Steel Ball	1
8	Washer	2*	47	Joint Shaft	1	[18]	Hex Cap Bolt	1
9	Set Nut	2*	48	Support Rod	1	[19]	Steel Ball	1
10	Handle	1	49	Hex Cap Screw	2	[20]	Taper Spring	1
11	Spring Pin	1	50	Hex Cap Nut	1	[21]	Steel Ball	1
12	Brake Handle	1	51	Copper Joint Slice	1	[22]	Steel Ball	1
13	Set Position Cover	1	52	Big Spring	1	[23]	Top Rod	1
14	Brake Thread	1	53	Spring Seat	1	[24]	O-ring	1
15	Frame Seat	1	54	Link Slice	2	[25]	Spring	1
16	Shaft	4	55	Lock Pin	2	[26]	Steel Ball	1
17	Turn Spring	2	56	Shaft	1	[27]	Spring	1
18	Folded Holder	1	57	Shaft	1	[28]	O-ring	1
19	Hex Cap Bolt	8	58	Separate Cover	1	[29]	Hex Cap Plug	1
20	Flat Washer	8	59	Foot Pedal Holder	1	[30]	O-ring	1
21	Swivel Wheel Holder	2	60	Flat Washer	1	[31]	Pump Cylinder	1
22	Spring Washer	8	61	Spring Washer	1	[32]	O-ring	1
23	Hex Cap Nut	8	62	Hex Cap Bolt	1	[33]	Dust Cover	1
24	Hex Cap Bolt	4	63	Foot Pedal Rod	1	[34]	Oil Seal	1
25	Shaft Cover	4	64	Foot Pedal Cover	1	[35]	Small Lift Piston	1
26	Needle Bearing	4	11'	Big Washer	2	[36]	Inter Cylinder Body	1
27	Wheel	4	12'	Spring Washer	2	[37]	Filter	1
28	Set Nut	4	13'	Hex Cap Bolt	2	[38]	Washer (1)	1
29	Flat Washer	2*				[39]	Washer (2)	1
30	Protect Cover	2*	[1]	Dust Cover	1	[40]	O-ring	1
31	Spring Washer	2*	[2]	Top Nut	1	[41]	Lowering Valve	1
32	Semicircle Screw	2*	[3]	O-ring	1	[42]	Valve	1
33	Shaft	1	[4]	Lift Piston	1			
34	C-ring	1	[5]	Piston	1			
35	Cylinder	1	[6]	O-ring	1	Remark: the parts with "*" is only CE type use.		
36	Hex Cap Nut	1	[7]	Oil Seal	1			
37	Spring	1	[8]	C-ring	1			
38	Set Screw	1	[9]	Hex Cap Plug	1			
39	Hex Cap Screw	2	[10]	O-ring	1			