


3+
YEARS

MEMORY GAME



INSTALLING THE BATTERIES

- 1 - Open the battery compartment.
- 2 - Insert 3 x 1.5V AA batteries with the correct + and - polarities.
- 3 - Close the cover.

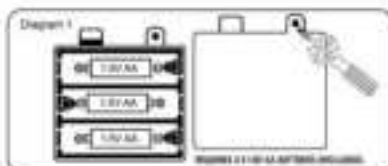

HOW TO PLAY

Slide the ON/OFF switch of the product to the ON position. Press and hold the switch mode button to select one of the following 4 game modes, press the start button to start the game.

Note: The game will start at level 1 by default, and you can select the corresponding difficulty level by pressing the level button before starting the game.
(Only Memory and Whack-a-mole games can be leveled)



Memory game

1. The outer 8 coloured buttons will play a sound and light up randomly.
2. Follow the correct order and press the relevant button accordingly. You have 8 seconds to complete the game.
3. If the coloured button is selected in the incorrect sequence or not played in required time then the player will receive a warning sign and the game is over.
4. Press the start button to commence a new game as required.

Whack-a-mole

1. The outer 8 coloured buttons will play a sound and light up randomly.
2. Follow and press the buttons as fast as you can.

Follow the light

1. The outer 8 coloured buttons will light up randomly.
2. Follow and press the buttons.

Music play

Press the buttons to create your own music.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES CAN ONLY BE CHARGED UP IN DESIGNED RECHARGEABLE BATTERIES. BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE DISCHARGING. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVED BATTERIES FROM THE TOY WHEN NOT USED FOR PROLONGED TIME OR WHEN BATTERIES BECOME SWOLLEN OR HAVE ANY OTHER PHYSICAL DAMAGE. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT BURN OR REUSE.

WARNING: CHOKING HAZARD

Small parts not for children under 3 years.

WARNING: THE TOY PRODUCES FLICKERS THAT MAY BE HARMFUL TO EYES.

PLEASE KEEP CHILDREN FROM TOUCHING THE FLICKERS.

WARNING: FOR BATTERY DISPOSAL, REMOTE OR HAVE LARGE AMOUNTS OF BATTERIES.

PLEASE RECYCLE BATTERIES. DO NOT BURN OR REUSE.

THE BATTERIES INCLUDED ARE FOR DEMONSTRATION PURPOSES ONLY. PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN. PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

E: 42 642 292 | T: 30 888 888

MADE IN CHINA

CUSTOMER SERVICE

NUMBER: 400 000 000 000

EMAIL: 400 000 000 000

TARGET: 400 000 000 000

