

WYBOT

Robotic Pool Cleaner User Manual

WYBOT S2|WY210C



Read through the entire manual before running your new robotic pool cleaner, and keep this manual handy for your reference.

Copyright© 2018 WYBOTICS CO., LTD. All Rights Reserved.

WYBOT

www.wybotpool.com

Email: support@wybotpool.com

Facebook: @WybotPool

WYBOTICS CO., LTD.

No.30, Zhongnan 4th Street West Zone, TEDA Tianjin, China

All trade names are registered trademarks of respective manufacturers listed.



WYBOT

Thank you for choosing WYBOT products, your support means a lot to us. Continuous providing the best solution to free you up from pool cleaning and enjoy your family time is always our pursuit.

WYBOT Robotic Pool Cleaner is dedicated to serving you high efficiency, low power consumption, easy operation and thorough pool cleaning work.

Its unique appearance and reliable functions as one-button activation, powerful suction and scrubbing, fine filtration, smart navigation, remote control, and high compatibility with various pool shapes and construction materials assure you a convenient, intelligent, and optimal pool cleaning.

Feel free to contact us by Email or visit our website with any questions. We are very glad to hear your advice on our continuous improvement.

Read the manual carefully before you use the cleaner. Your safety is the most important thing. Please read through and operate the device as per instructions. WYBOTICS Co., Ltd. is not held liable for any loss or injury caused by improper use.

Warning

Failure to operate the device as per the warnings can result in serious injury, electrocution or death.

1. Use only the accessories recommended or sold by WYBOTICS Co., Ltd.
2. Dry the charging port after each cleaning. Wet charging port may cause an electric shock.
3. Do not charge the cleaner when it is running (the indicator is on).
4. Use only the original and authorized power charger. Avoid charging any other devices with this charger. Improper use may result in overheating or corrosive liquid leakage from the battery.
5. Make sure the electrical outlet is protected by a ground fault circuit interrupter (GFCI) and an earth leakage interrupter (ELI).
6. Do not use a cord-damaged charger to avoid any electric shock.
7. Do not try to use extension cord to connect the charger.
8. Never allow children to ride on the cleaner or play with it as a toy.
9. Do not allow child to operate or maintain the device.
10. Do not enter the pool when the cleaner is working in it.
11. Never expose or charge the device in flammable environments.
12. Only licensed professionals can disassemble the sealed parts of the cleaner.

Caution

Failure to operate the device as per the cautions can cause a damage to the device or personal injury.

1. Charge the unit before first use.
2. Do not over charge the cleaner, which will reduce the battery life.
3. Charge the cleaner prior to being stored for a long time (over 6 months) to maintain an optimal battery life.
4. Do not operate the cleaner while pool filter is running.
5. Remember to wash and clean the filter basket and cotton foam after each use.
6. Store the cleaner in a cool and ventilated place, away from direct sunshine or any heat source.
7. Use only the pool cleaner in the following water conditions:

Chlorine	Max 4 mg/L
pH	7.0 - 7.8
Temperature	41 - 95 °F (5 - 35 °C)
NaCl	Maximum 5000 RPM

CONTENTS

 
WYBOT S2(WY210C) AT A GLANCE	01
Product External Overview	01
Product Internal Overview	02
Packing List	02
GET STARTED	03
Charge your new WYBOT S2(WY210C)	03
Setup your new WYBOT S2(WY210C)	04
Connect to your App	05
Charge your cleaning mode	05
Run your new WYBOT S2(WY210C)	06
DO A FILTER CLEANING	08
DEVICE SPECIFICATION	09
LIMITED WARRANTY	09
HOW TO MAINTAIN YOUR DEVICE	10
FAQ & TROUBLE SHOOTING	10
CERTIFICATION	12
WYBOT CUSTOMER CARE	12

WYBOT S2(WY210Q) AT A GLANCE

Product External Overview



- a Handle**
Remove and transport the device with it
- b LED Indicator**
Different light colors to indicate device status
- c Cleaning Mode**
Customize cleaning needs on the cleaner
- d Charging Port**
Connect the charger
- e Pump**
Pumps out water through the window
- f on/off Button**
Turn on/off the device
- g Track**
Enhance device's capability in climbing walls and various obstacles
- h Scrubbing Brush**
Brushes loose all dirt and not them all into the device

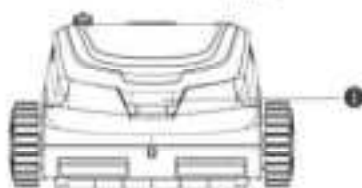

- i Lid Open Button**
Open the cover to take out the filter basket

Product Internal Overview



- 1 Sealed Part**
Important components are sealed there. For your safety, do not try to disassemble it without authorization.
- 2 Filter Basket (100um)**
Stores collected dirt and debris, need to be installed before cleaning, and washed after each use.
- 3 Filter Foam (Cotton foam)**
An auxiliary filter to help trap the fine dry particles. Recommend to use it for floor cleaning. Please do not install it when the pool water is filthy dirty, it may influence the operation of the cleaner.
- 4**

Do not operate the device when the top cover or scrubbing brushes are broken. If there is any liquid leakage from the sealed part, stop charging or running the device.

Packing List

 Device x 1	 Filter x 2	 Floating Parts
 User Manual x 1	 Quick Start Guide x 1	 Charger x 1
		 Hook x 1

GET STARTED

Charge your new WYBOT S2(WY210C)

The device has a lithium-ion rechargeable battery, and you need to charge the battery before first use and when the battery is low. Connect your device to a power outlet using the included cable and adaptor.



Note:

1. When charging, you should ensure your device at least 3m (appr. 10ft) away from the edge of the pool.
2. For reducing fire risk, keep your device and adaptor away from direct sunshine or water when charging.
3. For your important safety, you need to double check the device is powered off and the charging port is dry before charging.
4. The best charging environment is temperature at 32°F - 95°F (0°C - 35°C), RH at 5%-95%.


The adaptor has an indicator, which will display blue light (●) indicating the power supply status.

The LED indicators in the front of the cleaner turn solid green light one by one when charging, and all LED lights turn (●) when fully charged.

Below is the indication of the LED lights, you may refer it to know different device status.

● Quantity	Battery Level (%)
●	0-20
● ●	20-40
● ● ●	40-60
● ● ● ●	60-80
● ● ● ● ●	80-100

 Below is the indication of the LED lights, you may refer to it to know different device status.

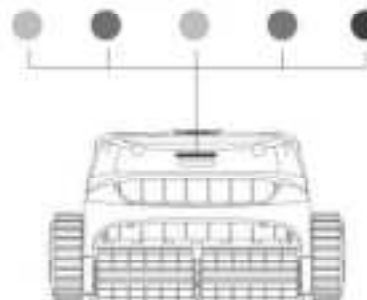

LED Light	Indication	Status
●	Solid	Power On
●	Flashing	Under working
● ●	Solid	Connecting to App
●	Flashing	Low battery or under self-parking in the pool
●	Flashing	Charging in progress
●	Solid	Fully charged
● ●	Solid or flashing	Fault

Setup your new WYBOT S2(WY210C)

Turn on the device by pressing the on/off button. The LED indicator on the front will display a solid green (●) to display current battery level and then a solid blue (●) when the device is on. If the battery level is too low to start cleaning, the LED lights will show a flashing (●).



Note:

1. When yellow lights flash, you should charge the device immediately.
2. If red LED lights on, you can find solution from trouble shooting in this manual or call for service.

Connect to your App

You can download the WYBOT App to your smart mobile device by scanning QR code below or from Google Play or App Store.

	iOS	Android
	iOS 15.0 or later	Android 6.0 or later

Choose your cleaning mode

You can choose a cleaning mode for your cleaner on the device or through the app, after connecting to your App.



Icon	Indication
	Toggle a cleaning mode
	Wall*1 then floor*1 (default)
	Pool floor cleaning There are two types of full pool cleaning in the app, you can customize this icon there.
	Pool walls cleaning There are three types of floor cleaning in the app, you can customize this icon there.

Note:

1. There are more cleaning mode options in the app, and you can refer to it below.

Mode	Cleaning Coverage
Standard Full Pool	Wall+ Floor+Swimming
Floor Only	Pool Floor
Wall Only	Pool Wall
Waterline	Pool Waterline
Wall then Floor (Control)	Wall+ Floor+*
Edge Clean	Edge mode, floor cleaning only
Turtle Clean	Strong cleaning, floor cleaning only

2. You should modify your cleaning modes via App when out of pool.
3. If the device restarts, it will automatically enter the cleaning mode you set last time.

Run your new WYBOT S2(WY210C)

Hold the handle of the cleaner, and put it into the pool vertically.



 
Let it sink down to the floor to empty trapped air inside.

Note:

To achieve an optimal cleaning performance, you should ensure the water depth of the pool is at least 19.5 in (50 cm) high from the top of the device.



About 20 seconds of self-calibration, the indicator light will turn to be a flashing blue. The cleaner is ready to clean.

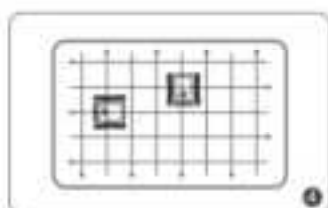


The cleaner begins to clean walls, floor and waterline as default or your set through App.



The device will automatically move to stop by the edge of wall when finishing cleaning or battery low.



 
You can insert the included hook into a pool pole and lift the cleaner out of the pool.

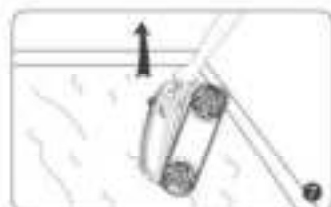

You should take the cleaner out vertically to drain inside water out quickly.

DO A FILTER CLEANING

 Press the filter cover handle and lift the cover up.

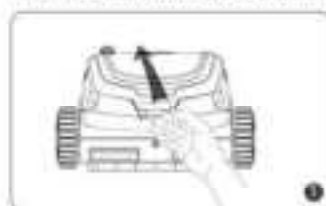

Note:

1. You should ensure the device is power off when open the top cover.
2. You need to clean the filter basket after each use.



Take out the filter basket and cotton foam.



Empty all debris and rinse it with clean water.



After rinsing, put the filter basket and cotton foam into the cleaner and close the cover.

- As electric components inside the cleaner, store the cleaner in a cool and ventilated place, away from direct sunshine or any heat source.
- Charge the cleaner prior to being stored for a long time (over 6 months) to maintain an optimal battery life.

DEVICE SPECIFICATION

Model	WYBOT S2(WY210C)
Pool Size	Up to 300m ² (3229m ²)
Depth	9.8ft (3m)
Device Dimension	400(L)*390(W)*255(H) mm
Weight	8.5 Kg
Runtime	3.5 hours
Charging Time	3 hours
Voltage	Battery:25.2V
Power	90W
Charger Input	100-240V, 47-63Hz
Charger Output	29.4V/3A
Battery Capacity	7800mAh
Filtration	Double-level
Flow Rate	14m ³ /H
Moving Speed	10m/min
Water Resistance	IPX8
OTA upgrading	Available
App Connection	Available

LIMITED WARRANTY

1. All WYBOT pool cleaners in the market have been inspected and licensed to be sold as per local laws.
2. The warranty duration for battery, motor and PCB is two (2) years from the purchasing date. Consumable parts, including filter basket, brush, wheels etc., are beyond warranty.
3. The warranty apply only to original buyers, and not valid to resale and any other

kinds of transfer.

4. Any damages to the unit caused by improper use, unauthorized repair or disassembly are not covered by WYBOTICS Co., Ltd.'s warranty.
5. The order number or record must be presented for any claim or repair within the warranty period.

HOW TO MAINTAIN YOUR DEVICE

- You should follow the steps to store your cleaner to maintain good performance.
- a) Ensure the device is power off.
 - b) Dry out the cleaner and filter basket.
 - c) Fully charge the battery.
 - d) Store the cleaner in a cool and ventilated place, away from direct sunshine, heat source, frost and squeezing with an ambient temperature between 5°C/41°F and 45°C/113°F.
 - e) Charge the cleaner every three months to ensure an optimal battery life.

Note:

If your device do not work after a long-term low battery life or being off, please contact after-sale team for help. For your safety, do not try to disassemble it without authorization.

FAQ & TROUBLE SHOOTING

- Q: What pool shapes and construction materials is the cleaner suitable for?
- A: The machine can be applied to rectangle, oval, or irregular shapes of in-ground swimming pools. Applicable construction materials include PVC, gunite, tile and other materials.
- Q: Will obstacles such as steps, shallow water areas, drains, slopes etc. in the swimming pool affect the running?
- A: The machine can climb steps, drains, and shallow water areas. The above obstacles may influence its cleaning path, but will not affect the operation of the machine.

If you encounter the following situations when using the cleaner, you can check the table and solve them by yourself.

Note:

If you can not find a solution from the table, please contact after-sale team.

No.	Issues	Details	Possible Causes	Suggested Solution
1	Device does not work	A solid red light	Impeller is stuck	Check the impeller and clean foreign
		A flashing red light	Motor protection	Restart
		A flashing red light	Not put the device into the water or the pool water is too shallow	Restart and put it into the pool immediately. Be sure the water depth is over 0.5m.
		A breathing yellow light	Battery low	Fully charge the device and restart
2	Unable to charge	Charger light flashes	Poor contact	Re-plug the charger
3	Do not climb walls		Slippery construction materials	Stick adhesive blocks. (Contact after-sale team for instruction)
			Too dirty water	Clean the filter basket
4	Abnormal wall climbing	Climbing slowly	Filter basket blocked	Clean the filter basket
		Sinking down away from wall or floating on the water	Intake air	Stick adhesive blocks. (Contact after-sale team for instruction)
			Filter basket blocked	Clean the filter basket
5	only clean part area and cannot clean the entire pool		Wrong cleaning mode	Connect to the App and re-choose a suitable cleaning mode
			Firmware not latest	Connect to the App and update the firmware
6	front side up when on the floor		Filter basket blocked	Clean the filter basket
7	Do not clean as set cleaning path		Encounter Obstacles	Clean the filter basket
	stuck at water drains		Drain height is over 3cm	Help the machine away from the obstacle
	Unable to connect to the App		Device power off	Restart
8	The APP cannot be connected when the device is in the pool		Not available	Connect the device on the shore

CERTIFICATION

WYBOT robotic pool cleaners have passed all performance and reliability tests and also has obtained relevant certifications from the countries in which they are sold, you can rest assured.



Intertek

WYBOT CUSTOMER CARE

Due to the need for continuous products improvement, the products in the manual are subject to the real products, and WYBOTICS Co., Ltd. reserves the right to update products.

If you encounter any problems during use, please contact after-sale team. For more details, please contact WYBOTICS website www.wybotpool.com

Wybot Customer Service:

Email: support@wybotpool.com

Facebook: @WybotPool

Tel: 1-866-777-6655

Document No. A2024210C01

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.