


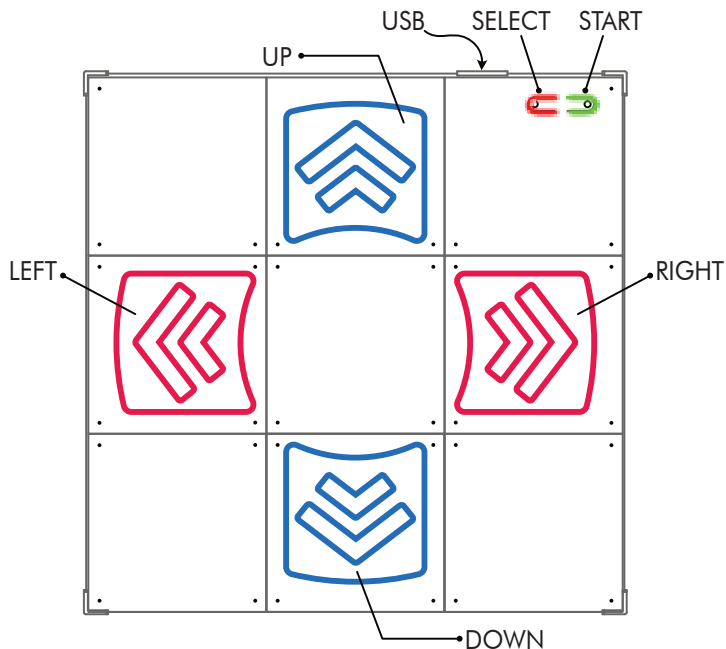

### IN THE BOX:


- 1x interactive mat
- 1x USB cable
- 1x user manual



### PROGRAMMING MODE

- 1 Stand or kneel on the marked spots on the mat and press START and SELECT.

The white lights will pulse. Once all the lights are on, you can unpress START and SELECT buttons.  
The mat is now ready to be programmed!

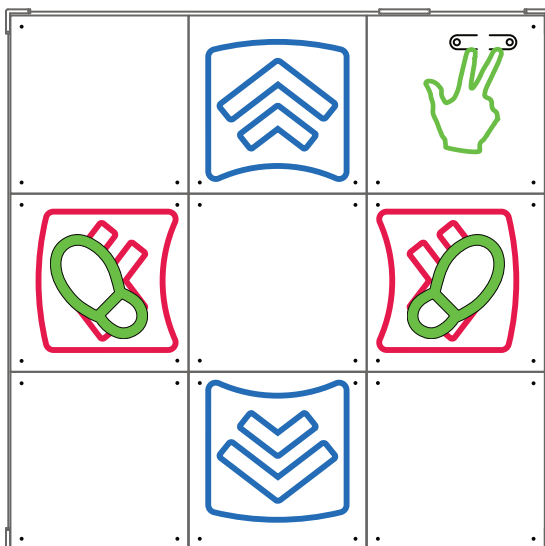

### SWITCHING PROGRAMMING MODES




- 2 To switch programming profiles, simply press START or SELECT. The profiles will change through:

**DANCEPAD MODE** - green+red light


**KEYBOARD MODE** - purple light

**KEYBOARD MODE** - orange light


**JOYPAD MODE** - blue+yellow light

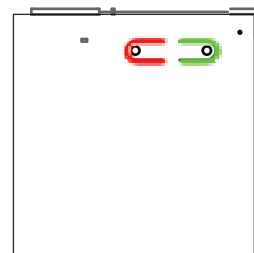


DANCEPAD MODE

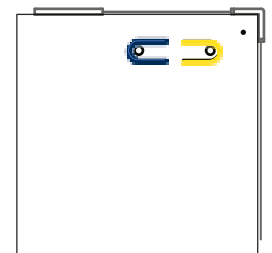

JOYPAD MODE

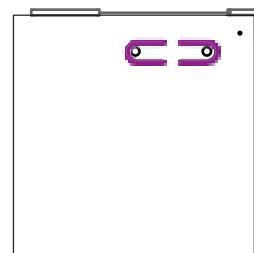

KEYBOARD MODE

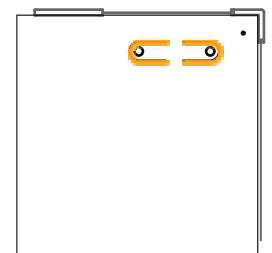


KEYBOARD MODE


### ACTIVATE PROGRAMMING MODE




- 3 The programming profile is confirmed by stepping off the mat. Simply done!

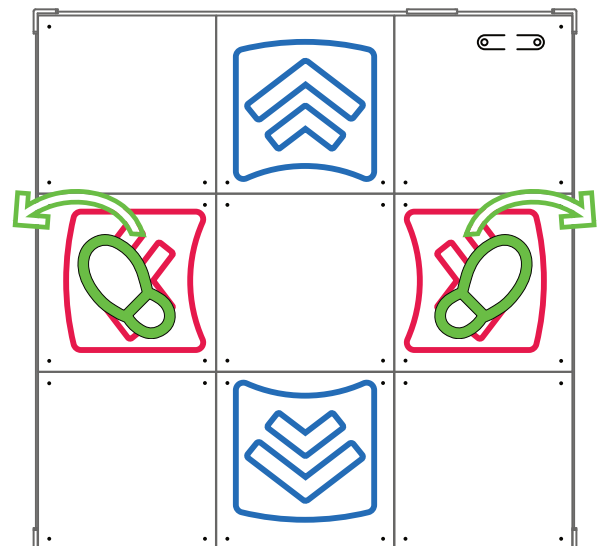


### DANCEPAD PROFILE

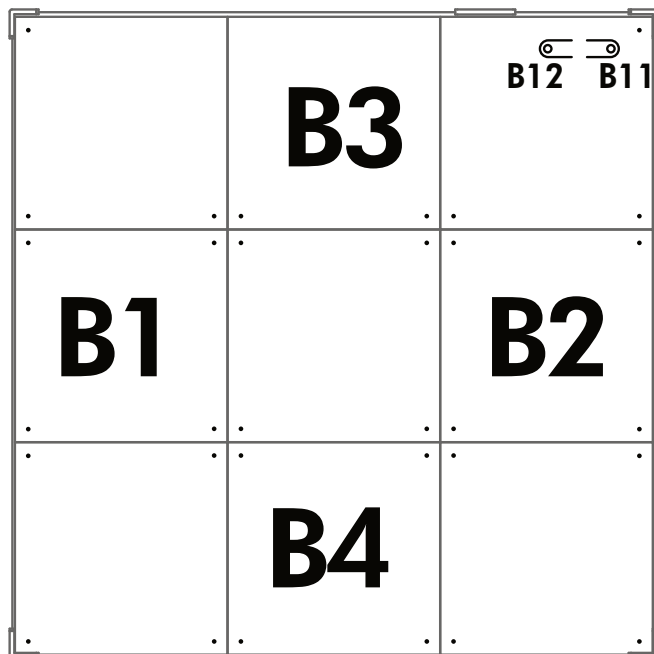

### JOYPAD PROFILE

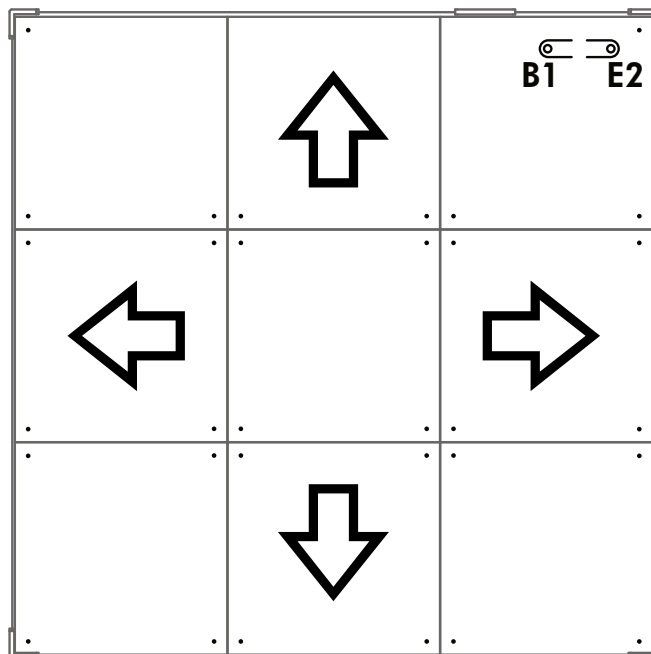

### KEYBOARD PROFILE

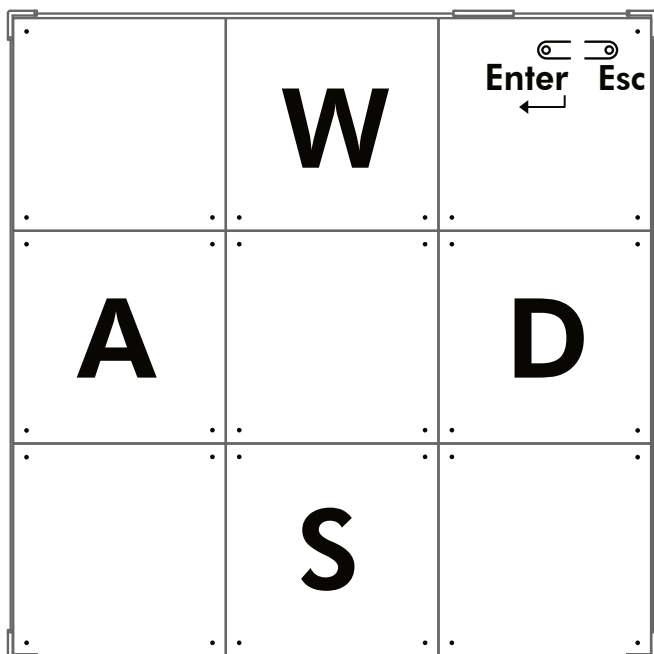

### KEYBOARD PROFILE

