



Installation


Ignitor Installation Instructions KIT03033



WARNING!

Hazardous Voltage!

Disconnect all electric power including remote disconnects before servicing. Failure to disconnect power before servicing can cause severe personal injury or death.

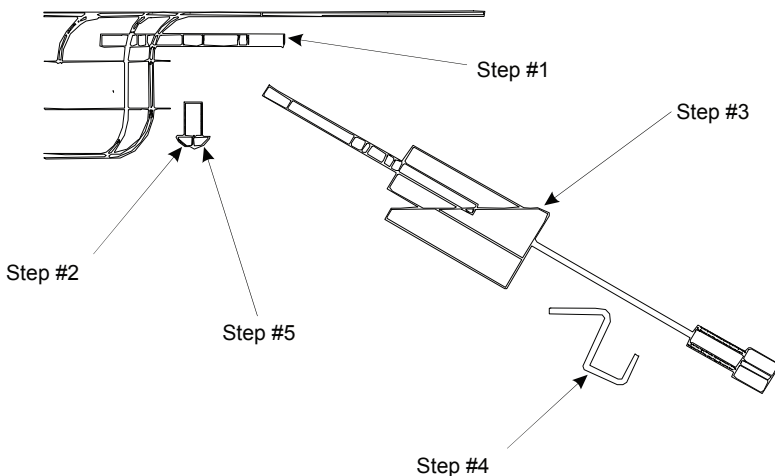

Step 1 - Place gasket over ignitor opening.

Step 2 - Install screws. (Tighten only part of the way.)

Step 3 - Insert ignitor in opening.

Step 4 - Install spring retainer over screws.

Step 5 - Tighten screws.

Trane optimizes the performance of homes and buildings around the world. A business of Ingersoll Rand, the leader in creating and sustaining safe, comfortable and energy efficient environments, Trane offers a broad portfolio of advanced controls and HVAC systems, comprehensive building services, and parts. For more information, visit www.Trane.com.

Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice.