



Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Nicam		Audio / Lang I/II
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0

Original	Replacement	Original	Replacement
	Recall		Back / Return
	Del		Shift + Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Up		Up
	Info		Info / Angle
	Left		Left
	OK / CH List		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear



