Wireless charging input

無線充電輸入

无线充电输入

 
momax

使用説明 / 使用说明

PinCard Ultra Mini

Rechargeable Find Mv Mini Locator with UWB 可充電迷你全球定位器帶UWB功能 可充电迷你全球定位器带UWB功能





(B)

Works with Apple Find My Use of the Works with Apple badge means that a

product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

To use the Apple Find My app to locate this item, the latest version of iOS_iPadOS_or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS

操作/操作

PRODUCT SETUP

- authentication turned on. 2. Turn on Bluetooth on your Apple device, and go to
- 3. Open the Find My app, then select the items tab.
- onscreen instructions until the setup is successful. * If the product cannot be found, please short

- 1. 裝有 iOS 14.5 或 iPadOS 14.5 或之後版本, 並已啟用 雙重認證的 iPhone、iPad 或 iPod touch
- ·開啟【定位服務】,然後向下捲動並點-【尋找】, 允許取用位置及開啟【精確位置】
- 2. 在Apple設備上打開藍牙、並且前往【設定】→【私隱
- 3. 開啟【尋找】應用程式,然後選擇物品分頁。

INSTRUCTION FOR USE

- 1. You need an iPhone iPad or iPod touch with iOS 14.5 or iPadOS 14.5 or later and Apple-ID two-factor
- Settings → Privacy → turn on Location Services then scroll down and tap Find My, allow location access and turn on Precise Location.
- 4. Click Add Item and then click Add Other Items. 5. After finding the item, press Connect and follow the
- nress the reset button to wake up the product you will hear a prompt sound, and then continue

4. 點擊【加入物品】,再點擊【添加其他物品】 到添加成功

- 5. 找到物品後按下【連線】,繼續按指示操作,直
 - * 如果搜索不到本產品, 請短按重置按鈕來喚醒 產品,產品會發出提示音,然後繼續連線。

- 1. 装有 iOS 14.5 或 iPadOS 14.5 或之后版本,并已启用 双重认证的 iPhone、iPad 或 iPod touch。
- 2. 在Apple设备上打开蓝牙、并目前往【设置】-【私隐与安全性】→开启【定位服务】 动并点一下【查找】,允许取用位置及开启【精
- 3. 开启【查找】应用程序,然后选择物品分页。 点击【+】,再点击【添加其他物品】。

When the tracker is a certain distance away from

the host device, to mark an item as lost, you need to

找到物品后按下【连接】,继续按指示操作,直

SETUP THE LOST MODE

turn on Lost Mode

到添加成功。 * 如果搜索不到本产品, 请短按复位按钮来唤醒

产品,产品会发出提示音,然后继续连线。

- - 3. 在【丢失模式】下方,点一下【启用】

2. Tap Items at the bottom of the screen, then tap the name of the lost item.

- 3. Below Lost Mode, tap Enable.
- 4. Follow the onscreen instructions to enter a phone number where you can be reached. To enter an email address instead, tan I Ise An Fmail Address Then tan Activate * Make sure you allow notifications for the Find

My app.

- 開啟【遺失模式】 1. 當定位器離開主機一定的距離時, 要將物品標記為 请失,你需要開啟请失模式。
- 3. 在【遺失模式】下方,點一下【啟用】

2. 點一下螢幕底部的【物品】, 然後點一下遺失物品

Δ 依昭祭菓 F的指示操作,輸入可以與你際終的雷 膝碼。芸要改為輸入雷子郵件抽址, 詰點一下【4 用電子郵件地址】。然後按下【啟用】

*請先確定允許【尋找】App 的通知。 开启【丢失模式】

- 1. 当定位器离开主机一定的距离时,要将物品标记为 丢失,你需要开启丢失模式。
- 2. 点一下屏幕底部的【物品】, 然后点一下丢失物品

4. 依照屏幕上的指示操作,输入可以与你联络的电话 号码。若要改为输入电子邮件地址,请点一下【使 用电子邮件地址】。然后按下【启用】。

*请先确定允许【查找】App 的通知。

- SEE YOUR TRACKER ON THE MAP 1. Open the Find My app, then tap the Items Tab.
- 2. Choose the tracker you want to locate in the Items List. 3. If the tracker is within range of your device or the 4. 如果定位器不在你装置或【查找】网络的任何装置 Find My network has recently detected it, you will see it on the map. An updated location and timestamp
- 时涌知】 4. If the tracker isn't within range of your device or any devices in the Find My network, you will see its last known location and timestamp. To be notified when your tracker is within range of your device or detected PLAY A SOUND by the Find My network, turn on Notify When Found Open the Find My app on your iPhone, iPad or iPod under Notifications

在地圖查看定位器位置

will appear under its name.

- 1. 打開【尋找】應用程式,然後點按【物品】分頁。
- 3. Tap Play Sound. If your tracker is within Bluetooth 2. 在【物品】清單中選擇您要定位的定位器。 range, it will play a sound. 3. 如果定位器位於你裝置的覆蓋範圍或最折偵測到定 4. To stop this sound before it ends automatically, tap

型號: BR18

續航力 : 3個月

防水等級 : IP68

無線版本 : 版本 5.1

電池容量 : 3.7V == 100mAh

輸入功率 : 0.25W (DC 5V=50mA)

· 覆芸節圍內,你可看到其最後已知位置和時間。加

要在完位器准入你裝置節圍內或可由【尋找】網絡

偵測到時接收通知,請開啟【通知】下的【找到時

打开【查找】应用程序,然后点按【物品】分页。

3. 如果定位器位于你装置的覆盖范围或最近侦测到定

位器的【查找】网络范围内,你便可在她图看到。

之覆盖范围内, 你可看到其最后已知位置和时间。

如要在定位器讲入你装置范围内或可由【查找】网

2. In the items list, choose the tracker that you want to

络侦测到时接收通知,请开启【通知】下的【找到

2. 在【物品】清单中选择您要定位的定位器。

其名称下方会显示更新的位置和时间。

touch, then tap the Items Tab.

在地图查看定位器位置

位器的【尋找】網絡範圍內,你便可在地圖看到 其名稱下方會顯示更新的位置和時間。 4. 如果定位器不在你裝置或【尋找】網絡的任何裝置

- 在 iPhone · iPad 或 iPod touch 開啟【尋找】app · 然後點一下【物品】分頁
- 2. 在【物品】清單中,選擇要播放聲音的定位器。 3. 點一下【播放聲音】。如果定位器位於藍牙訊號範 圍內, 便會播放整音
- 4. 要在定位器自動停止前停止播放聲音,你可點一下

ANTI-STALKING

- . 在 iPhone、iPad 或 iPod touch 开启【查找】app 然后点一下【物品】分页。
- 2 這此功能為特音製作,旨在防止他人在你不知情的 一下【播放声音】。如果定位器位于蓝牙讯号范 青況下試圖追蹤你,如果你感到安全受威脅,請聯 格當地執法人員*
 - * 本產品加入了防止他人擅自追蹤的功能, 應用來追蹤他人,亦不應用來追蹤不屬於你的 财物。在全球很多國家和地區, 未經他人同意

If any tracker and other Find My network accessor

- products leave their owners and move with you for 防止擅自追踪 a period of time you will receive a notification to your Apple device through the Find My app and be able to observe the route and duration.
- 2. These features are purpose-built to prevent unknowing attempts to track you, and if you feel your safety has been threatened, please contact local law enforcement* * This product include features to guard against unwanted tracking. They should not be used to

- property that does not belong to you. Using these products to track people without their

- 2. 在【物品】清单中,选择要播放声音的定位器。
- 要在定位器自动停止前停止播放声音,你可点一下【停止声音】。

如果任何定位器和其他【查找】网络配件产品离开 了其拥有去, 并随你移动一段时间, 你可以诱讨 【查找】应用程序传送通知到你的 Apple 设备,并 能够观察到随你移动的行走路径及时间。

track people, and should not be used to track

consent is a crime in many countries and

1. 如果任何定位器和其他【尋找】網絡配件產品離開

7 苴擁有者,並隨你移動一段時間,你可以诱過

尋找】應用程式傳送誦知到你的 Apple 設備, 並能

夠觀察到隨你移動的行走路徑及時間

使用這些產品追蹤別人即屬犯罪。

regions around the world.

防止擅自追蹤

这此功能为特章制作,旨在防止他人在你不知情的 青况下试图追踪你,如果你感到安全受威胁,请联 络当地执法人员*

* 本产品加入了防止他人擅自追踪的功能,不应用来追踪他人,亦不应用来追踪不属于你的 财物。在全球很多国家和地区,未经他人同意 使用这些产品追踪别人即属犯罪。

PRODUCT RECHARGE (This product only supports wireless charging)

up in red.

- 1. There is a wireless charging logo printed on the back of the tracker.
- 2. Align the side with the charging logo on the wireless charging base.
- 3. You need to manually find the charging position When charging correctly, the tracker lights up in green, and when fully charged, the tracker lights up in blue, and when playing sound, the tracker lights
- The product is compatible with 5W-15W wireless chargers, and the surface of the charger must be

產品充電 (該產品僅支持無線充電方式) 1. 定位器背面印有無線充電標誌。

- 2. 將帶有充電標誌的一面對準無線充電底座。 3. 需要手動尋找充電位置,正確充電時定位器亮綠燈。
- 充滿時定位器亮藍燈,播放聲音時定位器亮紅燈 本产品的电池无法拆卸或更换。 我们的保修不包括 4. 產品兼容5W-15W無線充電器,充電器表面要求平整

产品充电(该产品仅支持无线充电方式) 1 定位哭背面印有王线女由标士

2. 将带有充电标志的一面对准无线充电底座

3. 需要手动寻找充电位置,正确充电时定位器亮绿灯

4. 产品兼容5W-15W无线充电器,充电器表面要求平整。

The battery of this product cannot be removed or

replaced. Our warranty doesn't cover batteries that

本產品的電池無法拆卸或更換。 我們的保修不包括

wear down from normal use.

因正常使用而磨損的電池。

充满时定位器亮蓝灯,播放声音时定位器亮红灯

vou're connecting to Scroll to the bottom of the page, click Remove Item,

PRODUCT REMOVAL

then click Remove.

1. Open the Find Mv app and select the item tab

2. 滾動到頁面底部,點擊 [移除物品],然後點擊 [移除]

产品移除

- 1. 开启 [查找] 应用程序,然后选择正在连接中的物品
- 2. 滚动到页面底部,点击[移除物品],然后点击[移除]





BR18_Manual_NewSize_aw

Waterproof and dustproof 防水防塵 / 防水防尘

his device has been tested and certified to be resistant to splash, water, and dust with the classification IP68 ingress protection for submersion in one meter of static fresh water for up to 30 minutes. However, such water

resistance features only pertain to specific conditions tested in a laboratory environment, which do not correspond to the normal conditions of use by consumers. Therefore. protective functions cannot be guaranteed if the product is exposed to environments outside the test conditions. Do not expose the charger to water while charging, it may result in permanent damage to the device or power source.

本设备已经过测试并证实可防溅水、防水和防尘作用

與 Apple Find My 配對。

- 安裝完成後,打開應用程式並點選「+」按鈕,搜尋 並加入 Momax BR18。
- 在使用 UWB 功能之前,请确保 Momax BR18 已成功 与 Apple Find Mv 配对。

- Reset hutton

重置按鈕/ 复位按钮

Before using the UWB feature, please make sure that the Momax BR18 is successfully paired with Apple

UWB feature

UWB 功能

Then, on the same Apple device, open the App Store and search for "Momax Pinpoint" to download the

After installation, launch the app and tap the "+ button to search for and add the Momax BR18. Locate the nearby BR18, and the ann will show an arrow pointing in the direction and indicating the

在使用 UWB 功能之前,請確保 Momax BR18 已成功

找到附近的 BR18,應用程式會顯示一個箭頭指向方向

然后,在同一台 Apple 装置上,打开 App Store 并搜寻

并加入 Momax BR18。 找到附近的 BR18,应用程式会显示一个简

安装完成后,打开应用程式并点选「+」按钮,搜寻

箭头指向方向	Enter App			
	Add Item	Enter the interface, tap the "+" butt to add an item		
	Set Item Name and Chart	Tap "connect," then set the item no and chart/image		
	Item Function List	In the item list, tap the added item		
	Distance/Find Item	Tap "Find" in the item function lis		
	Item Route	Tap "Directions" in the item function		
	Rename Item and Set Image	Tap "Rename Item," then set the na and image		
	Delete Item	Tap "Remove Item" in the item funct list, then confirm in the popup window ("Remove")		
	Play Sound	Tap "Play Sound" in the item function		
	Read Firmware Version	Tap "Check Update" in the iten function list		
	Add Tag not yet in "Find my"	Search in the item addition list for ta like BR19,BR18, or other names not added to Find My		
	Remove "Find my"	Remove the tag from "Find my"		

l Item	Enter the interface, tap the "+" button to add an item				
m Name Chart	Tap "connect," then set the item name and chart/image				
nction List	In the item list, tap the added item				
e/Find Item	Tap "Find" in the item function list				
Route	Tap "Directions" in the item function list				
me Item et Image	Tap "Rename Item," then set the name and image				
e Item	Tap "Remove Item" in the item function list, then confirm in the popup window ("Remove")				
Sound	Tap "Play Sound" in the item function list				
irmware rsion	Tap "Check Update" in the item function list				
ng not yet ind my"	Search in the item addition list for tags like BR19,BR18, or other names not yet added to Find My				
"Find my" Test with omax	Remove the tag from "Find my". Operate the item in the Momax app to test functionality				
	Press and hold the button, listen for di				

UWB Operation UI

	Operation Method	
to o	Tap the Momax Pinpoint app software	AP
	Enter the interface, tap the "+" button to add an item	90
me t	Tap "connect," then set the item name and chart/image	設
List	In the item list, tap the added item	物品
Item	Tap "Find" in the item function list	
Э	Tap "Directions" in the item function list	物
em age	Tap "Rename Item," then set the name and image	- 1
n	Tap "Remove Item" in the item function list, then confirm in the popup window ("Remove")	信
i	Tap "Play Sound" in the item function list	f
are	Tap "Check Update" in the item function list	物品
yet y"	Search in the item addition list for tags like BR19,BR18, or other names not yet added to Find My	讀取 添加
my* /ith	Remove the tag from "Find my". Operate the item in the Momax app to test functionality	my 移除
В	Press and hold the button, listen for di- didididididi (long di sound), then wait for 10 seconds. When you hear a di sound again, the reset is complete. You can release the button, and the UWB will be able to search and	中測

操作方式 PP雙擊進入 點擊Momax Pinpoint APP軟件 品測距尋物 點擊 "Find 物品路徑 點擊 "Directions 刪除物品 品播放聲音 點擊 "Play Sound"

點擊 "Rename Item" , 設置名稱及關係 點擊 "Remove Item",在彈出窗口點擊 在 "Find my" 中移除該TAG, 並 Momax app內點擊操作功能以測試 長di聲),等待10秒,聽到di聲,即完成 重置,可以鬆開按鍵,UWB即可正常搜尋

ΔPP₹V ± ;# λ 占击Momax Pinnoint APP软件 物品新增 进入界面后点击右侧"+"按钮新增物品 公置物品名称 点击"connect", 设置物品名称 及图表图片 物品功能列表 在物品列表中,点击已添加的物品 物品测距寻物 点击"Find" 物品路径 点击"Directions 点击"Rename Item",设置名称及图像 点击"Remove Item", 在弹出窗口 删除物品 点击"Bemove"删除物品 点击"Play Sound" 連取OTA版本号 点击"检查更新 添加未在"Find 在物品添加界面中搜索未在"Find my"里 my"中的TAG 的BR19、BR18或其他名字的TAG 在"Find my"中移除该TAG. 并在 中的 TAG并测 Momax app内点击操作功能以测试 试 Momax 长按按键, 听到 di---didi---dididi-

操作方式

SPECIFICATION

產品規格 / 产品规格

MODEL: BR18 Battery capacity : 3.7V=100mAh

Waterproof grade: IP68

Weight Compatible with Apple device only

Locator with UWB

2. Instruction manual and warranty card

iPhone and iPod touch models with iOS 14.5 or later iPad models wit iPadOS 14.5 or later iMac and Macbook with macOS 12.5 or later

1. PinCard Ultra Mini Rechargeable Find My Mini

1. PinCard Ultra Mini 可充電迷你全球定位器帶UWB

iOS 14.5 或以上版本的 iPhone 及

包装內容:

- 1. PinCard Ultra Mini 可充电迷你全球定位器带UWB

WARNING Do not dismantle or modify the product;

- 2. Do not store the product in wet conditions;
- part of the product's interface. This would cause damages to the product:
- 6. Avoid high processor load in long running loops or while charging; Ensure good ventilation while using:

properly according to local regulations.

8. In case of overheating, stop using the product.

- 3. MOMAX encourages you to participate in electronics WARRANTY CONDITIONS
- caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our
- must be presented upon request of warranty service: (a) it has explicitly modified or repaired in any way
- (b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or;
- (c) losses or damages are caused by force majeure or natural disasters

3 請勿將產品靠折執源或於執源附近充雷 4. 請勿將水或其它液體流入本產品介面內部,導致本

7. 請於誦風良好的地方使用:

- by persons other than technicians of this company.

- 4. No alteration to this warranty card will be allowed: 5. The warranty terms and conditions are subject to
- change without prior notice; 6. Please retain your proof of purchase for warranty Do not let water or any other liquid flows into the inside
 - Please consult the dealer about the product compatibility with your cell phone/ PDA before purchase. Product specifications are subject to
 - change without prior notice: 8. Please visit www.momax.net for latest product information.

- 1. 請勿自行拆開或改裝本產品 2 請勿將本產品存放在潮濕環境中
- 5. 避免陽光直接照射 6. 使用或充電期間避免長時間運行高耗能的程式
- 8 加出現過熱,請停止使用。 如何處理廢棄電子產品 請勿將電子產品當成家庭廢棄物丟棄
- MOMAX鼓勵您積極參與電子產品回收計劃
- . 由購買日期起12個月內,如產品有損壞或故障,經 本公司技術人員證實為在正常使用之情況下發生,
 - 2. 維修時必須出示本保用證及購買商號之發票正本 如果用戶不能提供,本公司有權不提供維修服務。

因下常使用而磨损的电池。

3 保用期內,出租以下條款產品保用營白動失效

※ 入 產品 內 道 致 產品 捐 懷 :

可能變更,如不只行通生

7 请干通风良好的协方使用

木公司将提供免费维修服务

此保田諮加經涂改,保田諮白動失效:

(a) 非本公司人員恣意拆解或 維修產品之任何部分

b) 錯誤的操作如:非法接駁電源,以及水、污穢物

不可抗拒意外事件或天然災害導致產品損壞

因錯誤使用木公司產品而道致手提雷託或其他雷

大公司右楼增删任何维修及保田修款而不作通知

· 产品有任何捐懷, 木公司不會承擔任何責任

7 有關 MOMAX 原裝產品和你的手機武雷子產品的相

容性,請在購買時向經銷商確認。此產品規格隨時

1. 開啟 [尋找] 應用程式, 然後選擇正在連接中的物品



momox

WARRANTY/保用證/保用证

Model/型號/型号:

ate of Purchase/購買日期/购买日期:

ong Kong and Macau:

香港及澳門: 香港九龍荔枝角長義街10號昌降大廈4樓A室

摩米十科技/深圳/右限公司 有秦有害物质或元素

O:表示该有害有毒物质在该部件所有均质材料中的含量均在 GB/T 26572 标准 初定的限量原变以下 X: 表示核有事有事的至少在该部件的某一均质材料中的含量超过 GB/T 26572

如果用户不能提供,本公司有权不提供维修服务。

(b) 错误的操作如:非法接驳电源,以及水、污秽物

)不可抗拒意外事件或天然灾害导致产品损坏

本公司有权增删任何维修及保用条款而不作通知

如因错误使用本公司产品而导致手提电话或其他电

容性,请在购买时向经销商确认。此产品规格随时

产品有任何损坏,本公司不会承担任何责任

7. 有关 MOMAX 原装产品和您的手机或电子产品的相

保用期内,出现以下条款产品保用证自动失效

(a) 非本公司人员恣意拆解或 维修产品之任何部分

户可能需要支付相关维修费用

此保用证如经涂改、保用证自动失效;

8. 请浏览 www.momax.net 了解最新产品资讯。

可能变更,恕不另行诵告

有靠有害物质或元素附表











Remarks/備註/备注: Customer Service/客戶服務中心/客户服务中心

nit A. 4/E., Cheuna I una Ind. Buda 10 Cheuna Yee Stree ei Chi Kok. Kowloon, Hong Kong lotline: 852-2402 3186 F-Mail: info@momax.ne

服務熱線: 852-2402 3186 電郵: info@momax.ne 中国內地:

东省深圳市龙岗区坂田街道岗头社区雪岗路2016号威 P降布吉厂 RAME 邮编: 518000 全国服务热线: 86-400-886-0010

OMAX is registered trademark of MOMAX Technology Ltd. Il other trademarks are the property of their respective own 權所有 ©2025 MOMAX Technology Ltd。保留所有權利。



有其他商標均為其各自擁有者的財產。 权所有 ©2025 MOMAX Technology Ltd。保留所有权利

OMAX是 MOMAX Technology Ltd 的注册商标。所有其他商标均



本設備已經過測試並証實可防濺水、防水和防塵作用 其防護等級為 IP68,可在一米深的靜態淡水中浸泡長 達 30 分鐘。 然而,此類防水性能僅適用於在實驗室 環境中測試的特定條件,並不符合消費者的正常使用 條件。 因此,若產品處於的環境超出測試條件,則 無法保証其防護功能。充電時請勿將充電器浸入水中, 否則可能會對設備或電源造成永久性損壞。

其防护等级为 IP68,可在一米深的静态淡水中浸泡长达

30 分钟。 然而,此类防水性能仅适用于在实验室环境口

测试的特定条件,并不符合消费者的正常使用条件。 [

此,若产品外干的环境超出测试条件,则无法保证其际

护功能。充电时请勿将充电器浸入水中,否则可能会对

设备或申源诰成永久性损坏。

然後,在同一台 Apple 裝置上,打開 App Store 並搜尋 「Momax Pinpoint」來下載該應用程式。

, 並顯示精確的距離。

Momax Pinpoint」来下载该应用程式

并显示精确的距离。

UWB 操作UI指南

物品新增 推入界面後點鑿右側 "十"按鈕新增物。 置物品名稱 點擊 "connect" , 設置物品名稱 D |品功能列表 | 在物品列表中, 點擊已添加的物品 00未在 "Find 在物品添加界面中搜索未在 "Find m 「中的TAG 裡的BR19、BR18或其他名字的TAI 則試 Momax 長按按鍵,聽到 di---didi---dididi---d 重置UWB

重置UWB 即完成重置,可以松开按键,UWB即可正

Input Rating : 0.25W (DC 5V=50mA)

	: PVC	材質	: PVC
	: 54 x 45 x 3mm	尺寸	: 54 x 45 x 3mm
	: 12g	重量	: 12g
v	· Annie Find My	兼容性	: 僅兼容Apple設備

iPod touch系列 iPadOS 14.5 或以上 版本的 iPad系列 MacOS 12.5或以上 版本的 iMac及Macbook系列

2. 使用説明書及保用證

重量

型号: BR18

续航力 : 3个月

防水等级 : IP68

材质 : PVC

无线版本 : 版本 5.1

R → · 54 x 45 x 3mm

兼容性 : 仅兼容Apple设备

电池容量 : 3.7V==100mAh

输入功率 : 0.25W (DC 5V=50mA)

iOS 14.5 或以上版本的 iPhone 及

iPod touch系列 iPadOS 14.5 或以上

版本的 iPad系列 MacOS 12.5或以

版本的 iMac及Macbook系列

2. 使用说明书及保用证

Do not keep or use the product near heat sources;

- 5 Avoid direct sunlight. Keep away from heat source:
- DISPOSAL OF ELECTRONIC PRODUCTS Do not place the product as household waste Please dispose of discarded electronic products.

recycling program. For any defect, in the judgment of our technician.

- A valid warranty card and original purchase invoice This warranty card shall not apply to the product if
- 2 請依當地的法例規定處理廢棄的電子產品
- 本公司將提供免費維修服務
- 用戶可能需要支付相關維修費用

8. 請瀏覽 www.momax.net 瞭解最新產品資訊。 请勿白行抵开武改装木产品: 请勿将本产品存放在潮湿环境中 请勿将产品靠近执源或干执源附近夯由

请依当地的法例规定处理废弃的电子产品

. MOMAX鼓励您积极参与电子产品回收计划。

,由购买日期起12个月内,如产品有损坏或故障,经

2. 维修时必须出示本保用证及购买商号之发票正本

本公司技术人员证实为在正常使用之情况下发生,

 
4. 请勿将水或其它液体流入本产品介面内部,导致本 5 避免阳米吉按昭射 6. 使用或充电期间避免长时间运行高耗能的程式。

8. 如出现讨热,请停止使用。 如何处理废弃电子产品 . 请勿将电子产品当成家庭废弃物丢弃



CE F© 5

其各自拥有者的财产



电邮: info@momax.net.cn

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class Bigital device, porsumant to part 15 of the PCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and on radiate radio frequency energy and, if no installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or talevision reception, which can be determined by turning the equipment off and the following machine to the control of the following th

· Reorient or relocate the receiving antenna.

the receiver is connected.

- Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which
- · Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired noneration.

The device has been evaluated to meet general RF exposure requirement.