

For upgrade of Zero II FirmWare you need

1. To setup the FlashTool SW for PC

<https://rigexpert.com/files/software/FlashTool/FlashToolForWindows/> for Windows OS or

<https://rigexpert.com/files/software/FlashTool/FlashToolForMacOS/>

for MacOS

2. To connect Zero II unit to the PC (microUSB – Type-A USB cable)

3. To run the FlashTool SW

4. In opened Dialog window to push "Next" → Choose "Update from Internet"

5. Push the "Next"

6. Wait the FW update will be done

7. Push "Finish"

8. Disconnect the Zero II from PC.