

PEANUTS[®] WIRELESS KARAOKE MICROPHONE



USER MANUAL

Welcome to the Show! Thanks for choosing the Peanuts Karaoke Microphone. Whether you're singing solo or hosting a family jam session, this all-in-one mic is ready to bring the fun. With Bluetooth[®] connectivity, built-in speaker, voice effects, and multiple ways to play your favorite tunes, you're just a power-on away from your next performance. Let's get started and make some noise!

Includes: Wireless Karaoke Microphone, USB-C Charging Cable, User Manual

PRODUCT KEY

- | | |
|---------------------------------|-------------------------|
| 1. Previous Song | 8. Voice Changer |
| 2. Next Song | 9. Volume Down |
| 3. MIC VOL Adjust | 10. REMIX Adjust |
| 4. LED Indicator Light | 11. USB-C Charging Port |
| 5. FM mode / Power On, Off | 12. TF Card Slot |
| 6. Radio Channel / Play / Pause | 13. AUX Headphone Port |
| 7. Volume Up | 14. USB Port |

SPECS

Frequency Range: 100 Hz - 10 KHz
Maximum Sound Pressure Level: >115 dB 1 KHz THD<1%
Reverb Mode: Echo Sound Reverb
Power Supply: Built-in 1200 mAh Li-ion Battery
Charging Voltage: DC 5V - 300 mA

CHARGING

To begin charging your microphone, connect the provided USB-C cable to the microphone charging port (11), and plug the other end into any USB port or 5V power source. A red LED indicator light between ports (11) and (13) will glow to show that charging is in progress. Once fully charged, the red light will automatically turn off. If the battery level becomes too low, the microphone will power off. Always disconnect the charging cable after charging is complete. Charge your microphone for at least 3 hours before initial use.

AUDIO MODE

To change the audio output mode, tap the power button (5). This will cycle through the available audio sources: Bluetooth, TF card, FM radio, AUX cable, and USB drive. Note: Each mode will only be available when the corresponding card, cable, or drive is properly connected.

PAIRING

Press the power button (5) on your microphone. When connecting to Bluetooth[®], the blue light will flash rapidly. Once connected, the blue light remains solid. While playing music, the blue light will flash slowly. The speaker will say "Bluetooth[®] pairing," indicating it is searching for a Bluetooth device. Open the Bluetooth settings on your phone or audio device and select "Peanuts Karaoke Mic" from the list. Once connected, a voice will confirm: "Bluetooth[®] connected."

OPERATION

Once the karaoke mic is connected, you can stream audio from your mobile device. Use the speaker volume controls (7 and 9) to adjust the sound from low to high. You can also control the volume directly from your mobile device. Long press (8) to activate the voice changer. There are five voice options: original, female, male, old, and monster. Short press (8) to activate functions (3) and (10).

Press Next (2) to skip to the next song. Press Previous (1) to replay a song. Press the Play/Pause button (6) to stop or resume playback.

MICROPHONE

To use the mic for singing, first raise the volume (7 and 9) to your desired level. Then, use the remix control (10) to adjust the balance between your voice and the background music. This controls the volume of the streaming audio so you can sing solo or sing along with the music playing through the microphone.

FM MODE

Press the Power Button (5) once to switch the device from Bluetooth mode to FM mode. To hear sound from the FM tuner, long press button (6) to automatically search for available radio stations. Press button (1) or (2) to go to the previous or next station.

TF CARD

Before inserting a compatible TF card, ensure that it contains only MP3 audio files. Insert the TF card into the TF Card Slot (12) or a USB drive into the USB port (14). The music will play automatically after insertion. (Note: The device supports memory up to 16GB.) Press button (5) to switch modes, and press button (6) to play or pause the audio.

AUX OUTPUT

Insert a compatible AUX cable into the AUX Port (13) on the control panel of your microphone. You can connect the other end to a speaker to amplify the microphone's audio, or to headphones for private listening. The connected device will automatically play the current audio.

NOTE: Pair your karaoke microphone with your favorite music source! For the best experience, search your device's app store for free karaoke apps, or simply find songs on YouTube by searching the song title and artist followed by 'karaoke'.

WARNING

Please disconnect the charger and turn your product off before cleaning. Warranty will be voided if you attempt to disassemble the product yourself. Placing the product in direct sunlight can cause premature aging. Avoid operating in dusty places or dirty environments. Avoid extreme heat or cold when using product (-10 °C to 40 °C). Avoid spilling liquid or inserting foreign objects into the device. The product must not be dropped or subjected to intentional impact. Disassembly, impact, sun exposure, fire, and compression can cause battery failure. If the battery is compromised please do not continue to use.

WARRANTY

This product has a 1 year warranty against defects in manufacturing under regular consumer use. For instructions about how to obtain warranty service for your product, please contact Customer Service: info@primebrandsgroup.com.

The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. This product is compatible with all wireless audio devices, Bluetooth[®] and non-Bluetooth[®].

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ WARNING: Cancer and Reproductive Harm - www.P6Warnings.ca.gov

©2025 Peanuts Worldwide LLC. www.Peanuts.com


©2025 Prime Brands Group. All rights reserved. All trade names are registered trademarks of the respective manufacturers listed. Made in China.
Prime Brands Group • Brooklyn, NY 11232 • SHOPSOAR.COM



PEANUTS[®]

WIRELESS KARAOKE MICROPHONE

USER MANUAL

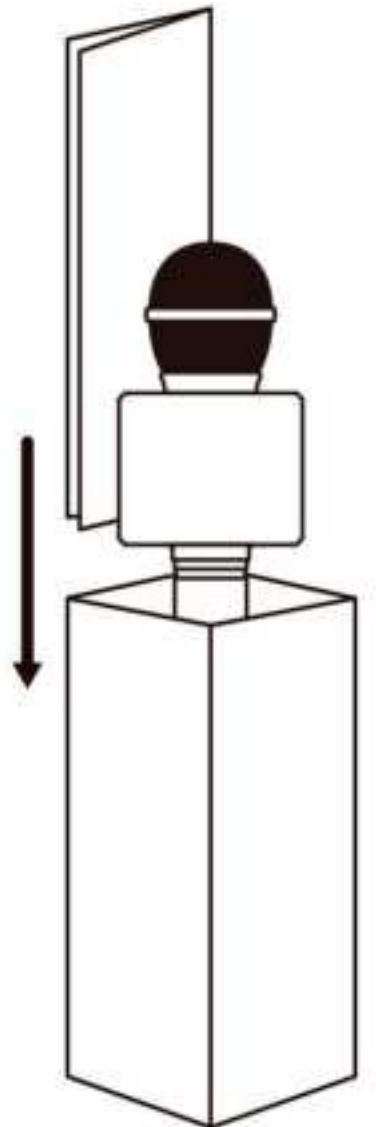

www.Peanuts.com
©2025 Peanuts Worldwide LLC

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.