



# DJUPFRYSA

 


Design and Quality  
IKEA of Sweden


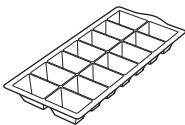


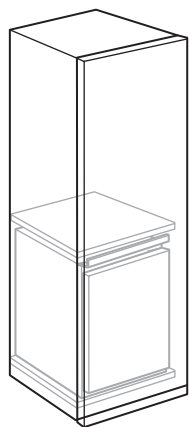

1x




1x

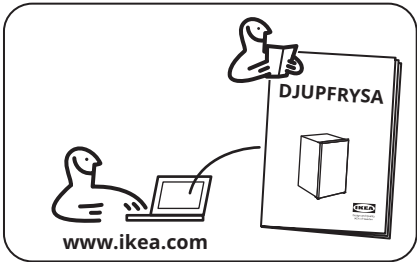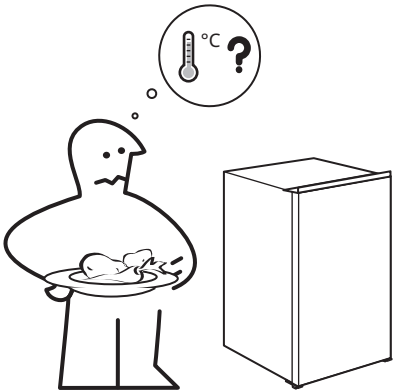

## Product description

### Product overview

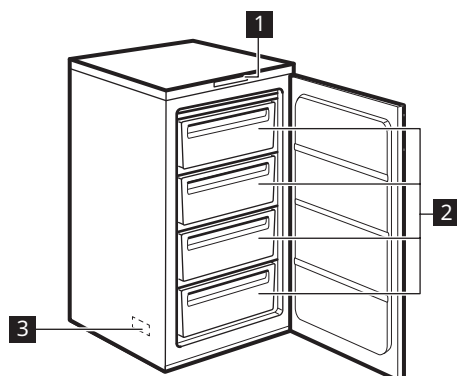

- 1** Control panel
- 2** Freezer drawers
- 3** Rating plate (situated inside of the appliance)

### Cleaning the interior

Before using the appliance for the first time, the interior and all internal accessories should be washed with lukewarm water and some neutral soap to remove the typical smell of a brand-new product, then dried thoroughly.

- ⚠ Caution!** Do not use detergents, abrasive powders, chlorine or oil-based cleaners as they will damage the finish.

- ⚠ Caution!** The accessories and parts of the appliance are not suitable for washing in a dishwasher.




## Installation

- ⚠ Warning!** Refer to Safety chapters.
- ⚠ Warning!** Refer to installation instruction document to install your appliance.
- ⚠ Warning!** Fix the appliance in accordance with installation instruction document to avoid a risk of instability of the appliance.

### Location

This appliance should be installed in a dry, well ventilated indoor position. Do not install the appliance in the nearby of the heat source (oven, stoves, radiators, cookers or hobs) or in a place with direct sunlight.

This appliance is intended to be used at ambient temperature ranging from 10°C to 43°C.

-  The correct operation of the appliance can only be guaranteed within the specified temperature range.
-  If you have any doubts regarding where to install the appliance, please turn to the vendor, to our customer service or to the nearest Authorised Service Centre.
-  It must be possible to disconnect the appliance from the mains power supply. The plug must therefore be easily accessible after installation.

## Inspection checklist

Please follow the inspection checklist before using your appliance. If any answer is "NO", follow the relevant action. Remember to write down the product serial number and article number as required and attach your receipt to this page.

Product serial number (Ser. No.):


.....

Product article number (Art. No.):

.....


Purchasing date:

.....

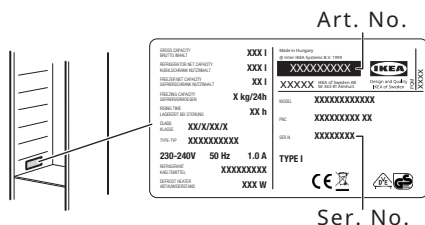

To check	If the answer is NO
Make sure gasket seals all around the door when the door is closed.	Refer to the assembly instruction - door alignment.
Check if there is no collision between parts/furniture while opening and closing the door.	Refer to the assembly instruction - door alignment.
Install the appliance in the built-in structure.	Follow the assembly instruction for the proper installation.
Make sure that at first installation or after reversing the door the appliance stands in vertical position for at least 4 hours before it is connected to the power supply.	Wait 4 hours before connecting the appliance to the power supply.

## Control panel

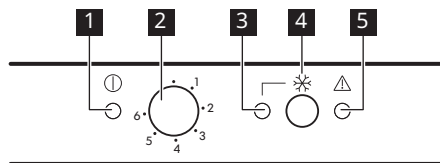

- 1** Power indicator light
- 2** Temperature regulator and On/Off switch
- 3** Fast Freezing light
- 4** Fast Freezing switch and alarm reset switch
- 5** Alarm light

### Switching on

1. Insert the plug into the wall socket.
2. Turn the **2** Temperature regulator clockwise to a medium setting.  
If the temperature inside the appliance is too high, the **5** Alarm light will blink and the acoustic alarm will turn on.
3. To turn off the alarm, push the **4** Fast Freezing switch. The **5** Alarm light will blink until the internal temperature has reached a level required for the safe conservation of frozen food.

### Switching off

1. Turn the **2** Temperature regulator to the "." position.  
The **1** Power indicator light will switch off.
2. Remove the plug from the wall socket.

### Temperature regulation

To operate the appliance:

1. Turn the temperature regulator clockwise to obtain a lower temperature inside the appliance.

2. Turn the temperature regulator counterclockwise to obtain a higher temperature inside the appliance.

### Fast Freezing function

- i** To freeze fresh food activate the Fast Freezing function at least 24 hours before placing food in the appliance.

To switch on the function:

1. Press the **4** Fast Freezing button for 2-3 seconds to activate the Fast Freezing function. The **3** Fast Freezing light will switch on.
2. Place the food in the freezing compartment and keep the Fast Freezing function switched on for further 24 hours.

- i** This function stops automatically after 52 hours. It is possible to deactivate the function at any time by pressing the **4** Fast Freezing switch for 2-3 seconds.

### High temperature alarm

When there is a temperature increase in the freezer compartment (e.g. due to a power failure) the **5** Alarm light is blinking and sound is on.

The sound can be switched off at any time by pressing the **4** Alarm reset switch.

When normal conditions are restored the **5** Alarm light stops blinking and the sound turns off automatically.

### Door open alarm

An acoustic alarm sounds when the door is left open for around 80 seconds.

After closing the door, the acoustic alarm stops.

In any case, press the **4** Alarm reset switch to deactivate the acoustic alarm.

## Freezing and storage of frozen food

When activating an appliance for the first time or after a period out of use, before putting the products in the compartment let the appliance run at least 3 hours with the Fast Freezing function switched on.

To freeze fresh food activate the Fast Freezing function at least 24 hours before placing the food to be frozen in the freezer compartment.

Store the fresh food evenly distributed in the first compartment or drawer from the top.

The maximum amount of food that can be frozen without adding other fresh food during 24 hours is specified on the rating plate (a label located inside the appliance).

 
If large quantities of food are to be stored, remove all drawers and place the food on shelves.

Keep the food no closer than 15 mm from the door.



**Caution!** In the event of accidental defrosting, for example due to a power failure, if the power has been off for longer than the value shown on rating plate under "rising time", the defrosted food must be consumed quickly or cooked immediately then cooled and then re-frozen.

## Hints and tips

- Freezer compartment is the one marked with .
- The medium temperature setting ensures good preservation of frozen food products.  
Higher temperature setting inside the appliance may lead to shorter shelf life.
- The whole freezer compartment is suitable for storage of frozen food products.

## Troubleshooting

Be sure to check "Inspection checklist" before using your appliance. If you encounter an issue with your appliance, check "Troubleshooting" chapter in the full

version of the User Manual available on: [www.ikea.com](http://www.ikea.com).

## Technical data

**Non-EU:**

The QR code on the energy label supplied with the appliance provides a web link to the

information related to the performance of the appliance. Keep the energy label for reference together with the user manual and all other documents provided with this appliance.

**EU:**

The QR code on the energy label supplied with the appliance provides a web link to the information related to the performance of the appliance in the EU EPREL database. Keep the energy label for reference together

with the user manual and all other documents provided with this appliance.

It is also possible to find the same information in EPREL using the link <https://eprel.ec.europa.eu> and the model name and product number that you find on the rating plate of the appliance.

See the link [www.theenergylabel.eu](http://www.theenergylabel.eu) for detailed information about the energy label.

## Information for test institutes

Installation and preparation of the appliance for any EcoDesign verification shall be compliant with BS EN 62552 (for UK) / EN 62552 (for Ireland). Ventilation requirements, recess dimensions and minimum rear clearances shall be as stated in this User Manual in the Installation chapter. Please contact the manufacturer for any other further information, including loading plans.







211628553-A-182022

