

MACSENSOR  
MACSENSOR  
UL103  
Ultrasonic  
Level Sensor



# MACSENSOR UL103 Ultrasonic Level Sensor User Manual

[Home](#) » [MACSENSOR](#) » MACSENSOR UL103 Ultrasonic Level Sensor User Manual 

## Contents

- [1 MACSENSOR UL103 Ultrasonic Level Sensor](#)
- [2 Product Usage Instructions](#)
- [3 Technical Parameters](#)
- [4 Dimensions](#)
- [5 Wiring Definition](#)
- [6 Installation and Precaution](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

# MACSENSOR

**MACSENSOR UL103 Ultrasonic Level Sensor**



## Product Usage Instructions

### Wiring Not-Recommended

#### Overview


Ultrasonic level (distance) sensor UL103 is a highly reliable, maintenance-free transmission instrument that uses a non-contact measuring method that is not easily affected by environmental electromagnetic fields. It does not come into contact with industrial media and can meet the transmission requirements in most closed or open containers. Its communication protocol used is Modbus-RTU, and the serial port supports 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 baud rates (after changing the baud rate, you need to power off and reconnect). UL103 has high accuracy (0.25%~0.5%F.S for 4-20mA, 0-5V, RS485), minimum blind area ( $\leq 200\text{mm}$ ), DC power supply (DC10-30V, 7-30V by customized), polarity reverse protection, surge lightning protection, anti-obstacle interference, quick response, stable reading value, power-off self-recovery function and many other advantages. We provide installation instructions and videos, as well as OEM service.

### Technical Parameters

Measuring range	2.5m, 5m, 10m, 15m,others on request
Blind area	4-20mA/0-5v(2.5m/5m):≤200mm 4-20mA/0-5V(10m):≤300mm 4-20mA/0-5V(15m):≤500mm
Accuracy	0.25%F.S, 0.5%F.S optional
Beam angle	12°
Measuring mode	Distance mode(default)/level mode optional
Output signal	4-20mA(3 wires)&RS485 Modbus RTU;0-5V(3 wires)&RS485 Modbus RTU O ptional
Power supply	DC 24V(default); DC 12V(by customized)
Working current	≤300mA
Working temp.	-10~50°C(-40~80°C by customized)
Installation mode	Nut clamping fixed installation, screw-installation, M68×2
Response time	0.5s (2.5m/5m default); 1s (10m default); 2s (15m default); 0.5~10s adjustable via software or Modbus commands. Faster settings reduces the lif espan
Product material	Polypropylene + glass fiber
IP rating	IP67(IP68 by customized)

## Dimensions


(Customized products may vary in overall size depending on the sensor selected. Please refer to the actual product for details.)

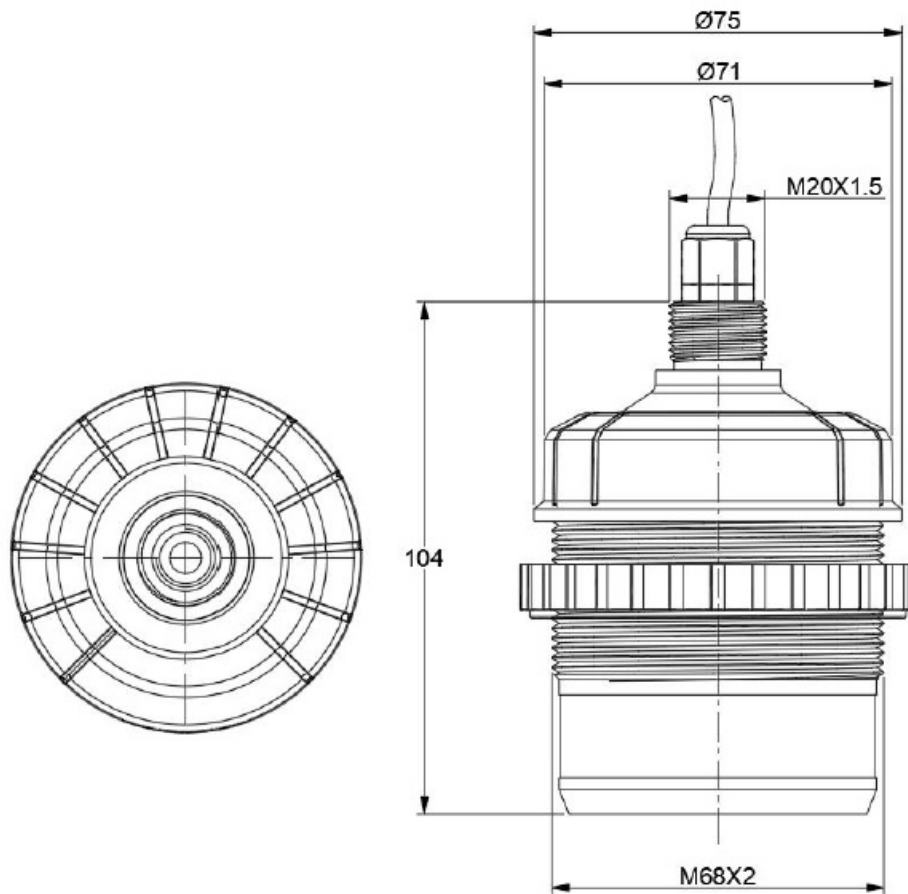

## Wiring Definition


RS485+ 4-20mA(5-wire)

- Wiring Definition
  - U+: Red
  - RS485A: Green
  - RS485B: Blue
  - 4-20mA: Yellow
  - U-: Black

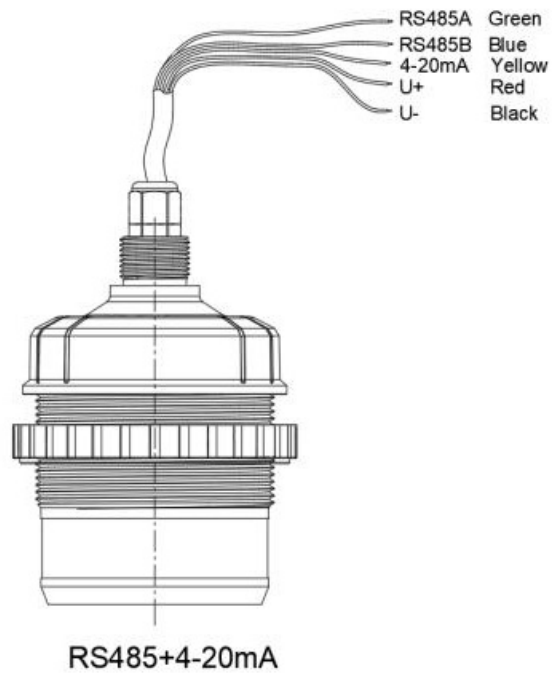

RS485+0-5V(5-wire)


- Wiring Definition
  - U+: Red
  - RS485A: Green
  - RS485B: Blue
  - 0-5V: Yellow
  - U-: Black

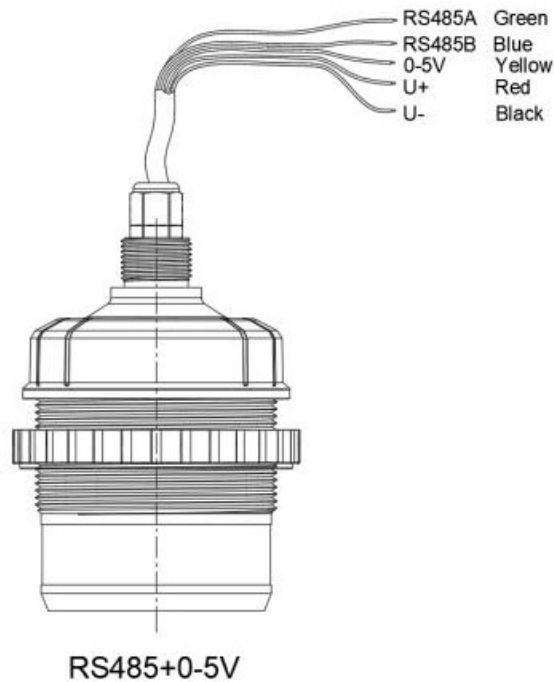


## Installation and Precaution

Installation diagrams for different shapes of tanks


- Measurement in rectangular tanks

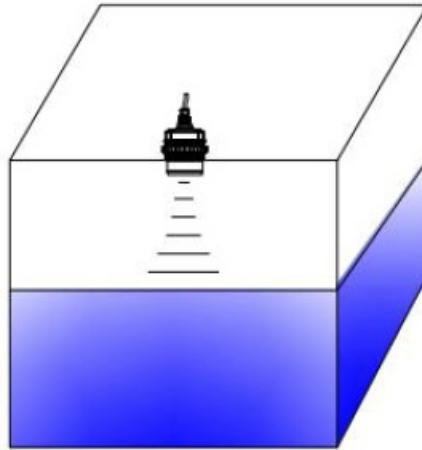


- Measurement in horizontal cylinder tanks

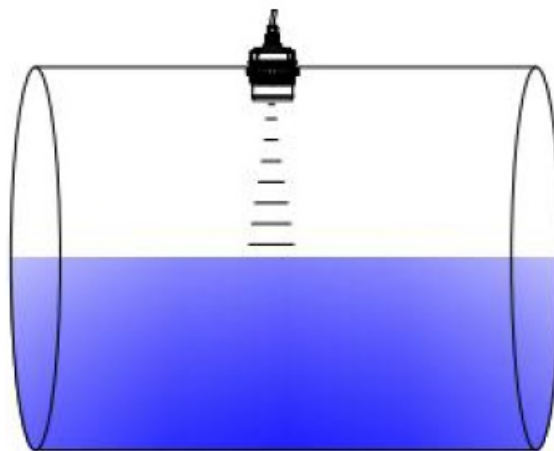


- Measurement in cylinder tanks

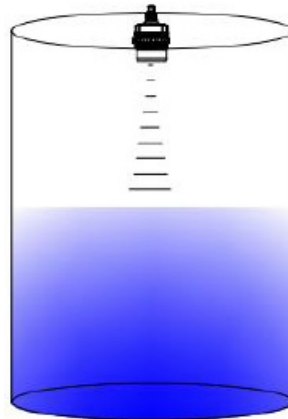

- Measurement in cube tanks

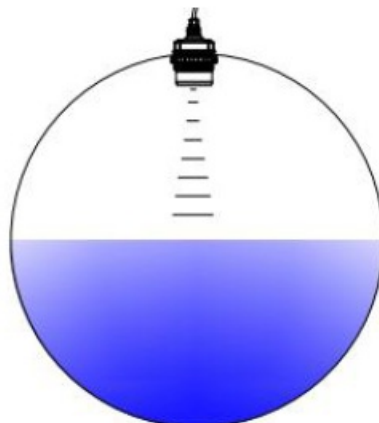


- Measurement in flumes

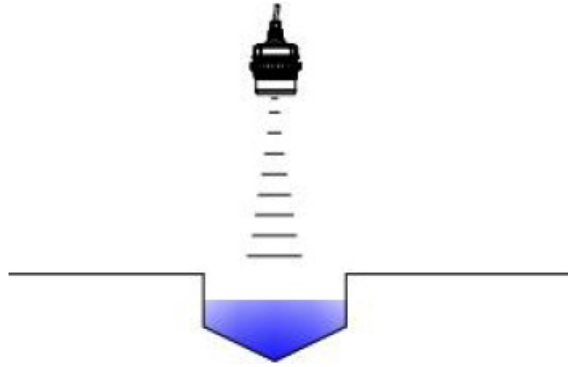


### Recommended wiring

The length between the DC power supply and the sensor should be kept as short as possible.

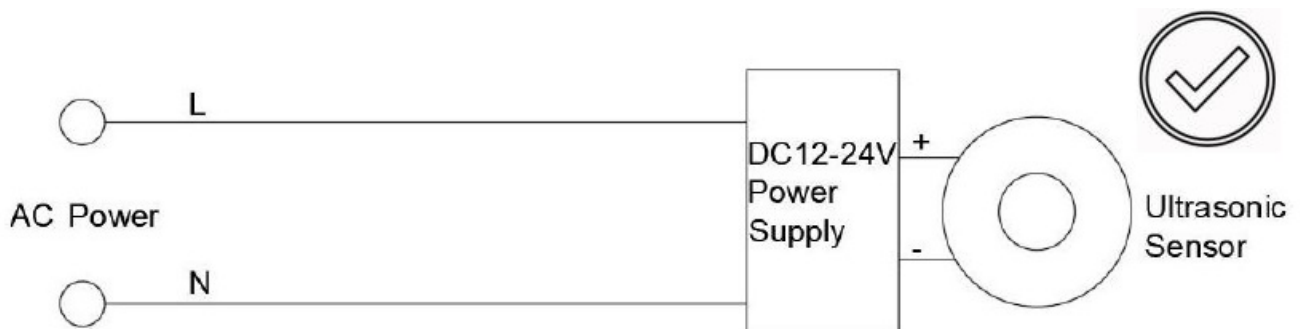

### ◆ Wiring not-recommended

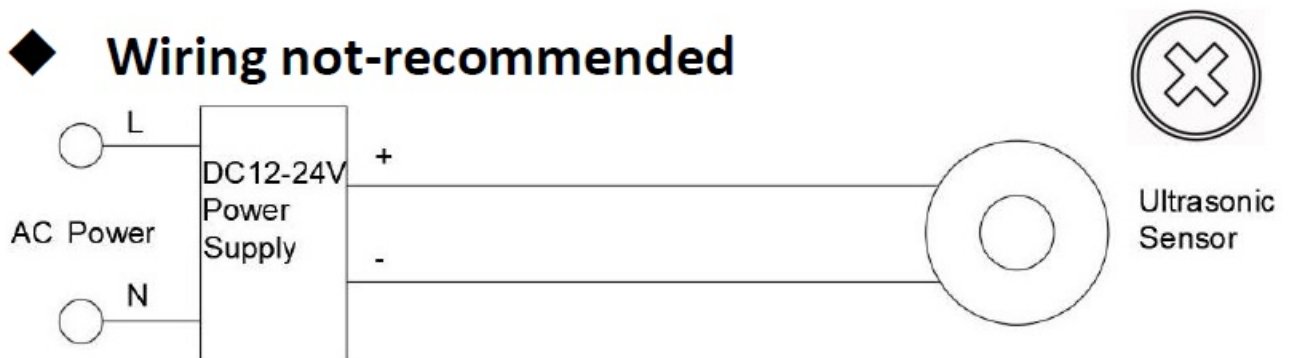


### Installation Diagram

E=Total height from the tank to the probe's end surface

D=Distance from the end surface of the probe to the liquid level surface

H=Actual liquid height

**Example:** if sensor range is 5m, the actual tank height is 3m, using liquid level measurement mode, the end of the range is set to the actual tank height, the zero point of the range is set to (sensor range – actual tank height)

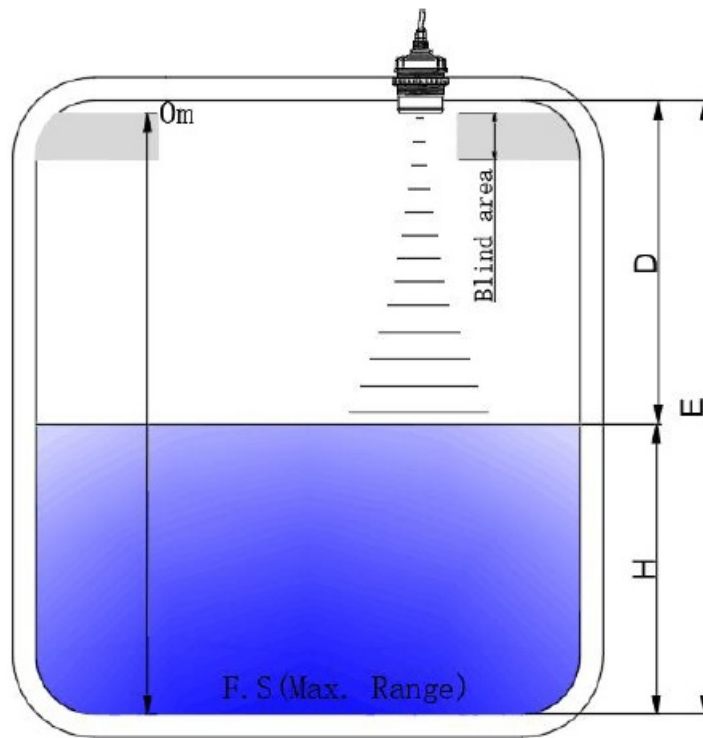

## Precautions

1. All ultrasonic level sensors have blind areas, and the values detected within the blind areas are random values.
2. Ultrasonic level sensor emits ultrasonic waves at a certain emission angle, so there should be no objects within the range between the instrument and the measured target object that can easily reflect ultrasonic waves.
3. If the ultrasonic level sensor is in the distance measurement mode, the actual measured data is value D; if the sensor is in the liquid level measurement mode, the actual measured data is Value H. It must be ensured during installation that the height from the end face of the sensor to the bottom of the container is Value E (generally  $E = F \cdot S$ , i.e the maximum range), if it is installed too high or too low, the measurement output will be inaccurate.
4. Since the sensor has high sensitivity, they should not be subjected to strong noise or electromagnetic interference during use. Large air flows, temperatures and humidity outside the specified range, temperature changes that are too fast, and condensation on the surface can all affect the stability of the instrument and even shorten its service life.

## FAQ


• **Q: What baud rates are supported by the UL103 Ultrasonic Level Sensor?**

A: The UL103 supports baud rates of 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200.

• **Q: What is the IP rating of the UL103 Ultrasonic Level Sensor?**

A: The default IP rating of the UL103 is IP67, but it can be customized to IP68.

## Documents / Resources

	<a href="#">MACSENSOR UL103 Ultrasonic Level Sensor [pdf] User Manual</a> UL103, UL103 Ultrasonic Level Sensor, Ultrasonic Level Sensor, Level Sensor, Sensor
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.