
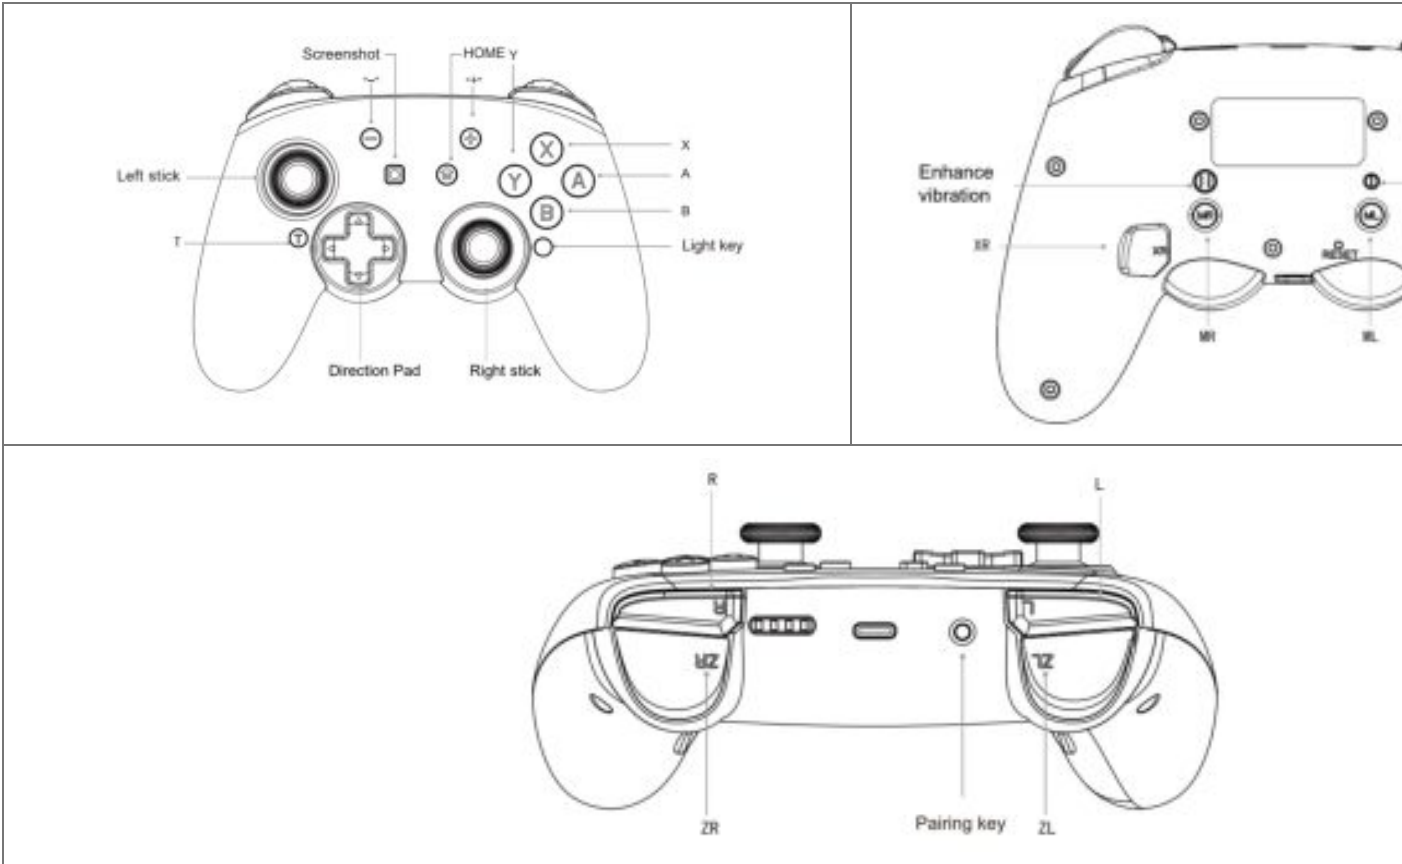





MAD CATZ HPML-4CAT0900 C.A.T. 9 Wireless Game Controller User Guide

[Home](#) » [MAD CATZ](#) » MAD CATZ HPML-4CAT0900 C.A.T. 9 Wireless Game Controller User Guide 

MAD CATZTM MAD CATZ HPML-4CAT0900 C.A.T. 9 Wireless Game



Press the pairing key for 2 seconds, LED indicator flashes until the successful connection to Switch.
Second connection mode:

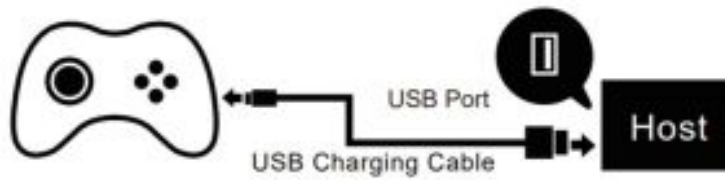

Android

1. Press “X+home” key for 2 seconds to enter Android gamepad mode. LED4 indicator flashes until successful connection.
2. Press [home] key for future reconnection after successful pairing.

iOS

Enter Apple MFI mode, press the “B+home” key for 2 seconds, LED3 indicator flashes until a successful connection.

USB



Gamepad charging activated when connected to the host computer via USB cable.
Switch between Xinput (default) and DirectInput via pressing “+” and “-” keys for 3 seconds.

1. In Xinput mode: LED1 + LED4 indicator lights on.
2. In DirectInput mode: LED2 + LED3 indicator lights on.

Turbo Function

1. Turbo firing: Press (the first time) A / B / X / Y / L1 / L2 / R1 / R2 / direction key + turbo key.
2. Cancel turbo firing: Press turbo key again. Press and hold turbo key for 5 seconds to clear all consecutive functions.
3. Press and hold turbo key + a key to clear turbo function of the current key.

Battery

Battery Status		Indicator Status
Low power		LED indicator flashing
Charging		LED4 indicator flashing
Charging complete		LED4 indicator on

Lighting control instructions

1. Tap light key to change color from blue, red, green, yellow, cyan, orange, purple, pink, magic color.
2. Double click the light key to turn off lighting.
3. Light key + A: Breathing lighting color. Press the light key to change color.

4. Light key + B: Vibration lighting mode, the red light will be on.
5. Light key + X: Rocker mode. Click the light key to change color.
6. Light key + Y: Gyro mode. 6-axis in motion, all lights on. Up (red), down (yellow), left (blue), and right (green)
7. Light key + L: Magic color breathing mode. (red/yellow/blue/green/purple/orange)
8. Light Key + Direction key: Change brightness. Press and hold light key + up/down key to change brightness.



Automatic shutdown

Gamepad enters sleep mode when the host screen is closed and no key presses within 5 minutes.
In Bluetooth mode, press the home key for 3 seconds to disconnect, the gamepad will enter sleep mode.

Back key function

1. single key setting: ① press and hold MR + A (click) ② vibration occurs
③ XR key is set to A.
Macro key setting: ① press and hold MR + keys ② vibration occurs
③ XR key is set as a macro.
2. Single key setting: ① press and hold ML + A (click) ② vibration occurs
③ XL key is set to A.
Macro key setting: ① press and hold ML + keys ② vibration occurs
③ XL key is set as a macro.


Motor vibration regulation

1. Enhance vibration effect 
2. Reduce vibration effect 

Contents

- [1 Documents / Resources](#)
- [2 Related Posts](#)

Documents / Resources

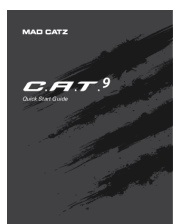

[MAD CATZ HPML-4CAT0900 C.A.T. 9 Wireless Game Controller](#) [pdf] User Guide
GSSWDOINCR002, 2ASFYGSSWDOINCR002, HPML-4CAT0900 C.A.T. 9 Wireless Game Co
ntroller, C.A.T. 9 Wireless Game Controller, Game Controller

