


MADGETECH VoltX Series 16 Channel Voltage Data Logger User Guide

[Home](#) » [MADGETECH](#) » MADGETECH VoltX Series 16 Channel Voltage Data Logger User Guide 



X SERIES VoltX Series 4, 8, 12 and 16-Channel Voltage Data Logger PRODUCT USER GUIDE

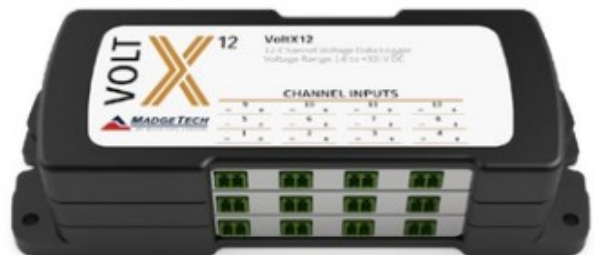

To view the full MadgeTech product line, visit our website at madgetech.com.

Contents

- [1 Product Overview](#)
- [2 Wiring Options](#)
- [3 Installation Guide](#)
- [4 Device Operation](#)
- [5 Device Maintenance](#)
- [6 Documents / Resources](#)


Product Overview

The new VoltX Series consists of 4, 8, 12 and 16-channel, battery powered, DC voltage data logger with a reading rate of up to 4 Hz. Improvements include the elimination of an interface cable (uses standard USB-A to Micro USB), increased memory for more readings and increased download speed. To maximize memory capacity, users can enable or disable channels. For easy identification, each channel can be named with up to a ten digit title. The VoltX Series is ideal for a variety of applications, whether it is remote monitoring, or multiple points in a central location. Data from all channels is simultaneously logged. After the monitoring cycle is complete, data can be downloaded for analysis. The VoltX Series comes with a wall mounted universal power adapter. See data sheet for full specifications.

Wiring Options


The VoltX Series 3.2V and 32V data loggers (single ended wiring) have two-position removable screw terminal connections that accept 2-wire configurations.

Warning: Note the polarity instructions. Do not attach wires to the wrong terminals.

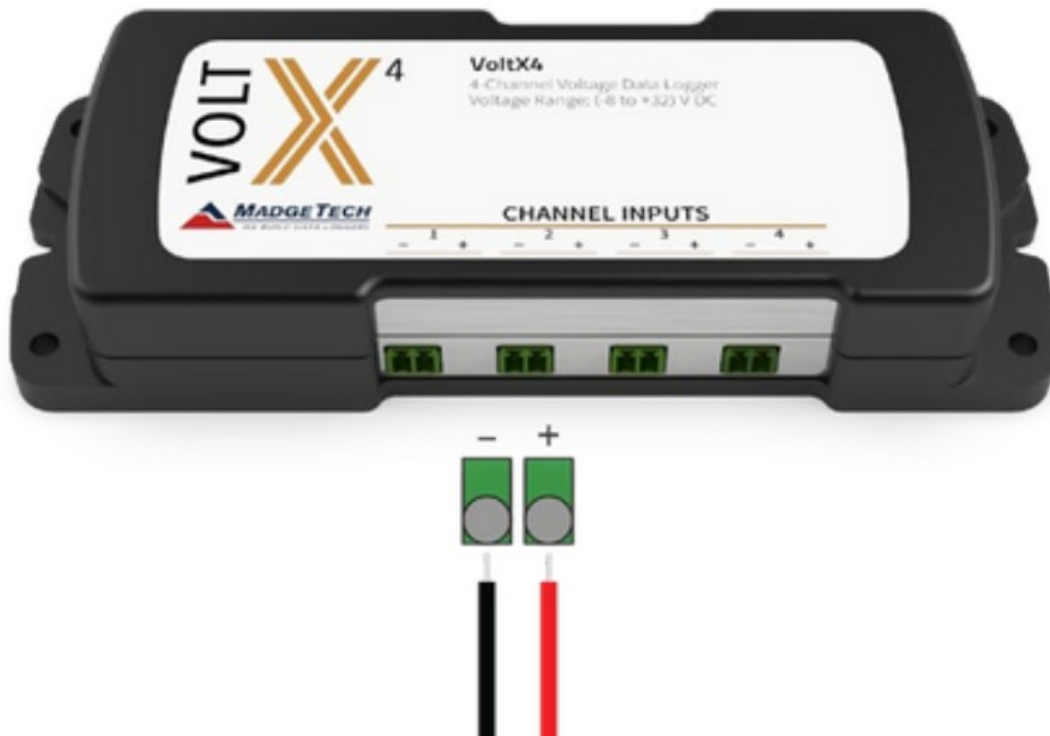

The VoltX Series ± 160 mV data loggers (differential wiring) have three-position removable screw terminal connections that accept 3-wire configurations.

Warning: Note the polarity instructions. Do not attach wires to the wrong terminals.

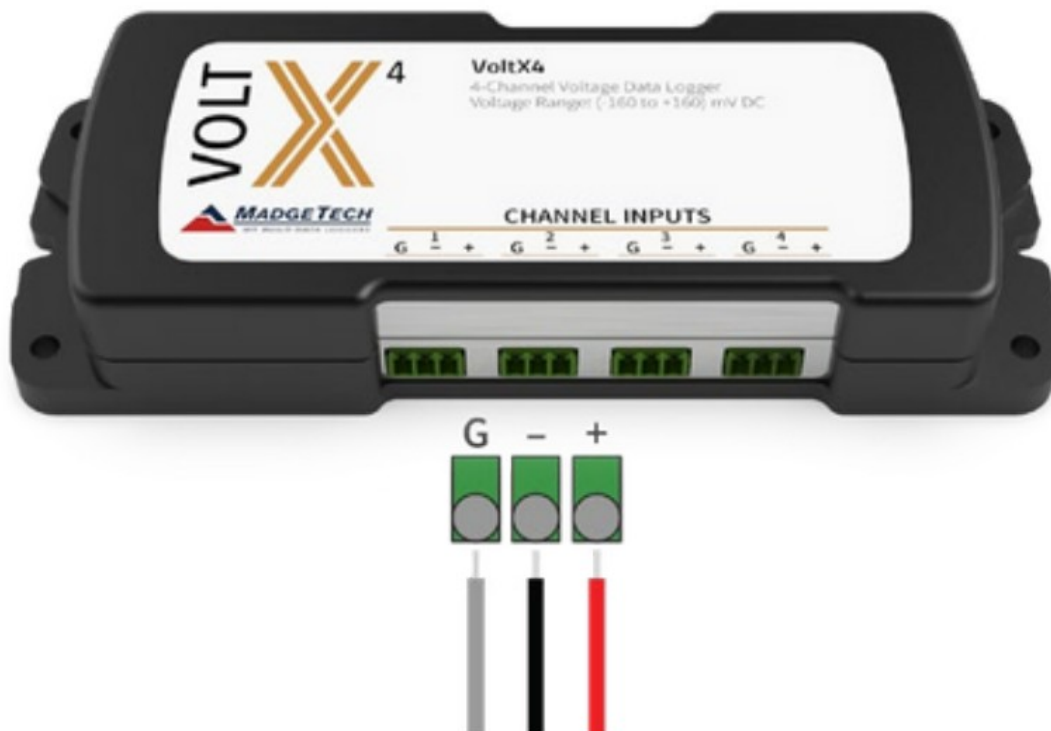

Installation Guide

Installing the Software

The Software can be downloaded from the MadgeTech website at madgetech.com. Follow the instructions provided in the Installation Wizard. Compatible with Standard Software version 4.2.19.0 or later and Secure Software version 4.2.18.0 or later.

Device Operation

Connecting and Starting the Data Logger

1. Once the software is installed and running, plug the supplied USB A to Micro USB cable into the data logger.
2. Connect the USB A end of the cable into an open USB port on the computer.
3. The device will appear in the Connected Devices list. Highlight the desired data logger.
4. For most applications, select Custom Start from the menu bar and choose the desired start method, reading rate and other parameters appropriate for the data logging application and click Start.
 - Quick Start applies the most recent custom start options
 - Batch Start is used for managing multiple loggers at once
 - Real Time Start stores the dataset as it records while connected to the logger
5. The status of the device will change to Running, Waiting to Start or Waiting to Manual Start, depending upon your start method.
6. Disconnect the data logger from the USB cable and place it in the environment to measure.

Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.

Manual Start

Click the Custom Start button on the Device panel, or right-click on the device and hover on the start selection, then chose custom start. Apply the options desired and select Start. Once armed through the software, to activate the Manual Start, hold the recessed push button, adjacent to the interface cable plug, down for 10 seconds. Green

LED will blink rapidly and then blink every 15 seconds. To see the change in the status, hit Refresh within the software.



Channel Naming

Up to a 10-character channel name can be programmed into the data logger for each channel. This ability helps to rename a channel in a report to distinguish it from other similarly named channels.

1. In the Connected Devices panel, click the device desired.
2. On the Device Tab, in the Information Group, click Properties. Or, right-click the device and select Properties in the context menu.
3. In the Channels panel, find the channel desired, then select "Use custom name."
4. This will prompt a space to type in a name.
5. Select OK, then there will be a prompt to reset the device, select Yes.

Downloading Data from a Data Logger

1. Connect the logger to the supplied USB A to Micro USB cable.
2. Highlight the data logger in the Connected Devices list. Click Stop on the menu bar.
3. Once the data logger is stopped, with the logger highlighted, click Download. You then can create a report from the saved Dataset.
4. Downloading will offload and save all the recorded data to the PC.




Set Password

To password protect the device so that others cannot start, stop or reset the device:

1. In the Connected Devices panel, click the device desired.
2. On the Device Tab, in the Information Group, click Properties. Or, right-click the device and select Properties in the context menu.
3. On the General Tab, click Set Password.
4. Enter and confirm the password in the box that appears, then select OK.

Device Operation (cont'd)

LED Functionality

	Primary LED (Green): Solid when communicating with computer. Flashes every 15 seconds when logging. Flashes every 5 seconds when in delay start.
	Secondary LED (Red): Flashes every 5 seconds when battery is low. Flashes every 5 seconds when memory is low.
	Channel LED (Blue): Flashes every 2 seconds when reading rate is 2 seconds or faster. Flashes same as reading rate when reading rate is slower than 2 seconds.

Device Maintenance

Battery Replacement

Materials: 3/32 inch HEX Driver (Allen Key) and a Replacement Battery (U9VL-J)

1. Remove the cover from the device by unscrewing the two screws.
2. Remove the battery from its compartment and unsnap it from the connector.
3. Snap the new battery into the terminals and verify it is secure.
4. Replace the cover taking care not to pinch the wires.

Screw the enclosure back together securely.

Note: Be sure not to over tighten the screws or strip the threads.

Recalibration

Recalibration is recommended annually. To send devices back for calibration, visit madgetech.com.



Product Support & Troubleshooting:

- Visit our Resources online at madgetech.com/resources.
- Contact our friendly Customer Support Team at (603) 456-2011 or support@madgetech.com.

MadgeTech 4 Software Support:




- Refer to the built-in help section of the MadgeTech 4 Software.
- Download the MadgeTech 4 Software Manual at madgetech.com.
- Contact our friendly Customer Support Team at (603) 456-2011 or support@madgetech.com.

USA
+ 1 (619) 619 7350
sales@logicbus.com
www.logicbus.com



Documents / Resources

	<p>MADGETECH VoltX Series 16 Channel Voltage Data Logger [pdf] User Guide</p> <p>VoltX Series, VoltX Series 16 Channel Voltage Data Logger, 16 Channel Voltage Data Logger, Voltage Data Logger, Data Logger, Logger</p>
---	--

Manuals+,