

MAGIC CHEF
MCIM30SST COUNTER
TOP ICE MAKER



Magic Chef MCIM30SST Counter Top Ice Maker Owner's Manual

[Home](#) » [Magic Chef](#) » Magic Chef MCIM30SST Counter Top Ice Maker Owner's Manual 

Contents

- 1 Magic Chef MCIM30SST Counter Top Ice Maker
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQ
- 5 BEFORE PUTTING INTO USE
- 6 SPECIFICATIONS
- 7 IMPORTANT SAFETY INSTRUCTIONS
- 8 NAME OF THE PARTS
- 9 OPERATING PROCEDURES & MAINTENANCE
- 10 USING YOUR ICE MAKER
- 11 TROUBLESHOOTING
- 12 Warranty
- 13 Documents / Resources
 - 13.1 References



Magic Chef MCIM30SST Counter Top Ice Maker



Product Information

Specifications:

- **Product Description:** Stainless Steel Countertop Ice Maker
- **Model No.:** MCIM30SST
- **Unit Dimensions (Inches):** Width 15.7, Height 16.9, Depth 14.0
- **Net Weight:** 38 lbs
- **Ice Making Capacity:** Up to 30 lbs/24hrs for medium ice cubes

Product Usage Instructions

Before Putting into Use:

Before connecting the appliance to the power supply, let the unit stand upright for 4 hours to reduce cooling system malfunction. Clean the unit thoroughly before use. Use the parts diagram for proper component positioning.

Name of the Parts:

1. Lid
2. Inner Liner
3. Ice basket
4. **Control Panel:**
 - Select ice cube size
 - Start/Stop the ice-making cycle
5. Ice shovel
6. Ice Sensor
7. Water Drain Cap

Operating Procedures & Maintenance:

Unpacking Your Ice Maker:

1. Remove all packaging and check for included parts.
2. Clean the interior with lukewarm water and a soft cloth.
3. Place the ice maker on a level surface away from direct sunlight or heat sources.
4. Allow refrigerant fluid to settle for an hour before plugging in.
5. Ensure plug accessibility.

Connecting Your Ice Maker:

DANGER:

Improper use of the grounded plug can result in electrical shock. If the power cord is damaged, contact customer service.

1. Ensure proper grounding using the three-prong plug.

FAQ

Q: What should I do if any part or accessory is missing when unpacking the ice maker?

A: If any part or accessory is missing, please contact our customer service department at 8887750202.

Q: How can I clean the ice maker?

A: Clean the interior with lukewarm water and a soft cloth. Remove the ice basket and wash it in warm water.

Q: Where should I place the ice maker?

A: Find a location protected from direct sunlight and heat sources. Place the ice maker on a level surface with at least 5 inches of space between the back/sides and the wall.

To ensure proper use of this appliance and your safety, please read the following instructions completely before operating this appliance.

BEFORE PUTTING INTO USE

- Before connecting the appliance to the power supply, let the unit stand upright for 4 hours, which will reduce the possibility of the cooling system malfunctioning due to improper handling.
- Clean your unit thoroughly before putting it into use. (See "How to Clean")
- Use the parts diagram on page 4 to ensure the proper positioning of internal components.

SPECIFICATIONS

Product Description	Stainless Steel Counter Ice Maker		
Model No.	MCIM30SST		
Unit Dimensions (Inches)	Width	Height	Depth
	15.7"	16.9"	14.0"
Net Weight	38 (lbs)		
Ice Capacity for the medium ice cubes	Up to 30 lbs/24hrs		

IMPORTANT SAFETY INSTRUCTIONS


IMPORTANT SAFETY TIPS

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.

- Do not operate this or any other appliance with a damaged cord.
- Connect to properly polarized outlets only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
- Do not run the cord over carpeting or other heat insulators. Do not cover the cord. Keep the cord away from traffic areas, and do not submerge in water.
- We do not recommend the use of an extension cord, as it may overheat and become a risk of fire. If you must use an extension cord, use No.14 AWG minimum size and rated no less than 1875 watts, also the cord should not exceed 10 meters in length.
- Unplug the ice maker before cleaning or making repairs.
- Exercise caution and use reasonable supervision when the appliance is used near children.
- Do not clean your ice maker with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not tip over.
- If the ice maker is brought indoors from outdoors during the wintertime, give it a few hours to adjust to room temperature before plugging it in.

NAME OF THE PARTS

1. **Lid:** With a transparent window to allow interior visibility.
2. Inner Liner
3. Ice basket
4. **Control Panel:** Easy to use, visible functions, and 1-touch display setting.
 - **A)** Select the ice cube size
 - **B)** Start the ice-making cycle
 - **C)** Stop the making cycle
5. Ice shovel
6. Ice Sensor
7. **Water Drain Cap:** For draining water from the water reservoir.

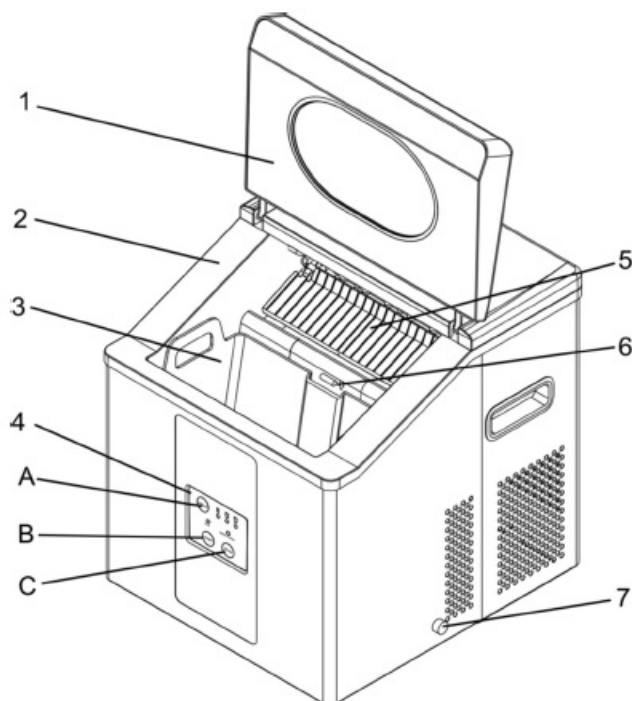

OPERATING PROCEDURES & MAINTENANCE

UNPACKING YOUR ICE MAKER

1. Remove all exterior and interior packaging. Check that the ice basket and ice scoop are included. If any part or accessory is missing, please contact our customer service dept at [888-775-0202](tel:888-775-0202).
2. Clean the interior with lukewarm water and a soft cloth. Remove the ice basket and wash it in warm water.
3. Find a location for your ice maker that is protected from direct sunlight and other sources of heat (i.e.: stove, furnace, radiator). Place the ice maker on a level surface. Make sure that there is at least 5 inches of space between the back and sides of your ice maker and the wall.
4. Allow one hour for the refrigerant fluid to settle before plugging in the unit.
5. The appliance must be positioned so that the plug is accessible.

CONNECTING YOUR ICE MAKER

DANGER

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged please call our customer dept at [888-775-0202](tel:888-775-0202).

1. This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which connects with standard three-prong wall outlets to minimize the possibility of electric shock.
2. Plug your appliance into an exclusive, properly installed, grounded wall outlet. Do not under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician.
3. This appliance requires a standard 115-volt, 60Hz electrical outlet with three-prong ground.

Before using your ice maker, it is strongly recommended to clean it thoroughly. The ice maker is not designed to be installed in an outside area such as a garage or a porch. Ambient temperatures of below 45 or above 90 will

hinder the performance of the appliance.

HOW TO CLEAN

Remove the ice basket.


1. Turn the drain cap counter-clockwise to drain out the water
2. Clean the interior with diluted detergent, warm water, and a soft cloth.
3. The outside of the ice maker should be cleaned regularly with a mild detergent solution and warm water.
4. Dry the interior and exterior with a soft cloth.
5. Close the drain cap.
6. When the machine is not in use, open the water drain cap to drain the water completely from the water reservoir.

CARE AND MAINTENANCE

- The ice maker should be cleaned regularly. (See: "HOW TO CLEAN")
- It is necessary to have adequate ventilation space around the ice maker to sustain proper performance, dissipation of heat, maintain efficiency, and low power consumption. Clearance of a minimum of 5 inches should be maintained at the rear and sides of the unit and 8 inches at the top of the unit.
- To attain proper performance, be sure to plug the appliance into a properly grounded 115V/60 Hz outlet.
- Do not modify the power cord under any circumstances to allow the unit to be plugged into a non-grounded outlet. To avoid heat damage to the power cord, please ensure that it does not come in proximity or in direct contact with the compressor of the ice maker.
- Please avoid installing the ice maker in a location where the appliance will come in contact with water or moisture to minimize the rusting of metal parts.
- The ice maker should not be installed near any heat source or in a location where it will come in direct contact with the sunlight.

USING YOUR ICE MAKER

1. Clean your ice maker thoroughly.

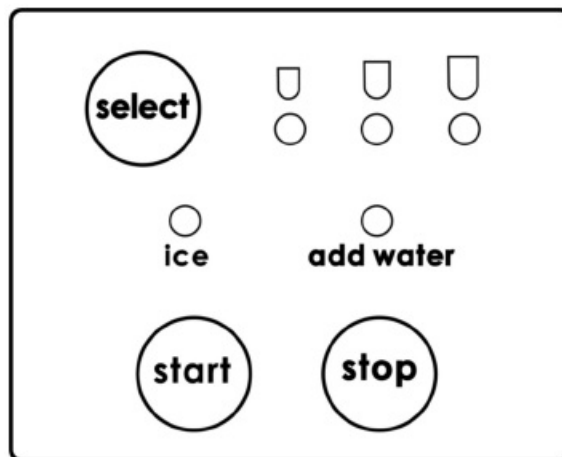

2. Open the lid, remove the ice basket, and pour normal tap water into the tank. Keep the water level below the bottom of the ice basket.
3. Plug in the unit and the medium ice cubes indicator light will blink.
4. Press "Start" on the control panel to begin the ice-making cycle. The medium ice cube indicator light will light.

5. Select the size of the ice cube by pressing the “Select” button. If the ambient temperature is below 60°F, it is recommended to select small or medium size to avoid ice sticking together.
6. The ice-making cycle lasts 7 to 14 minutes, depending on the ambient temperature and the size of the ice cube selection.
7. While the ice maker is on, if there is low water in the water tank, the ice maker will stop working and the “Add water” indicator light will be on. Fill the water storage tank with water the ice maker will start to work automatically.
8. The ice maker automatically stops working when the ice basket is full and the “Ice” indicator will be illuminated.
9. Change water in the water reservoir every 24 hours to ensure a reasonable hygiene level. If the unit is not in use, drain all water in the tank reservoir.
10. When reinstalling the basket, push it downward to its original position to ensure the temperature sensor is above the basket to ensure the machine works properly.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The “Add water” indicator is on.	Water is low.	Fill the water storage tank with water, the ice maker will start to work automatically.
The “Ice” indicator is on.	The ice basket is full.	Remove ice from the ice basket.
“Add water” and “Ice” indicators are both blinking.	The ice shovel is stuck.	Check if the ice shovel is blocked by ice. If yes, please take out the ice cubes and restart.
Ice cubes stick together.	Ice making cycle is too long.	Stop the ice maker, and restart it when the ice blocks melt. Select the small ice size.
	The water temperature in the inner tank is too low.	Change the water in the reservoir. Use water between 45 -90°F.
Ice making cycle is normal but no ice is made.	The ambient temperature or water temperature in the inner tank is too high.	Please operate the ice maker below the ambient temperature of 90°F and use cold water.
	Refrigerant liquid leakage.	Consult a qualified technician.
	The pipe in the cooling system is blocked.	Consult a qualified technician.

Warranty

Counter Top Ice Maker Warranty

MC Appliance Corp. warrants each new Ice Maker to be free from defects in material and workmanship and agrees to remedy any such defect or to furnish a new part(s) (at the company’s option) for any part(s) of the unit that has failed during the warranty period. Parts and labor expenses are covered on this unit for one year after the date of purchase. In addition, MC Appliance Corp. warrants the compressor (parts only) to be free from defects in

material and workmanship for 5 years. The consumer is responsible for all labor and transportation expenses related to the diagnosis and replacement of the compressor after the initial one-year warranty has expired. If in the event the unit requires replacement or refund under the terms of this warranty the consumer is responsible for all transportation expenses to return the unit to our factory before receiving a replacement unit or refund. A copy of the dated sales receipt/invoice is required to receive warranty service.

This warranty covers appliances in use within the continental United States, Puerto Rico, and Hawaii. The warranty does not cover the following:


- Damages due to shipping damage or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Punctures to the evaporator system due to improper defrosting of the unit.
- Repairs performed by unauthorized service agents.
- Service calls that do not involve defects in material and workmanship such as instruction on the proper use of the product, door reversal, or improper installation.
- Replacement or resetting of house fuses or circuit breakers.
- Failure of this product if used for other than its intended purpose.
- Disposal costs of failed units not returned to our factory.
- Any delivery costs incurred as the result of a unit that fails to perform as specified.
- The consumer is responsible for a \$35.00 delivery charge for all replacement units provided under warranty.

This warranty is instead of all warranties expressed or implied and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without prior written consent from MC Appliance Corp.

- **Model** MCIM30SST
- **Parts** One- Year
- **Labor** One- Year
- **Compressor (Part Only)** Five Years
- **Type of Service** Carry-In

For Service or Assistance please call 888 775-0202 or visit us on the web at www.mcappliance.com.

Documents / Resources

	<p>Magic Chef MCIM30SST Counter Top Ice Maker [pdf] Owner's Manual MCIM30SST Counter Top Ice Maker, MCIM30SST, Counter Top Ice Maker, Top Ice Maker, Ice Maker</p>
---	--

References

- [✂ Repair Your Grill: Shop Replacement Parts for 24,880 Models](#)
- [✂ Magic Chef Refrigerator Parts - Select From 316 Models](#)

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.