



MAGIC CHEF MCSLRW Laundry Stacking Kit User Guide

[Home](#) » [Magic Chef](#) » MAGIC CHEF MCSLRW Laundry Stacking Kit User Guide 

Contents

- [1 MAGIC CHEF MCSLRW Laundry Stacking Kit](#)
- [2 Product Usage Instructions](#)
- [3 TOOLS](#)
- [4 INSTALLATION INSTRUCTION](#)
- [5 WARRANTY](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



MAGIC CHEF MCSLRW Laundry Stacking Kit



Laundry Stacking Kit – User Guide

Specifications

- **Model:** MCSLRW
- **Max Load:** 33 lbs. (15 Kg)

Product Usage Instructions

Step 1: Positioning the Washer

- Position the washer against the wall where it will be installed.
- Place the wall bracket on top of the washer and slide it back until the flat rear of the bracket is flush against the wall.

If the wall is ceramic or smooth tile:

- Peel the backing off the rear of the bracket and firmly stick it to the wall. Skip to Step 6.

If the wall is brick, drywall, etc.:

- Proceed to Step 2.

Step 2: Marking Hole Positions

- Mark the position of the holes in the bracket on the wall using a pencil.

Step 3: Drilling Holes

- Carefully drill holes at the marked positions for wall anchors, and insert the anchors.

Step 4: Attaching Wall Bracket

- Securely attach the wall bracket to the wall using screws in the wall anchors.

Step 5: Additional Screws

- Use screws E and F to attach brackets E and F to the wall bracket.

Step 6: Placing the Stacking Bracket

- Place the stacking bracket on top of the washing machine.

Step 7: Securing the Stacking Bracket

- Use the twelve (12) screws C to secure the bracket to the top of the washing machine.

Step 8: Adjusting Dryer Leveling Feet

- Turn the leveling feet on the dryer into the lowest setting.

Step 9: Lifting and Aligning the Dryer

- With help, carefully lift the dryer on top of the stacking bracket. Slide the leveling legs into the support grooves in the bracket. Make sure the dryer is square with the washing machine.

Step 10: Securing the Dryer

- Use 2 screws D to secure the dryer to the stacking bracket.

Step 11: Sliding the Stacked Washer and Dryer

- With assistance, slide the stacked washer and dryer back against the wall, allowing the wall bracket to hold the assembly in place.
- **Note:** Do not allow children to play with or climb on the pull-out shelf or any part of the washer or dryer.

FAQ:

Q: What is the maximum load capacity for the pull-out shelf?

- **A:** The maximum load capacity for the pull-out shelf is 33 lbs. (15 kg). Do not exceed this weight limit.

 
Q: How long is the warranty for Model MCSLRW?

- **A:** The warranty for Model MCSLRW is one year for both parts and labor.

Q: How can I request warranty service or order parts?


- **A:** For service or assistance, please call 888-775-0202 or visit us on the web at www.mcappliance.com to request warranty service or order parts.

TOOLS

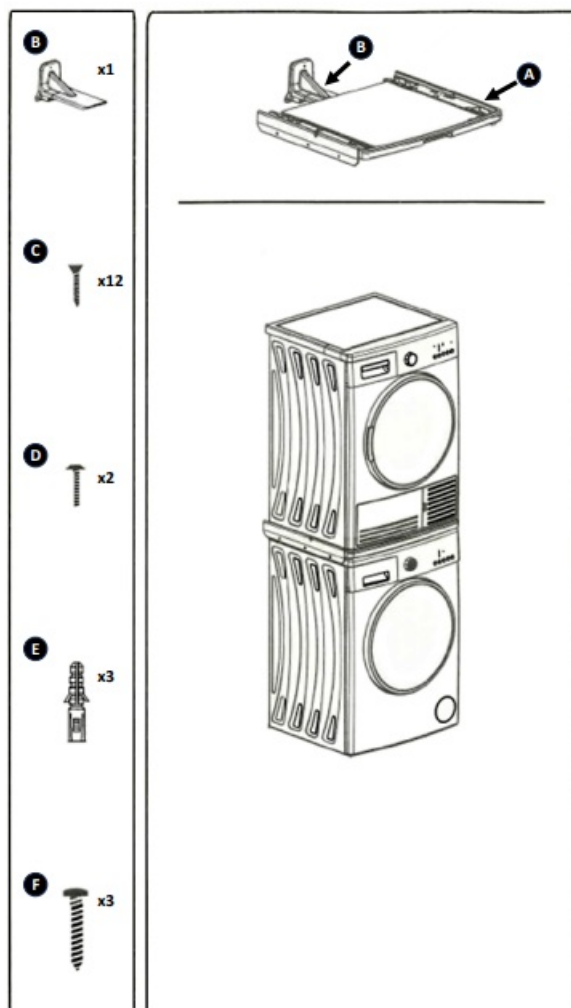

INSTALLATION INSTRUCTION



 
- **Step 1:** Position the washer against the wall where it is installed. Place the wall bracket on top of the washer and slide back until the flat rear of the bracket is flush with the wall.

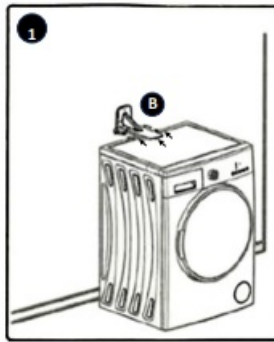


- If the wall is ceramic or smooth tile, peel the backing off the rear of the bracket and firmly stick to the wall, then skip to Step 6.
- If the wall is brick, drywall, etc., proceed to Step 2.
- **Step 2:** Mark the position of the holes in the bracket on the wall with a pencil.



   
- **Step 3-4-5:** Carefully drill holes at the marked positions for wall anchors, and insert the anchors. Securely attach the wall bracket to the wall using screws in the wall anchors.

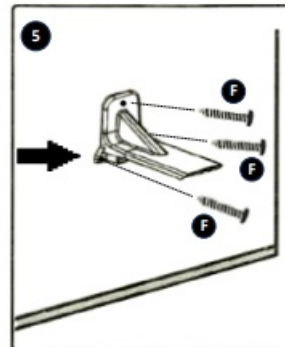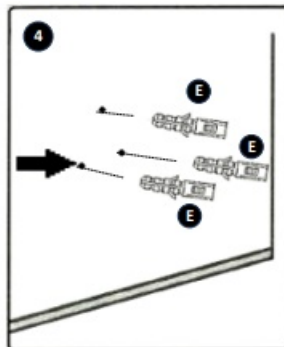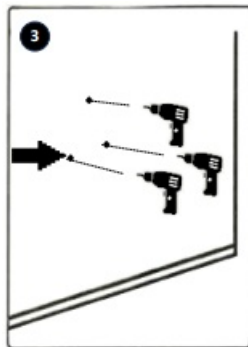


 
- **Step 6:** Place the stacking bracket on top of the washing machine.
- **Step 7:** Use the twelve (12) screws to secure the bracket to the top of the washing machine.

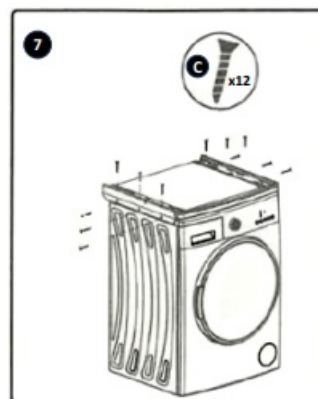


 
- **Step 8:** Turn the leveling feet on the dryer into the lowest setting.
- **Step 9:** With help, carefully lift the dryer on top of the stacking bracket. Slide the leveling legs into the support grooves in the bracket. Make sure the dryer is square with the washing machine

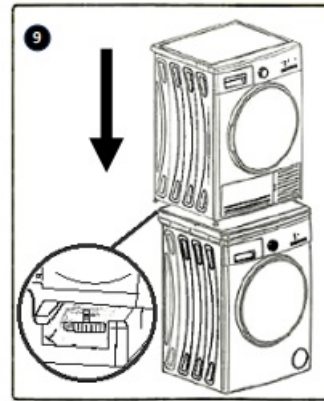

  - **Step 10:** Use 2 screws to secure the dryer to the stacking bracket.
- **Step 11:** With assistance, slide the stacked washer and dryer back against the wall, allowing the wall bracket to hold the assembly in place.

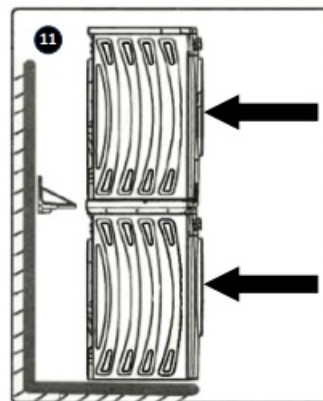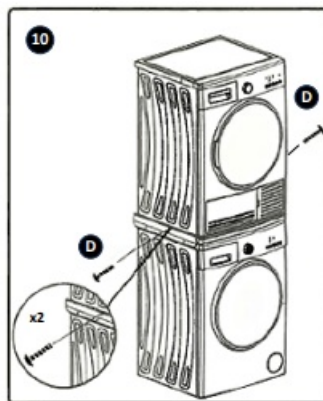

  - Pull the slide-out shelf to use. Do not exceed 33 lbs. (15kg) on the shelf.
- DO NOT allow children to play with or climb on the pullout shelf or any part of the washer or dryer.

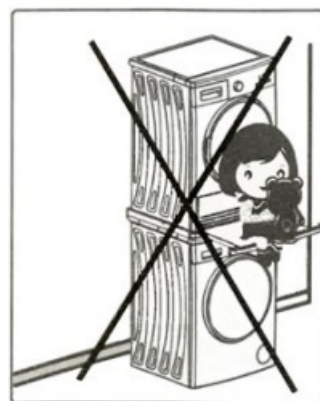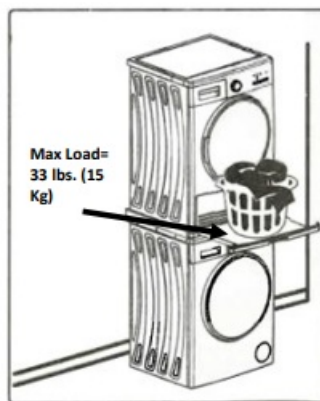

WARRANTY

LIMITED WARRANTY


- MC Appliance Corporation warrants each new Stacking Kit to be free from defects in material and workmanship and agrees to remedy any such defect or to furnish a new part(s) (at the company's option) for any part(s) of the unit that has failed during the warranty period. Parts and labor expenses are covered on this unit for one year after the date of purchase. A copy of the dated sales receipt/invoice is required to receive warranty service, replacement or refund.
- This warranty covers appliances in use within the continental United States, Hawaii, and Puerto Rico. The warranty does not cover the following:
- Damages due to shipping damage or improper installation

- Damages due to misuse or abuse
- Repairs performed by unauthorized service agents
- Service calls that do not involve defects in material and workmanship such as instruction on proper use of the product or improper installation
- Replacement or resetting of house fuses or circuit breakers
- Failure of this product if used for purposes other than its intended purpose
- Disposal costs of failed units not returned to our factory
- Any delivery or installation costs incurred as the result of a unit that fails to perform as specified
- Expenses for travel and transportation for product service if your appliance is located in a remote area where service by an authorized service technician is not available
- The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed under published installation instructions
- Refunds for non-repairable products are limited to the price paid for the unit per the sales receipt



LIMITATIONS OF REMEDIES AND EXCLUSIONS

- Product repair under the terms herein, is your sole and exclusive remedy under this limited warranty. All implied warranties including merchantability and fitness for a particular purpose are hereby limited to one year or the shortest period allowed by law. MC Appliance Corporation is not liable for incidental or consequential damages and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without the prior written consent of MC Appliance Corporation.
- Some states prohibit the exclusion or limitation of incidental or consequential damages, or limitations on implied warranties.
- This warranty gives you specific rights, and you may also have other rights which vary from state to state.
- **Model:** MCSLRW
- **Parts:** One Year
- **Labor:** One Year
- **Type of Service:** Carry In
- For Service or Assistance, please call 888-775-0202. Or visit us on the web at www.mcappliance.com to request warranty service or order parts.

Documents / Resources

 <p>MAGIC CHEF Laundry Stacking Kit User Guide</p>	<p>MAGIC CHEF MCSLRW Laundry Stacking Kit [pdf] User Guide MCSLRW Laundry Stacking Kit, MCSLRW, Laundry Stacking Kit, Stacking Kit</p>
---	--

References

-  [Magic Chef | Home](#)
-  [MCA | Home](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)