

Magimix 11643 Power Blender 5 Connect Instruction Manual

Home » magimix » Magimix 11643 Power Blender 5 Connect Instruction Manual







Contents

- 1 11643 Power Blender 5
- Connect
- **2 SAFETY INSTRUCTIONS**
- **3 DESCRIPTION**
- **4 ATTACHMENTS***
- **5 CONTROL PANEL**
- **6 PRE-SET PROGRAMMES**
- **7 BLENDER CAPACITIES**
- **8 USING YOUR BLENDER**
- 9 ADVICE
- **10 MILL ATTACHMENT**
- 11 BLENDCUPS
- **12 BLENDCUPS**
- **13 CITRUS PRESS**
- 14 CLEANING
- 15 Documents / Resources
 - 15.1 References
- **16 Related Posts**

11643 Power Blender 5 Connect



A dedicated app 100% free and evolving, available on Apple and Android



http://www.magimix.com

⚠ SAFETY INSTRUCTIONS

RISK OF BURNS

- NEVER process hot ingredients (solid or liquid) in the BlendCups or mill attachment, as blending hot foods in a lidded jug can lead to a build-up of pressure, forcing out scalding steam or liquids.
- Processing hot foods in the 1.8l jug: blending hot ingredients at high speed can lead to a build-up of pressure, forcing out scalding steam or liquids. Always take care when pouring in a hot liquid, as it may suddenly boil up and escape from the jug.
- Never introduce hot ingredients (solid or liquid) if they are over 60 °C in temperature. Always make sure the lid is firmly fitted but the measuring cap is only loosely positioned, to allow any steam to escape. Always use the SOUP programme or start at a low speed and gradually increase it. Never use the PULSE button.

MAINS CONNECTION

- Your appliance must be connected to an earthed socket with the original power cord.
- Check that the voltage indicated on its identification plate corresponds to the voltage of your mains supply.
- Never allow the power cord to dangle over the edge of your worktop or counter, and make sure that it does not come into contact with hot surfaces.

AFTER-SALES SERVICE

- If the power cord has been damaged, it must be replaced by the manufacturer, a Magimix-approved service agent or a similarly qualified person, in order to avoid all risks.
- The use of parts that are not recommended or sold by Magimix may result in injury, fire or electric shock.

KEEP THESE SAFETY INSTRUCTIONS FOR FUTURE REFERENCE

DESCRIPTION



Carefully wash all the parts (except the motor unit) before using for the first time.

ATTACHMENTS*



Mill attachment**

Glass mill attachment ideal for grinding spices or Parmesan, and making small amounts of savoury dips. Mill supplied with a special blade assembly for processing dry ingredients. See p. 30.





BlendCups**

Compact blend-and-go jugs (400 & 700 ml) for blending small amounts and/ or carrying around homemade drinks. Compatibe with the 1.81 jug's blade assembly Seep. 31.



Citrus press

This attachment slots onto the blender lid, so that you can easily prepare citrus juices and add them directly to your preparations. See p. 33.




Blender Kit**

A premium box containing: 2 BlendCups (400ml & 700m1), with 1 watertight lid and 1 easy grip handle 1 Mill attachment, with a blade assembly and shake and pour lid



- * Depending on the model / attachments sold separately ** Solely for cold preparations.

CONTROL PANEL

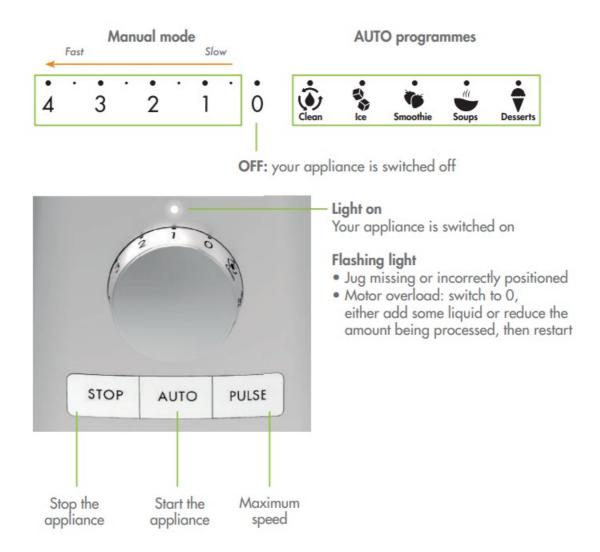

- Switching your appliance on: first select a speed or programme, then press AUTO.
- Manual mode: always start at the slowest speed and gradually increase it.
- Never run continuously for more than 60 seconds.
- PULSE: maximum speed for an even smoother texture / pulsing to give you complete control.

PRE-SET PROGRAMMES

5 pre-set programmes of cycles and speeds to ensure the best result every time. As these programmes are for use with the 1.8l jug, please read the instructions on how to adapt them to the other jugs.

		1.8l jug	BlendCup	Mill attachment
Clean	Cleaning Automatic rinsing programme	✓	✓	✓
Ice	Crushed glass For crushing ice	✓		
Smoothie	Drinks For blending milkshakes, smoothies and c ocktails	1	/	
Soups	Soups For making puréed soups and cream soups (hot or cold)	/		
Desserts	Frozen desserts For making instant desserts (using frozen fruit) and mixing or puréeing dense and compact ingredients	✓		

The lengths of the cycles have been established on the basis of the maximum blender capacities (see p. 26). You can stop the programme before the end of the cycle if you are processing smaller amounts or prefer a coarser texture.

BLENDER CAPACITIES

To make best use of your appliance, please follow the recommendations below:


	1.8l jug	BlendCup	Mill attachment
Dried breadcrumbs	х	х	3 breakfast rusks (30g) Sp 4, 14 s
Fruit compote	500g chilled cooked fruit Sp 1, then Sp 3 + spatula	х	200g chilled cooked fruit Sp 1 then Sp 3
Frozen desserts	300g frozen fruit (2cm cu bes) Desserts + spatula	х	х
Ground spices	x	x	100g Sp 4, 20 s
Coffee beans	х	х	80 g Sp 4, 40 s
Crushed ice	300g (approx. 15-20 ice cubes) Ice	х	х
Milkshakes	1.6l Smoothies	0.4I or 0.7I Smoothies	х
Walnuts, almonds	х	х	100g Sp 3, 20 s
Onion	200g Sp 1 30 s + spatula	х	100g Sp 1, 30 s
Parmesan	х	х	80g (2cm cubes) Sp 4, 50 s
Pancake batter	1I Sp 3, 10 s + Sp 4, 20 s	х	х
Puréed vegetables	200g chilled cooked vegetables Sp 1, 50 s	х	200g chilled cooked vegetables Sp 1, 50 s
Smoothies	1.8I Smoothies	0.4l or 0.7l Smoothies	х
Hot soups	1.6l Soups	\triangle	\triangle
Icing sugar	х	х	200g caster sugar Sp4 + Pulse, 60 s
Raw meat	х	х	130g (2cm cubes) Sp 4 10 s

A blender is not designed to knead dough or mash potatoes.

Whatever the attachment or recipe concerned, the blender must not be used continuously for more than 60 seconds.




1. Assemble the base

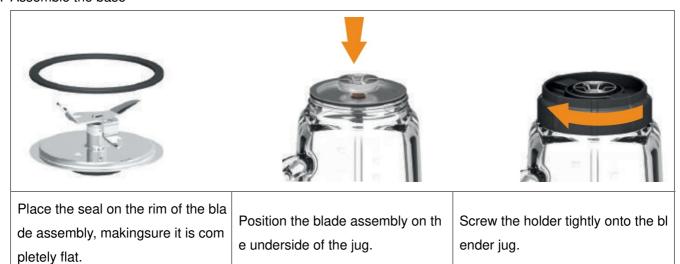

2. Assemble the jug



3. Blend

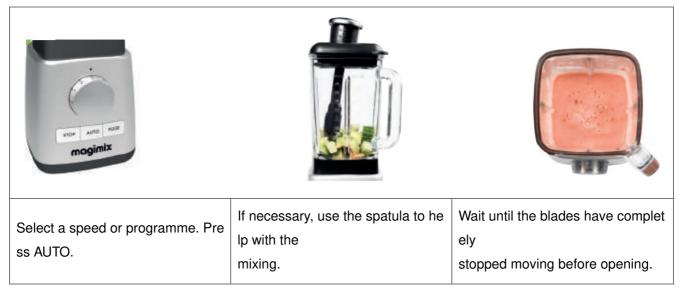


ADVICE

Leaves, herbs such as spinach and fresh herbs Hard or dry ingredients such as cereals, nuts and carrots Liquids such as water, milk and fruit juice



For the best possible result:

- Cut the food into chunks measuring approx. 2cm.
- Coarsely chop the herbs or leaves before adding them.
- Always add the ingredients in the order specified in the recipe.
- When processing thick mixtures, always start at a low speed, otherwise the food will stick to the sides and not come into contact with the blades. If necessary, add a little liquid and use the spatula.
- To add ingredients, either remove the measuring cap or stop the machine and remove the lid.
- Never run your blender if the jug is empty. To process dry ingredients such as nuts and spices, we recommend using the mill attachment, which has a specially designed blade assembly.

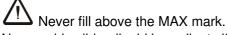

Never add solid or liquid ingredients if they are above 60°C in temperature.

Tips

Hot soups: wait for the ingredients to cool to 60°C (tasting temperature) before blending. Make sure that the
measuring cap is only loosely positioned on the lid, to allow any steam to escape. Either use the SOUP
programme or start at a low speed and gradually increase it. Never use the PULSE button.

- Crushed ice: the ICE function reduces ice cubes to a very fine, snow-like powder. If you want more coarsely crushed ice, put a small number of ice cubes (100/150g max.) in the jug and use the PULSE button.
- To fold ingredients into a mixture without chopping them (e.g. chocolate chips in a cake mixture), add them at the end and run your blender for a further 5-10 seconds at a slow speed (0.5).
- Using frozen fruit: when fruit come out of the freezer it sometimes forms a solid block. Break this block into cubes measuring roughly 2cm before putting in the jug, to avoid damaging your blender.
- To rescue a lumpy sauce, blend it for 15 s at Speed 3.


Automatic overload failsafe

Your appliance is fitted with a safety system that cuts the motor if it is overloaded or has been running for too long. The indicator light then starts to flash.


- Turn to the selector to 0 and unplug your appliance.
- Wait for about 30 minutes before restarting your blender.
- Reduce the amount of ingredients in the jug and/or add some liquid.



1. Assemble the base

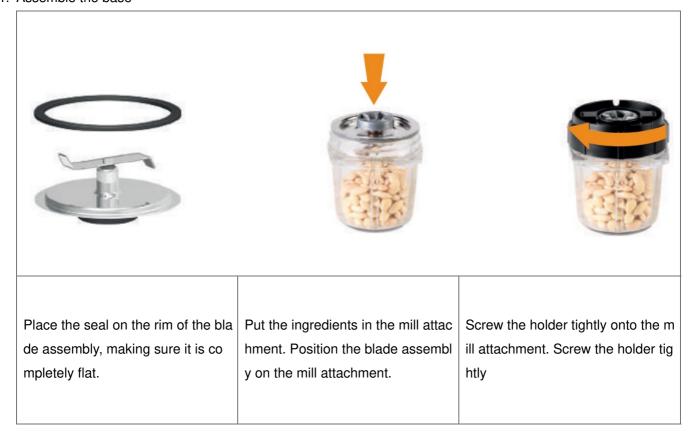

2. Assemble the jug

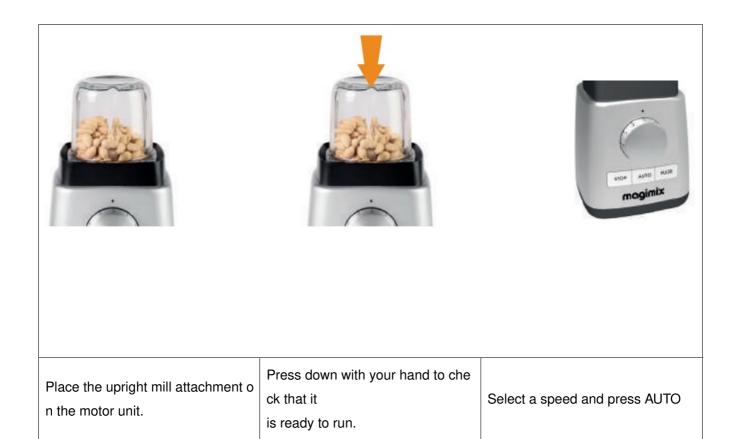

- Instant crumble: crush digestives or butter biscuits and divide between fruit salad / ice cream verrines.
- Icing sugar: pour in 200g caster sugar. Blend for 1 min at Speed 4. For an even finer consistency, blend for a further minute.
- Cake icing: pour 200g icing sugar into the jug with 1 egg white. Blend for 20 s at Speed 1.

Never blend hot liquids. The blade assembly can be extremely hot after use.



1. Add the ingredients



Liquids

water, milk, fruit juice

Frozen foods or sticky ingredients

honey, banana, avocado Hard or dry ingredients cereals, nuts, carrots Leaves, herbs spinach, fresh herbs **Fresh fruit and vegetables** except banana and avocado

For the best possible result:

- Cut the ingredients into small chunks (approx. 2cm)
- Roughly chop leaves or herbs before adding to the jug, especially if they are large or thick
- Always add the ingredients in the right order
- · Always add a little liquid
- Use ice cubes (max. 4 cubes) rather than crushed ice

Never use hot liquids

Never fill above the MAX level

Never put the BlendCups in the microwave

Do not use sparkling liquids in the BlendCups

2 Assemble the base



3 Blend



4 Drink immediately or take away.





Tips and advice

- Run at a low speed for the first few seconds, until all the ingredients are caught up in the blades, then gradually
 increase the speed.
- Never run the blender continuously for more than 1 minute, otherwise the ingredients may heat up and pressure may build up inside the jug.
- If blending is difficult, reduce either the speed or the amount being processed. If the preparation is thick, add some liquid (without going above the MAX mark).
- Dense or sticky (e.g. nut-based) preparations tend to stick to the sides. If this happens, switch the blender off, wait until the blades have come to a complete standstill and shake the jug downwards to send the ingredients back towards the blades.
- The base of the jug is shaped to fit the cupholder in your vehicle.



CITRUS PRESS




CLEANING

Automatic cleaning programme

As soon as you have finished using your appliance, fill the jug up halfway with warm water + few drops of washing-up liquid. Close the lid tightly, select the CLEAN programme and press AUTO.

Thorough cleaning

- Unplug the appliance and remove all the parts, not forgetting the seals.
- All the parts are dishwasher safe (except motor unit): use the short cycle and place all the small parts on the upper rack.
- For the best results, we nevertheless recommend washing the lid and the seals by hand.
- Never leave the blade assembly to soak, and check that the blades move freely before reassembling.
- · Clean the base with a damp cloth.

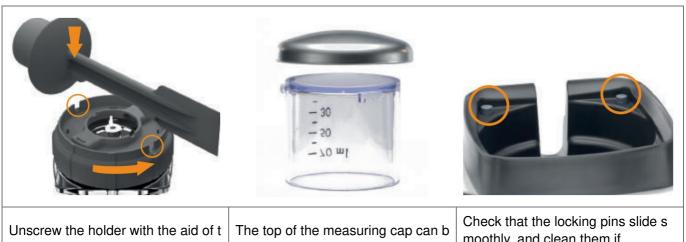

he spatula.

e removed.

moothly, and clean them if necessary.

Electrical and electronic goods at the end of their lifetime



It is against European law to treat electrical and electronic equipment (WEEE) as regular household waste. Your appliance contains many materials that can be recovered or recycled. It should be taken to a WEEE collection point. For more details about collection points, please contact your local council or your household waste recycling centre. You can also take your appliance to an electrical goods store.

Problem	Solution
The lid is stiff	As the lid is designed to be watertight, it can be a little hard to fit, especially if the appliance is new or has not been used for a long time. Pour a little vegetable oil onto some kitchen paper and rub the seal
Flashing light	Jug or attachment incorrectly positioned Motor overload: switch your appliance off and wait for 30 minutes before switching it back on
Your appliance will not start	Check the plug/socket If the white indicator light is on, reposition the jug, then select a speed or programme and press AUTO
The ingredients are not proper ly mixed/blended	Add some liquid Always add the ingredients in the right order Glass jug: use the spatula Cut the ingredients into smaller pieces
Leaking base	Check that the blade assembly seal is correctly positioned Check that the support is screwed on properly to the base of the jug Glass jug: use the spatula
Desserts programme does not work	Frozen fruit: break into cubes measuring roughly 2cm before putting in the ble nder, to avoid damaging your appliance Do not exceed the blender capacity and add a little liquid Use the spatula
The motor smells	There may be a faint smell when you use your appliance for the first time or if t he motor is overloaded. This poses absolutely no risk, and the smell will go aw ay after you have used your appliance a few times. Allow the motor to cool for 30 minutes before restarting it
Stained plastic parts	Some ingredients, such as curry and carrots, may give rise to some staining. P our some vegetable oil onto kitchen paper and rub the parts before adding the ingredients
The mixture tends to stickto th e sides	Add some liquid Use the spatula, start at a low speed and gradually increase it





Documents / Resources



Magimix 11643 Power Blender 5 Connect [pdf] Instruction Manual 11643 Power Blender 5 Connect, 11643, Power Blender 5 Connect, Blender 5 Connect, 5 Connect, Connect

References

• Magimix: Food processors and Small Electrical Appliances

Manuals+,