



MAGNAVOX MC345 Universal Remote Control Owner's Manual

[Home](#) » [MAGNAVOX](#) » MAGNAVOX MC345 Universal Remote Control Owner's Manual 


MAGNAVOX UNIVERSAL REMOTE OWNER'S MANUAL MODEL: MC345


PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Contents

- 1 LOCATION OF CONTROLS:
- 2 POWER SOURCE:
- 3 BATTERY PRECAUTIONS:
- 4 SETTING UP:
- 5 OPERATION:
- 6 TROUBLESHOOTING:
- 7 GERNERAL SPECIFICATTIONS:
- 8 ACCESSORIES:
- 9 LIMITED WARRANTY
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

LOCATION OF CONTROLS:

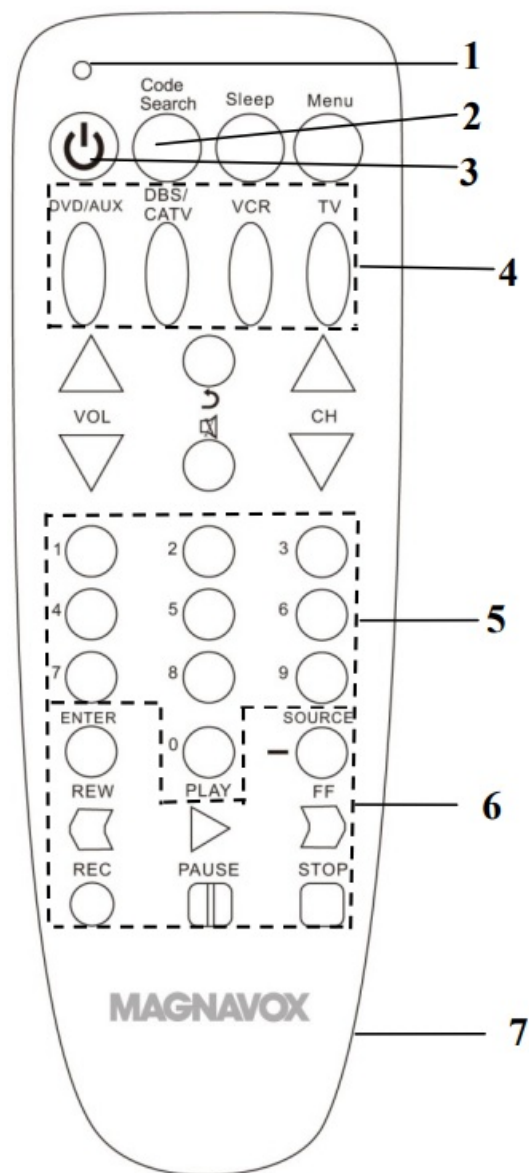


1. Indicator
2. Code Search Button
3.  Power On-Off Button
4. Device Selection Buttons
 - DVD/ AUX: DVD player/Auxiliary player
 - DBS/CATV: Satellite receiver/ Cable box
 - VCR: Video cassette recorder
 - TV: Television
5. Numeric Buttons
6. Function Buttons
7. Battery Compartment (On the rear)

POWER SOURCE:

Install or replacing the batteries when it is drained as follows:

1. Open the battery door on the rear of the unit by pressing the tab and then lifting it as the illustrated below.
2. Install two (2) x AAA size batteries (not included) into the battery compartment follow polarity markings inside.

3. Close the battery door.

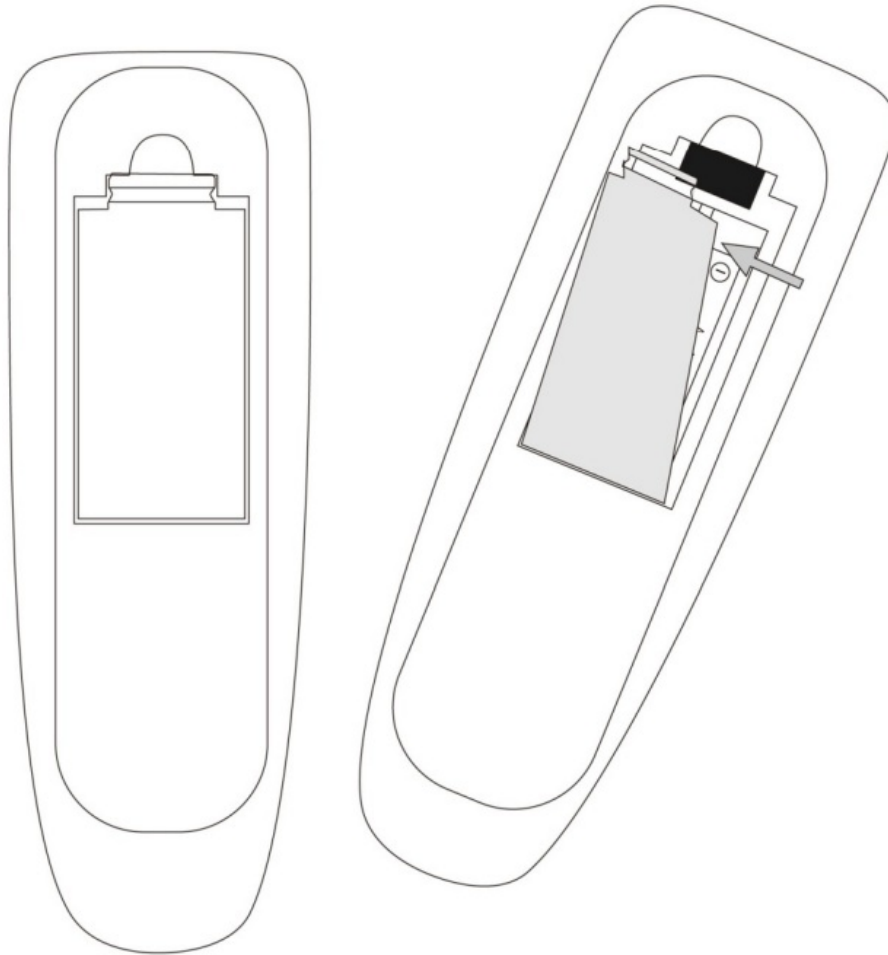

BATTERY PRECAUTIONS:

Follow these Battery Precaution when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device is fully drained or the device is not being used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery it is not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. Do not dispose of battery in fire. Battery may be exploded or leaked.
7. Clean the battery contacts and also those of the device prior to battery installation.

SETTING UP:

You must set up the Universal Remote before operating with your device as follows:

Setup with device code:


1. Power on your desired device (Ex: TV) as usual.

2. Find the four (4) digit device code for it in the attached Code List.
3. Press and hold the Code Search Button approximately 2 seconds until the LED Indicator is illuminated then release the button.
4. Press and release the corresponding device selection button on the Universal Remote (such as TV Button).
5. Enter the four (4) digit code for your device by pressing the numeric buttons. The LED Indicator will turn off. (If the code is invalid, the Indicator will blink 5 times then auto exit. Repeat the setting procedures from 2-5 again to reset a valid code.)
6. Aim the Universal Remote to the remote sensor for your device then operating the device. If the device responds correctly, it means you have entered the right code.


NOTE:

If the codes provided do not work to pair the Universal Remote to your device, try the following methods.

Auto Setting:

1. Power on your desired device (Ex:TV) as usual.
2. Press and hold the Code Search Button approximately 2 seconds until the LED Indicator is illuminated then release the button.
3. Press and release the corresponding device's selection button of your device (such as TV Button).
4. Aim the Universal Remote to the remote sensor of your device, then press the  POWER Button until the LED indicator is twinkling to turn off your device.
If it doesn't work right away, check if right aim or reset from step 2. The A different infrared signal of "Power off" is sent every 4 seconds.
5. Once your device is shut off, press the ENTER Button within 4 seconds to save the setting and exit.
6. Aim the Universal Remote to the remote sensor of your device then operate the device with the Universal Remote. If the device is responding correctly, it means you have right settings. Otherwise, set it again starting from step 2 or try the following setting methods.

Manual setting:

1. Power on your device (EX: TV) as usual.
2. Press and hold the Code Search Button approximately 2 seconds until the LED Indicator is illuminated then release the button.
3. Press and release the corresponding device selection button for your desired device (Ex: TV Button).
4. Aim the Universal Remote to the remote sensor for your device (such like TV) then press and release the  POWER Button repeatedly to send different infrared signal of "Power off".
5. Once your device is shout off, press the ENTER Button within 4 seconds to save the setting and exit.
6. Aim the Universal Remote to the remote sensor for your device (Ex: TV) then operation the device with the Universal Remote. If the device (Ex: TV) is responding correctly, it means you have set the remote to the correct settings.


OPERATION:

1. Repeat the setting procedure until all desired devices (up to 4 devices) have been set.

2. Press the desired device selection button (Ex: TV) on the Universal Remote.
3. Aim the Universal Remote to the remote sensor of your device then operation the device with the Universal Remote.

NOTES:

1. Buttons may be titled differently on your Universal Remote as it on the original manufacturer's controller.
2. Some of the buttons may not respond as your original remote.
3. If the Universal Remote is not responding properly, you may want to reset the settings. Reset the Universal Remote by removing batteries from the Universal Remote for approximately 1 minute then insert the batteries back in to the Universal Remote.
4. Remote Distance:

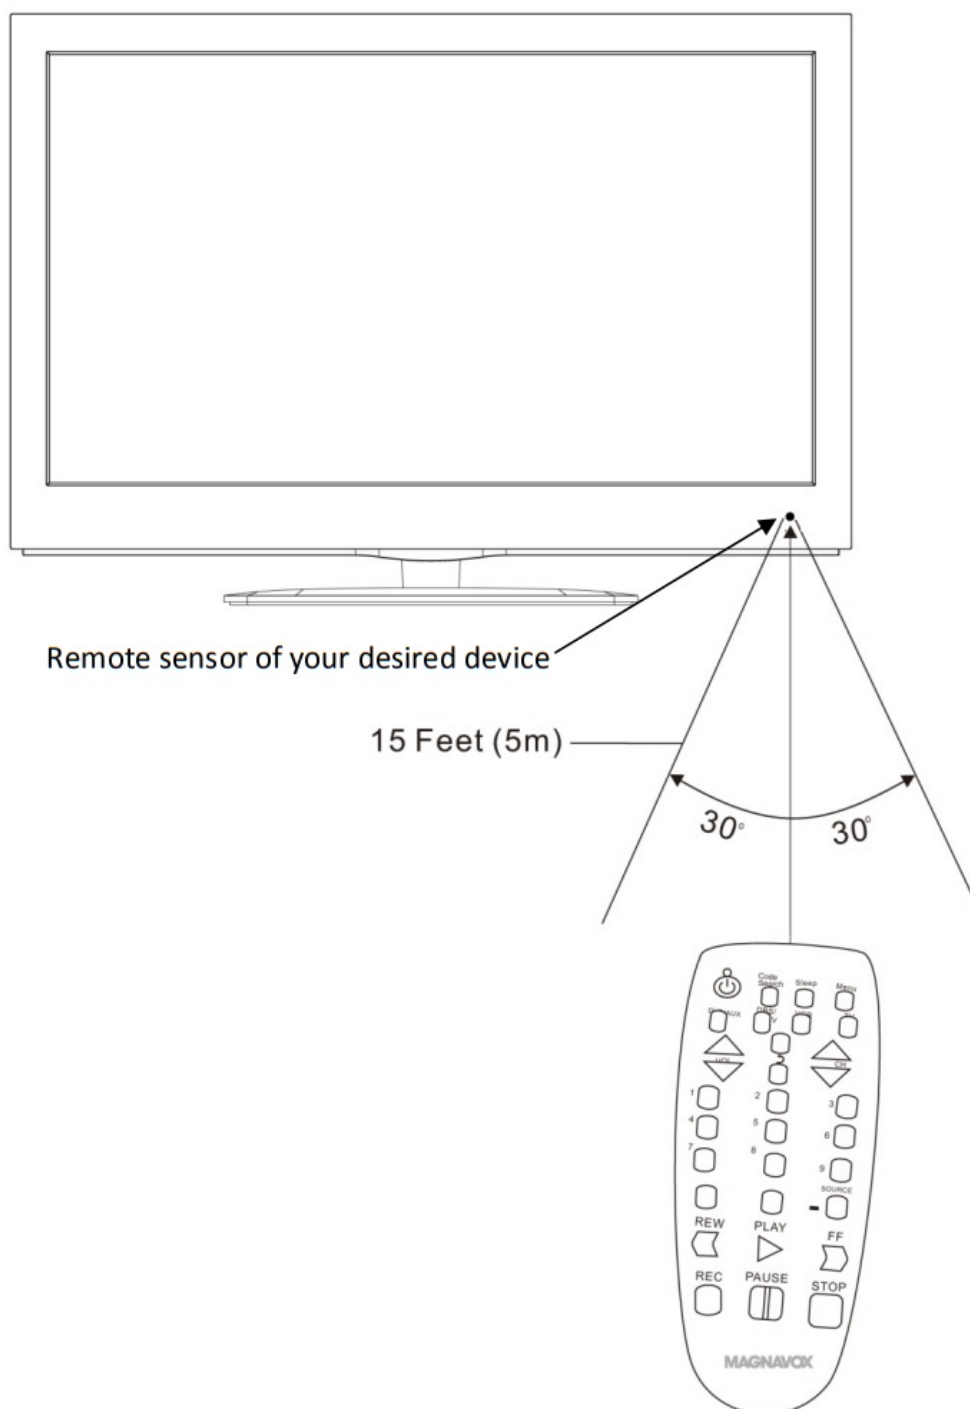

Remarks:

- A. When there is an obstacle between the device and the Universal Remote, the transmitter may not operate.
- B. When the remote sensor of the device is shined directly under sunlight, incandescent lamp, fluorescent lamp or any other strong light, the operation of Remote Control may be unstable.

TROUBLESHOOTING:

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	Batteries incorrect installation	Re-install the batteries as the polarity marking inside the battery compartment
	Batteries drained	Replace by new batteries
Not functioning	The Universal Remote had not set or incorrect set	Reset the Universal Remote as instructed earlier

GERNERAL SPECIFICATTIONS:

Power Source: 2 x AAA size batteries (Not included)

Effective Range Approximate 15 feet (5M) in open area

ACCESSORIES:

1 x Remote Control

1 x Owner's Manual

1 x Remote Code List

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.

1160 NW 163 Drive Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d)

Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage.

Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product.

MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

MAGNAVOX


To Obtain Service on your Product

email: service@craigelectronics.com

Printed in China

MC345_WC_E0OCS1_BOUS

Documents / Resources

	<p>MAGNAVOX MC345 Universal Remote Control [pdf] Owner's Manual MC345 Universal Remote Control, MC345, Universal Remote Control, Remote Control</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.