



magnum L7 Display Instruction Manual

[Home](#) » [magnum](#) » magnum L7 Display Instruction Manual 



L7 Display



www.magnumbikes.com

L7 Display

 
Instruction Manual

This manual will include installation information, setting information, and instructions for normal use of the L7 display used on some of Magnum's electric bike models.

Appearance & Measurement

Extended time in temperatures below -4 F or above 140 F can cause damage and deterioration of the L7 display.

Dimension figure (unit: mm)

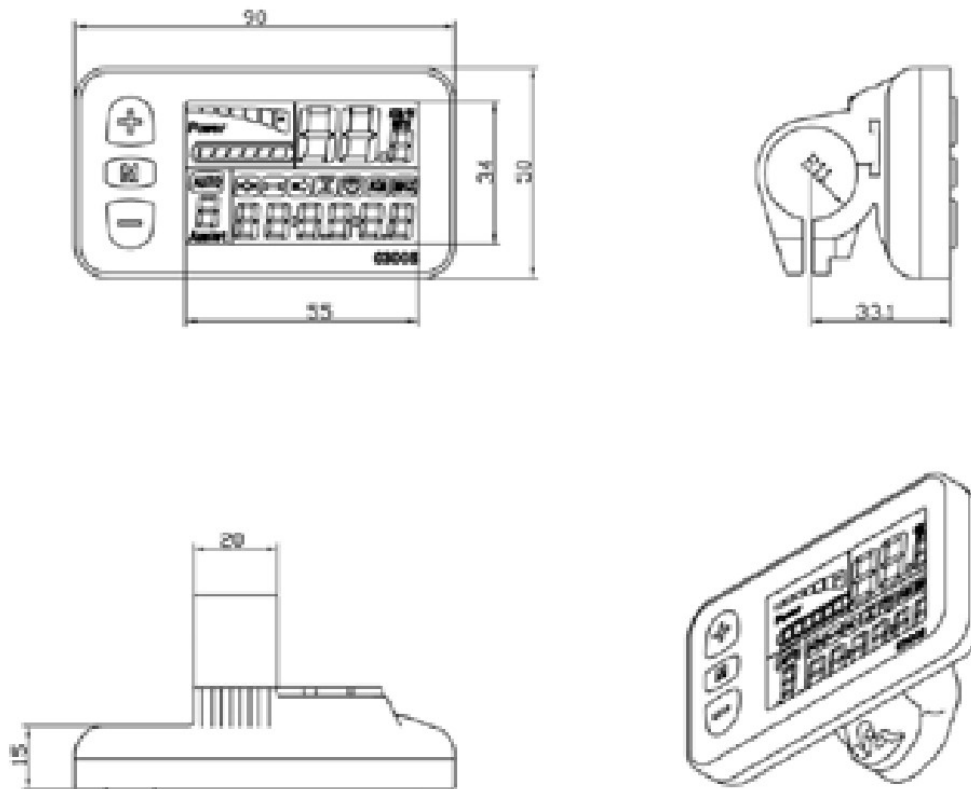


Contents

- [1 Function Display](#)
- [2 L7 Views](#)
- [3 Normal Operation](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Function Display

 Indicated functions are as below

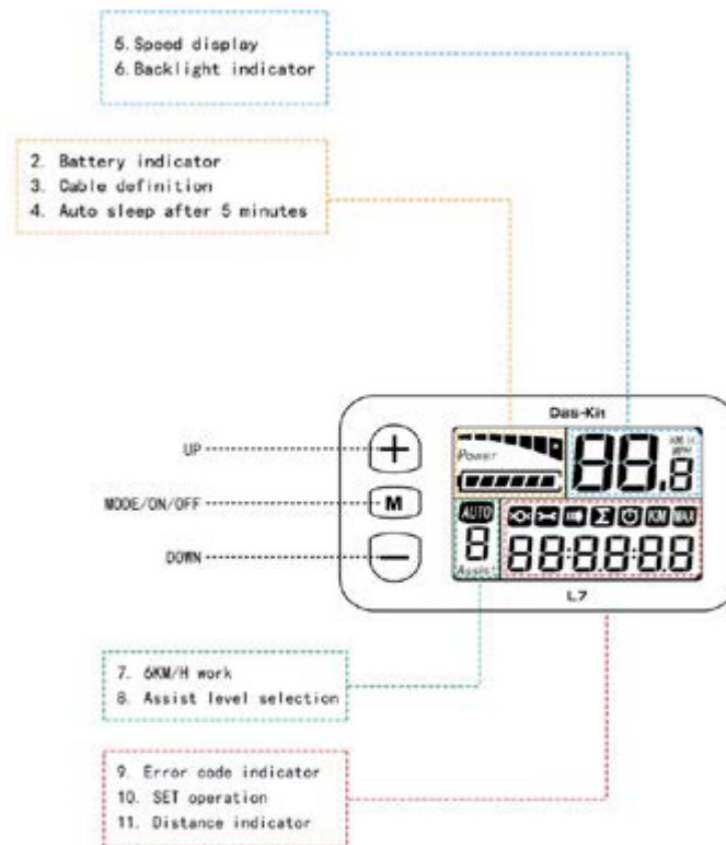

L7 Views

Full View Area



Normal View Area



Normal Operation

Section 1: ON/OFF

Press M to activate the display. To turn the display off, press M for 2 seconds, and the screen will go dark. If the display is powered off it will not consume any of the battery life. The panel will automatically power off when the speed is 0 km/h for 5 minutes.

Section 2: Current Indicator

The power indicator shown below displays how much energy is being consumed by the system.



Section 3: Speed Display

Speed indicator displays the riding speed in km or mph.




Section 4: Backlight Indicator

With the power on, press “+” for 1 second to turn on the backlight. Press it for 1 second again to turn off the backlight.


Section 5: Walk Mode

Hold “-” for 2 seconds to enter into the walk mode. When the icon is lit, the e-bike is traveling at 4.5mph. The walk mode indicator is shown below.

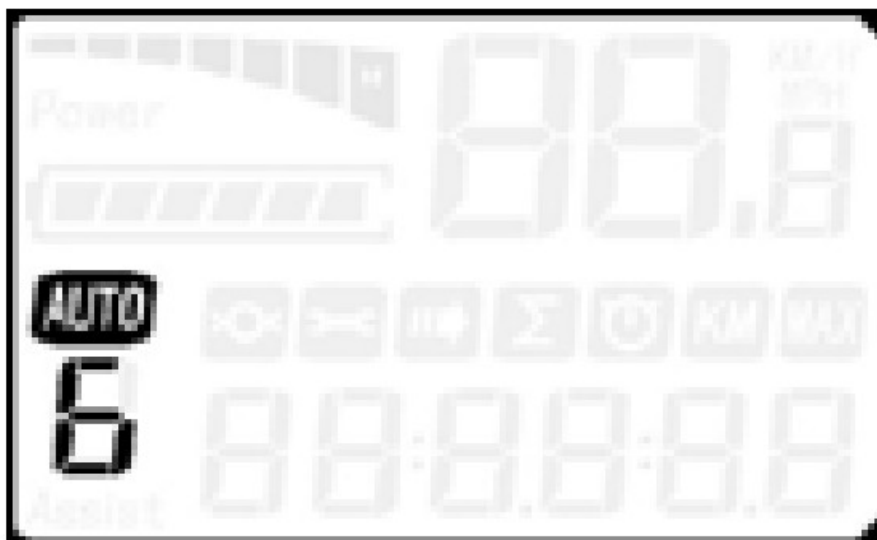

Section 6: Pedal Assist Level Selection

Click UP or DOWN to change the level of pedal-assist you wish to receive. The levels range from 0-6, with 0 being the lowest and 6 being the highest. When the bike is powered on, the bike will automatically enter level one. Please be aware that the levels loop: when you are at level 6 and press UP you will return to the lowest level and when you are on the lowest level and press DOWN you will enter the highest level.

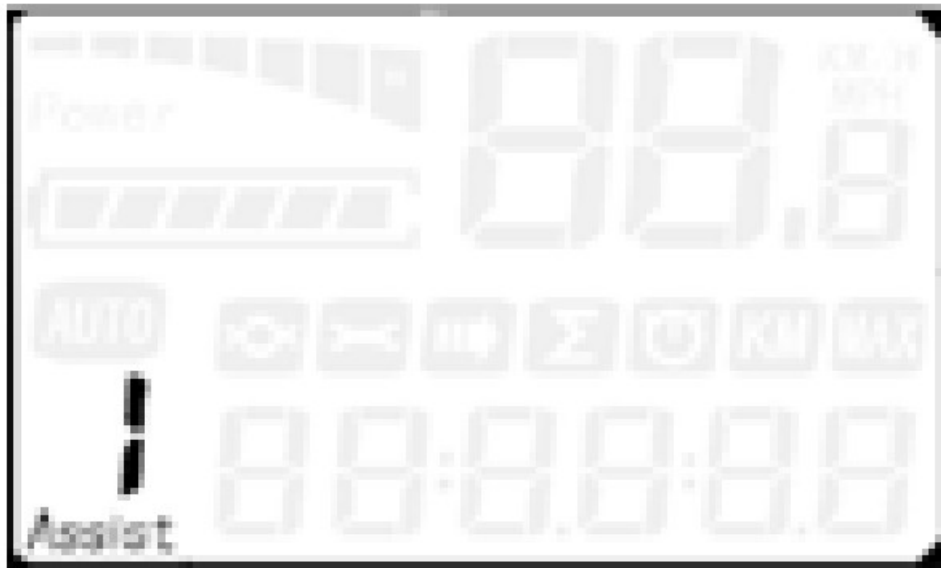


Section 7: Distance Indicator

When the display is on, press M to switch the display information. The four options are shown below.




ODO

The ODO records the driving mileage from use.

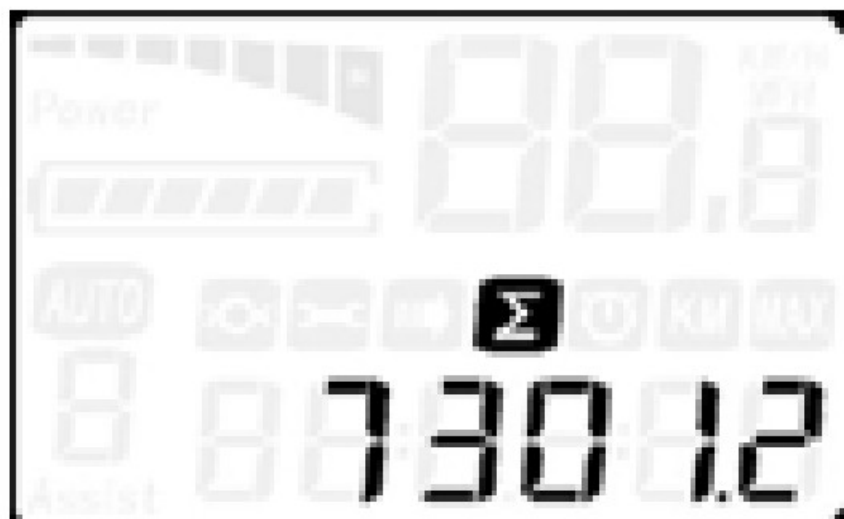

Trip Distance

Trip distance records the driving mileage for individual trips. Hold the “+” for 5 seconds and the trip distance will be reset and skipped to the trip distance interface as shownn below.

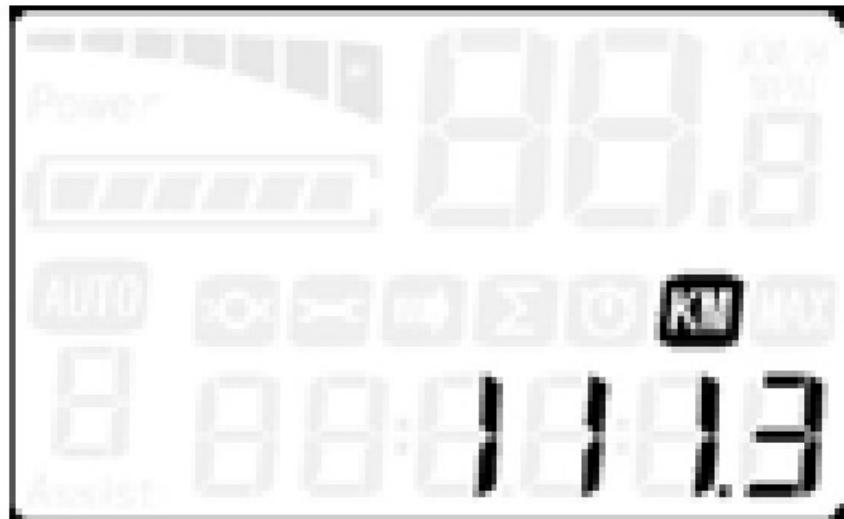


Trip Time Indicator

The trip time records riding time as shown below.



Max Speed

The max speed records the riding speed as shown below.

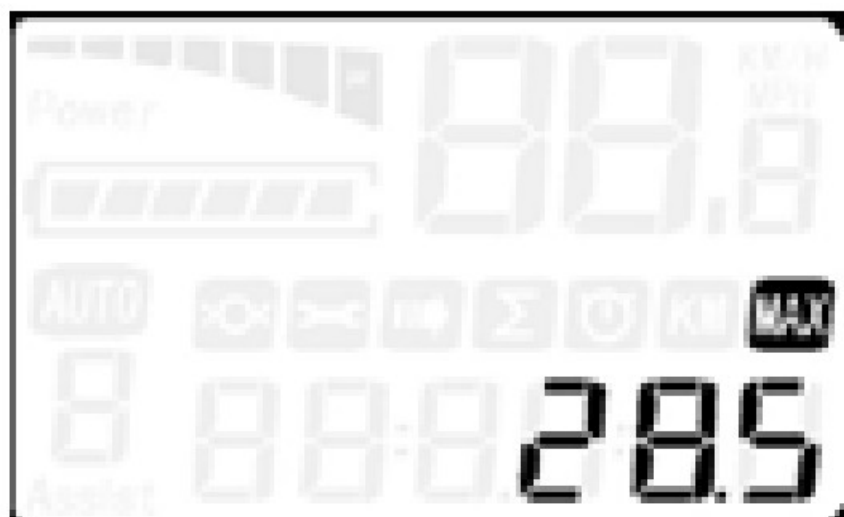

Battery Indicator

When the battery capacity is high the six battery segments are all lit. When the battery is low the battery frame will

flash. Flashing indicates that the battery is severely low and needs to be recharged immediately.



Stay Connected

	@magnumbikes
	@magnumbikes
	www.magnumbikes.com
	info@magnumbikes.com
	323.375.2666

	info@magnumbikes.com
	323.375.2666
	www.magnumbikes.com

Documents / Resources

	magnum L7 Display [pdf] Instruction Manual magnum, L7, Display, Das Kit
--	--